


# SHIMANO®

## CURADO®

### CU-200B5

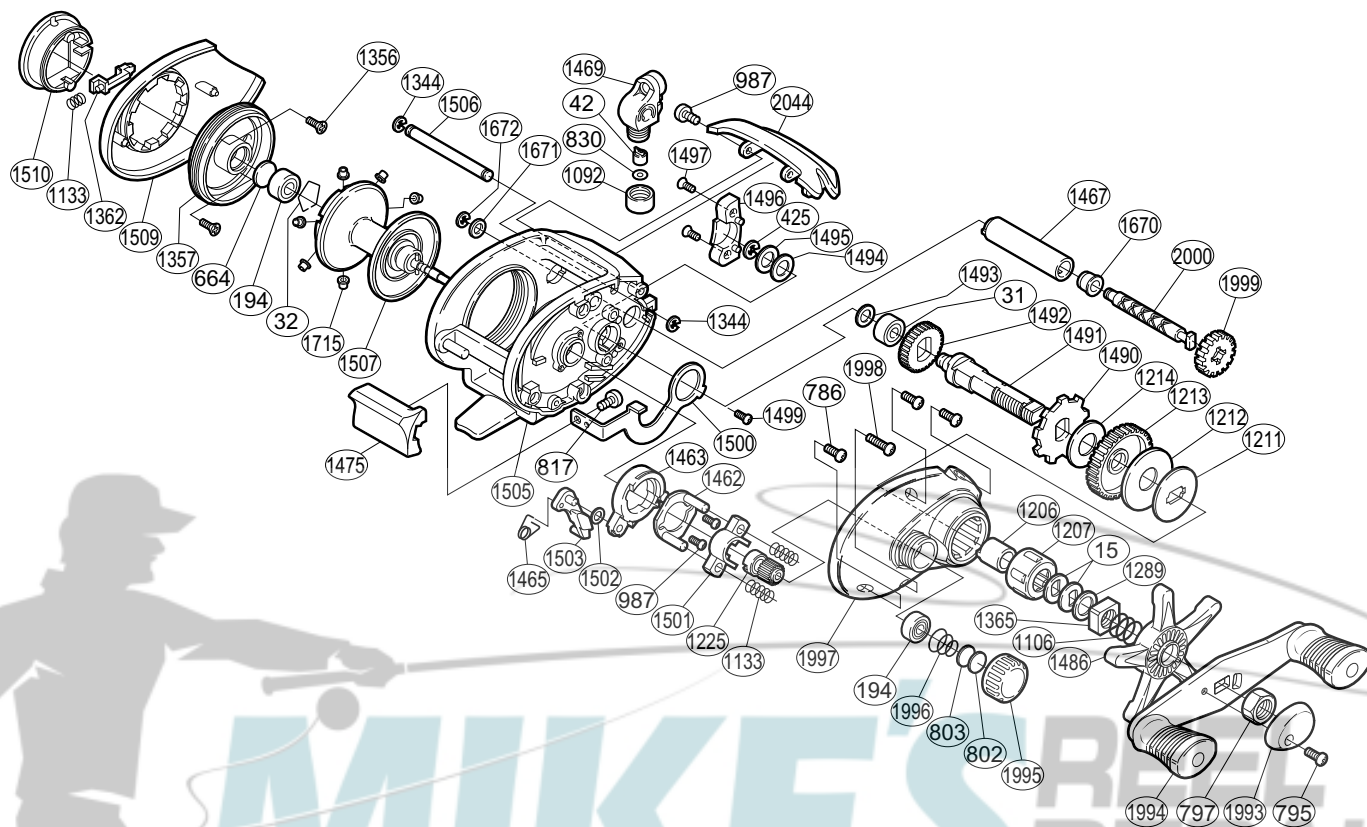

| Part No. | Description                | Part No. | Description               | Part No. | Description               |
|----------|----------------------------|----------|---------------------------|----------|---------------------------|
| BNT0015  | Drag Spring Washer         | BNT1214  | Drag Washer (A)           | BNT1499  | Clutch Plate Screw        |
| BNT0031  | Ball Bearing               | BNT1225  | Pinion Gear               | BNT1500  | Clutch Plate              |
| BNT0032  | Bearing Retainer           | BNT1289  | Star Drag Spacer          | BNT1501  | Yoke                      |
| BNT0042  | Line Guide Pawl            | BNT1344  | "C" Lock                  | BNT1502  | Spacer (optional)         |
| BNT0194  | Ball Bearing               | BNT1356  | Brake Case Retainer Screw | BNT1503  | Clutch Pawl               |
| BNT0425  | "E" Lock                   | BNT1357  | Brake Case                | BNT1505  | One-Piece Frame           |
| BNT0664  | Spacer (B)                 | BNT1362  | Turnkey Pawl              | BNT1506  | Line Guard                |
| BNT0786  | Side Plate Screw (short)   | BNT1365  | Star Drag Nut             | BNT1507  | Spool Assembly            |
| BNT0795  | Handle Nut Plate Screw     | BNT1462  | Clutch Cam Retainer       | BNT1509  | Left Side Plate           |
| BNT0797  | Handle Nut                 | BNT1463  | Clutch Cam                | BNT1510  | Turnkey Dial              |
| BNT0802  | Spool Tension Spacer (B)   | BNT1465  | Clutch Pawl Spring        | BNT1670  | Worm Bushing              |
| BNT0803  | Spool Tension Spacer (A)   | BNT1467  | Level Wind Guard          | BNT1671  | Worm Shaft Washer (B)     |
| BNT0817  | Clutch Bar Screw           | BNT1469  | Line Guide                | BNT1672  | "E" Lock                  |
| BNT0830  | Spacer (optional)          | BNT1475  | Quick-Fire II Clutch Bar  | BNT1715  | Brake Collar (red)        |
| BNT0987  | Multi Purpose Screw        | BNT1486  | Star Drag                 | BNT1993  | Handle Nut Plate Assembly |
| BNT1092  | Pawl Cap                   | BNT1490  | Anti-Reverse Ratchet      | BNT1994  | Handle Assembly           |
| BNT1106  | Star Drag Spring           | BNT1491  | Drive Shaft               | BNT1995  | Cast Control Cap          |
| BNT1133  | Yoke / Turnkey Pawl Spring | BNT1492  | Idle Gear (A)             | BNT1996  | Spool Tension Spring      |
| BNT1206  | Roller Clutch Inner Tube   | BNT1493  | Drive Gear Washer         | BNT1997  | Right Side Plate          |
| BNT1207  | Roller Clutch Bearing      | BNT1494  | Drive Shaft Washer (B)    | BNT1998  | Side Plate Screw (long)   |
| BNT1211  | Key Washer                 | BNT1495  | Drive Shaft Washer (A)    | BNT1999  | Idle Gear (C)             |
| BNT1212  | Drag Washer (C)            | BNT1496  | Drive Shaft Cover         | BNT2000  | Worm Shaft                |
| BNT1213  | Drive Gear                 | BNT1497  | Drive Shaft Cover Screw   | BNT2044  | Thumb Rest                |

(090730)