


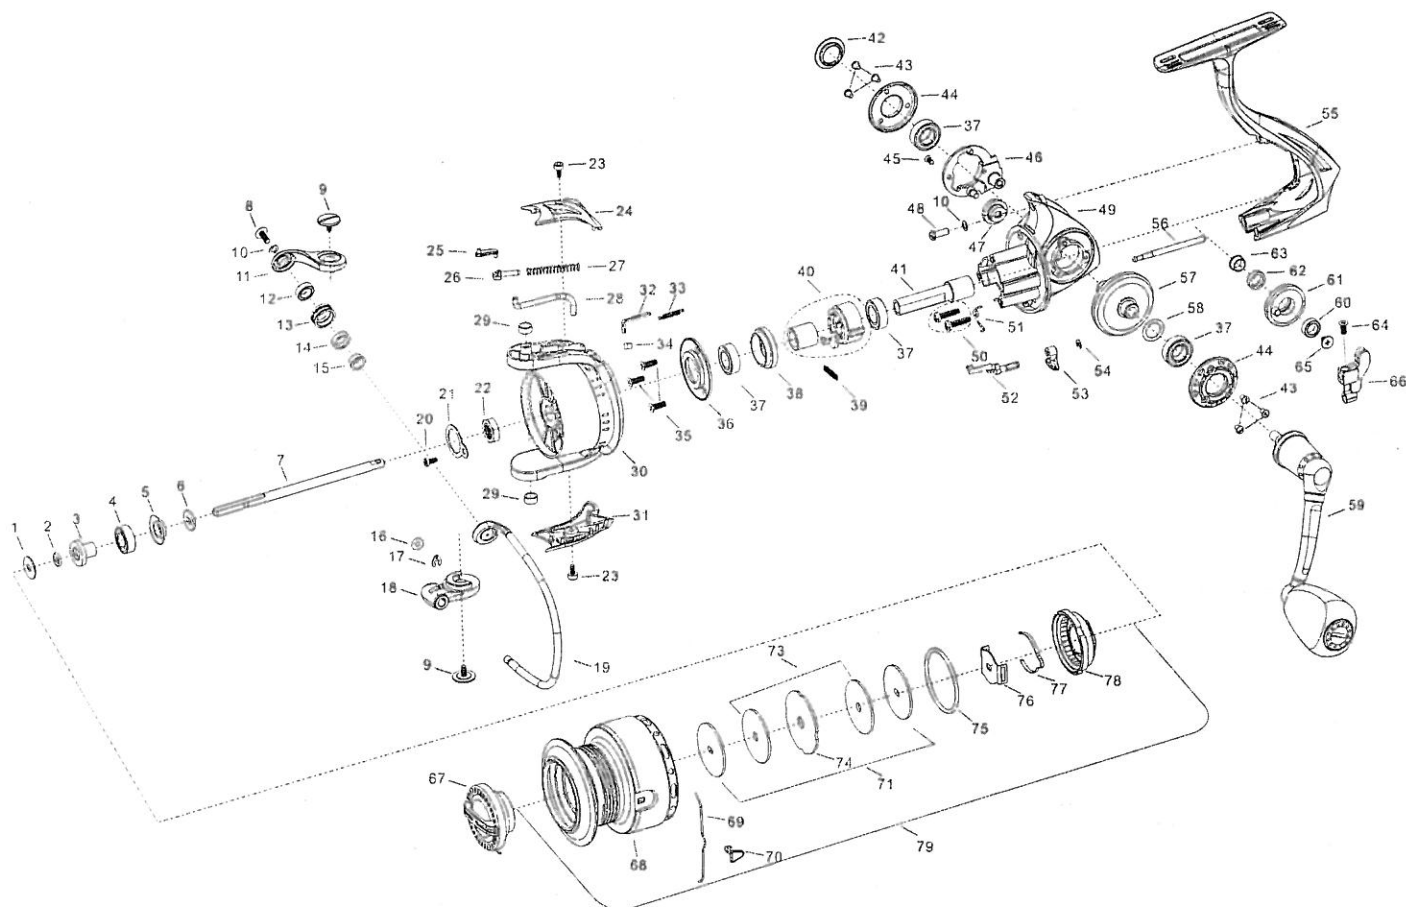

KEY NO.	DESCRIPTION	PART NO.	KEY NO.	DESCRIPTION	PART NO.
		INSHORE 30			INSHORE 30
1	SPACE WASHER	1195751	41	PINION	1195567
2	O-RING	1195755	42	HANDLE SCREW COVER	1279337
3	BEARING SLEEVE	1195758	43	SCREW (6 REQ)	1221489
4	BUSHING	1279159	44	BEARING RETAINER (2 REQ)	1279288
5	SEAL	1195761	45	SCREW	1195720
6	SPOOL SHAFT WASHER	1195763	46	OSCILLATION MOUNT	1279291
7	SPOOL SHAFT	1221451	47	IDLER GEAR	1195767
8	SCREW	1195642	48	SCREW	1221496
9	SCREW (2 REQ)	1221453	49	GEAR BOX	1279294
10	WASHER (2 REQ)	1252583	50	SCREW (2 REQ)	1221499
11	BAIL ARM	1279322	51	SWITCH SPRING	1221500
12	BALL BEARING	1195641	52	SWITCH LEVER	1221501
13	LINE ROLLER	1195620	53	IAR SWITCH	1279346
14	POM BUSHING	1279234	54	CLIP	1221504
15	BRASS BUSHING	1279238	55	STEM	1279299
16	O-RING	1195591	56	GUIDE BAR	1221428
17	CLIP	1195592	57	MAIN GEAR	1221510
18	BAIL HOLDER	1279326	58	SHIM	1195560
19	BAIL WIRE	1221459	59	HANDLE ASSEMBLY	1279304
20	SCREW	1221460	60	BALL BEARING	1195641
21	NUT LOCKING PLATE	1195770	61	OSCILLATION GEAR	1195801
22	ROTOR NUT	1195643	62	POM BUSHING	1279234
23	SCREW (2 REQ)	1221462	63	BRASS BUSHING	1279238
24	BAIL ARM COVER	1279278	64	SCREW	1195659
25	PIVOT LEVER	1195617	65	SCREW	1195812
26	BAIL SPRING BUSHING	1195619	66	OSCILLATION SLIDER	1195651
27	BAIL SPRING	1195613	67	DRAG KNOB	1279355
28	BAIL TRIP BAR	1221466	68	SPOOL	1279309
29	BUSHING (2 REQ)	1221467	69	LINE CLIP SPRING	1195693
30	ROTOR	1279283	70	LINE CLIP	1279359
31	BAIL HOLDER COVER	1279286	71	KEYED WASHER (2 REQ)	1221545
32	ROTOR BRAKE LINKAGE	1221474	73	DRAG WASHER 2 (2 REQ)	1221548
33	ROTOR BRAKE SPRING	1221475	74	SPOOL WASHER	1221550
34	ROTOR BRAKE PAD	1221476	75	O-RING	1221553
35	SCREW (3 REQ)	1221477	76	SPOOL CLICK RETAINER	1221554
36	BEARING HOLDER COVER	1221479	77	SPOOL CLICK	1221555
37	BALL BEARING (4 REQ)	1181780	78	SPOOL BOTTOM	1221557
38	BALL BEARING	1195573	79	SPOOL ASSEMBLY	1279314
39	CLUTCH SPRING	1221480	80	SPARE SPOOL (Not Shown)	1279319
40	CLUTCH ASSEMBLY	1195773			