



KEY NO.	DESCRIPTION	PART NO.	KEY NO.	DESCRIPTION	PART NO.
		S 40			S 40
1	SPACE WASHER	1195751	42	HANDLE SCREW COVER	1279193
2	O-RING	1195755	43	SCREW (6 REQ)	1279198
3	BEARING SLEEVE	1195758	44	BEARING RETAINER(2 REQ)	1279338
4	BUSHING	1279159	45	SCREW	1195720
5	SEAL	1195761	46	OSCILLATION MOUNT	1279341
6	SPOOL SHAFT WASHER	1195763	47	IDLER GEAR	1195767
7	SPOOL SHAFT	1260209	48	SCREW	1221496
8	SCREW	1195642	49	GEAR BOX	1279344
9	SCREW (2 REQ)	1221453	50	SCREW (2 REQ)	1279218
10	WASHER(2 REQ)	1252583	51	SWITCH SPRING	1221500
11	BAIL ARM	1279321	52	SWITCH LEVER	1221501
12	BALL BEARING	1195641	53	IAR SWITCH	1279223
13	LINE ROLLER	1279323	54	CLIP	1221504
14	POM BUSHING	1279234	55	STEM	1279348
15	BRASS BUSHING	1279238	56	GUIDE BAR (2 REQ)	1260233
16	O-RING	1195591	57	MAIN GEAR	1221510
17	CLIP	1195592	58	SHIM	1195560
18	BAIL HOLDER	1279325	59	HANDLE ASSEMBLY	1279351
19	BAIL WIRE	1279327	60	SPACER	1195778
20	SCREW	1221460	61	OSCILLATION GEAR	1195805
21	ROTOR LOCKING PLATE	1195770	62	POM BUSHING (2 REQ)	1279234
22	ROTOR NUT	1195643	63	BRASS BUSHING	1279239
23	SCREW (2 REQ)	1221462	64	SCREW	1195659
24	BAIL ARM COVER	1279329	65	SCREW	1195812
25	PIVOT LEVER	1195617	66	OSCILLATION SLIDER	1260236
26	BAIL SPRING BUSHING	1195619	67	DRAG KNOB	1279354
27	BAIL SPRING	1195613	68	SPOOL	1279357
28	BAIL TRIP BAR	1260214	69	LINE CLIP SPRING	1195693
29	BUSHING (2 REQ)	1221467	70	LINE CLIP	1279256
30	ROTOR	1279332	71	KEY WASHER (3 REQ)	1195739
31	BAIL HOLDER COVER	1279335	72	DRAG WASHER 1(3 REQ)	1279258
32	ROTOR BRAKE LINKAGE	1260221	73	DRAG WASHER 2	1195729
33	ROTOR BRAKE SPRING	1221475	74	SPOOL WASHER 1	1260241
34	ROTOR BRAKE PAD	1221476	75	SPOOL WASHER 2	1260245
35	SCREW (3 REQ)	1221477	76	O-RING	1260243
36	BEARING HOLDER COVER	1260222	77	SPOOL CLICK RETAINER	1221554
37	BALL BEARING (4 REQ)	1181780	78	SPOOL CLICK	1221555
38	BEARING HOLDER	1252605	79	SPOOL BOTTOM	1260244
39	CLUTCH SPRING	1221480	80	CLIP	1251981
40	CLUTCH ASSEMBLY	1195773	81	SPOOL ASSEMBLY	1279362
41	PINION	1260219	82	SPARE SPOOL (Not Shown)	1279365