


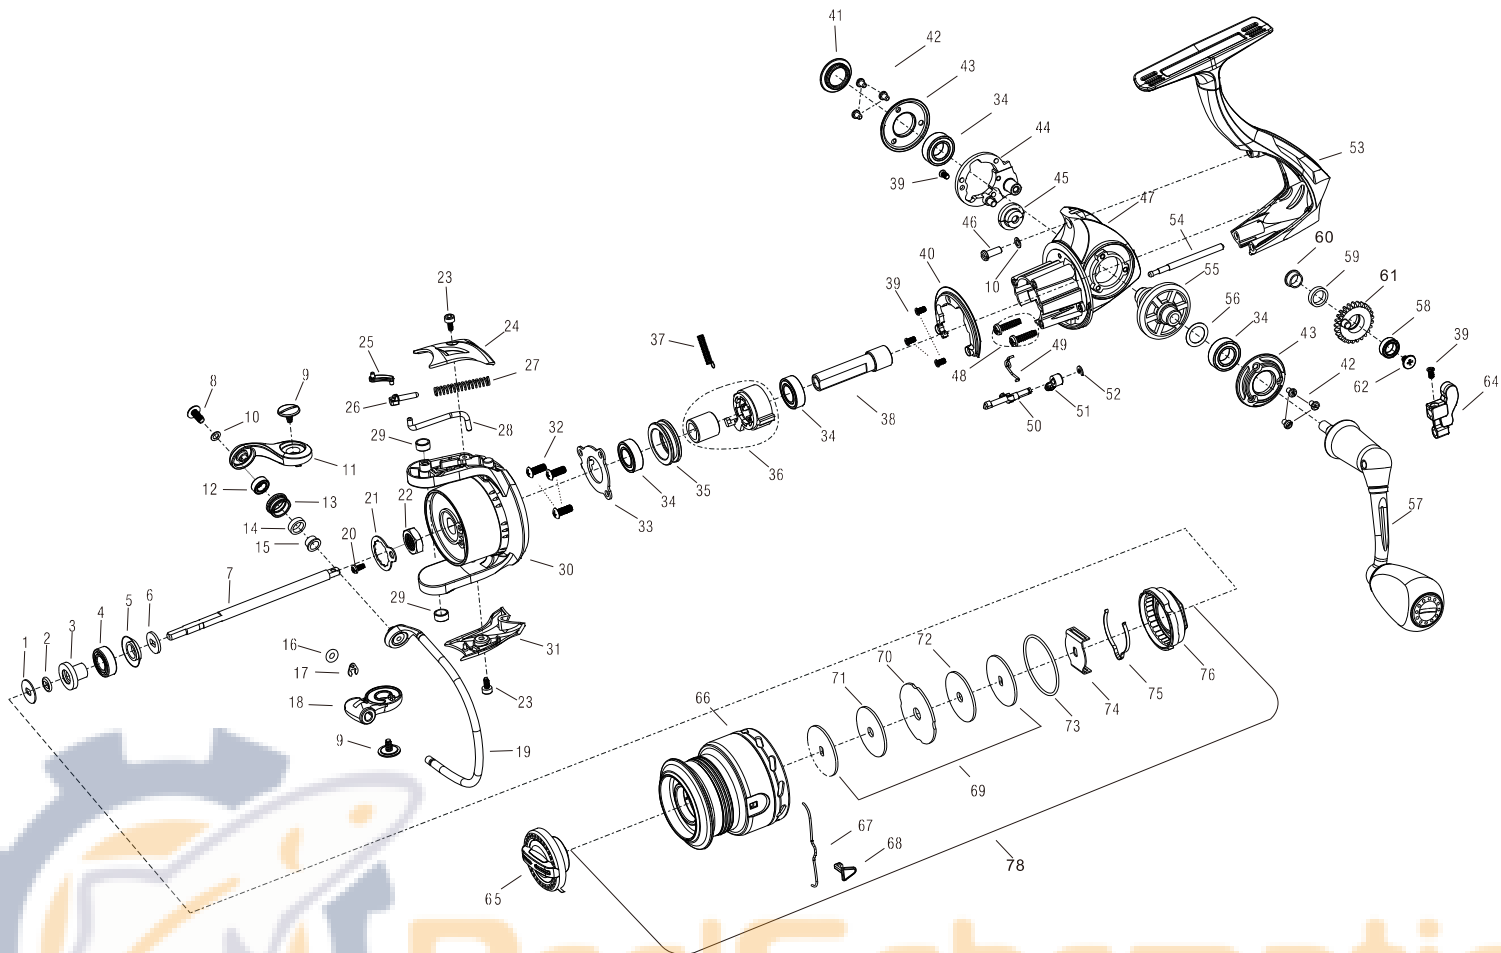

KEY NO. DESCRIPTION

1	SPACE WASHER
2	O-RING
3	BEARING SLEEVE
4	BALL BEARING
5	SEAL
6	SPOOL SHAFT WASHER
7	SPOOL SHAFT
8	SCREW
9	SCREW (2 REQ)
10	WASHER(2 REQ)
11	BAIL ARM
12	BALL BEARING
13	LINE ROLLER
14	POM BUSHING
15	BRASS BUSHING
16	O-RING
17	CLIP
18	BAIL HOLDER
19	BAIL WIRE
20	SCREW
21	ROTOR LOCKING PLATE
22	ROTOR NUT
23	SCREW (2 REQ)
24	BAIL ARM COVER
25	PIVOT LEVER
26	BAIL SPRING BUSHING
27	BAIL SPRING
28	BAIL TRIP BAR
29	BUSHING (2 REQ)
30	ROTOR
31	BAIL HOLDER COVER
32	SCREW (3 REQ)
33	BEARING HOLDER COVER
34	BALL BEARING (4REQ)
35	BEARING HOLDER
36	CLUTCH ASSEMBLY
37	CLUTCH SPRING
38	PINION
39	SCREW (5REQ)
40	ROTOR BRAKE

PART NO.

SX 10

1195751
1195755
1195758
1195757
1195761
1195763
1252579
1195642
1252582
1252583
1279160
1252587
1279162
1279163
1279165
1195591
1195592
1279167
1252593
1252594
1195770
1195643
1221462
1279178
1195617
1195619
1252598
1252599
1221467
1279181
1279184
1195572
1252604
1181780
1252605
1195773
1252606
1252607
1195720
1252610

KEY NO. DESCRIPTION

41	HANDLE SCREW COVER
42	SCREW (6 REQ)
43	BEARING RETAINER (2 REQ)
44	OSCILLATION MOUNT
45	IDLER GEAR
46	SCREW
47	GEAR BOX
48	SCREW (2 REQ)
49	SWITCH SPRING
50	SWITCH LEVER
51	IAR SWITCH
52	CLIP
53	STEM
54	GUIDE BAR
55	MAIN GEAR
56	SHIM
57	HANDLE ASSEMBLY
58	BALL BEARING
59	POM BUSHING
60	BRASS BUSHING
61	OSCILLATION GEAR
62	SCREW
64	OSCILLATION SLIDER
65	DRAG KNOB
66	SPOOL
66	SPOOL (DEEP)
67	LINE CLIP SPRING
68	LINE CLIP
69	KEY WASHER (2 REQ)
70	SPOOL WASHER
71	DRAG WASHER 1
72	DRAG WASHER 2
73	O-RING
74	SPOOL CLICK RETAINER
75	SPOOL CLICK
76	SPOOL BOTTOM
78	SPOOL ASSEMBLY
78	SPOOL ASSEMBLY(DEEP)
79	SPARE SPOOL ASSEMBLY (If Provided)

PART NO.

SX 10

1279189
1279194
1279200
1279207
1195767
1221496
1279209
1279218
1221500
1221501
1279221
1221504
1279225
1221428
1252627
1195560
1279230
1195641
1279234
1279238
1252634
1195812
1252635
1279244
1279246
1286350
1252661
1279254
1221544
1221549
1279258
1195729
1195716
1221554
1221555
1221556
1279266
1286354
1279270