


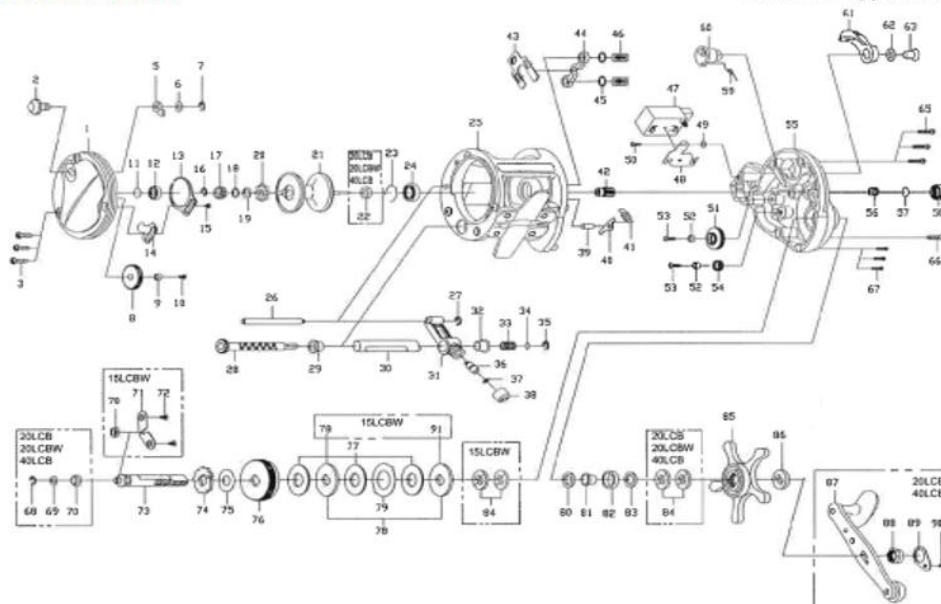

Key No	Parts No.	Description
1	F09-3712	Left side plate
2	B21-6601	Click button
3	G90-4201	Left side plate screw
5	030-6611	Click pawl
6	373-1600	Washer (A)
7	320-1402	Click pawl retainer
8	B21-5801	Idle gear
9	B65-6201	Idle gear collar
10	E10-7401	Idle gear screw
11	375-7405	Washer (B)
12	637-5601	Bushing (A)
13	160-7922	Click spring
14	B21-5501	Click spring retainer
15	B83-4402	Click spring screw
16	320-8002	Spool gear retainer
17	403-2901	Spool gear
18	E15-4801	Washer (C)
19	E36-1402	Click spring washer
20	B21-6701	Click gear
21	G90-4701	Spool
22	G38-7401	Bushing (B)
23	B27-0501	Bearing retainer
24	E18-2801	Ball bearing
25	E67-2002	Frame assembly
26	F09-3001	Stabilizer bar
27	320-5901	Stabilizer bar retainer
28	F09-2601	Worm shaft assembly
29	E14-4801	Worm shaft holder (A)
30	F09-2801	Level wind guard
31	E36-2401	Line guide
32	E14-4801	Worm shaft holder (B)
33	F09-2901	Counter gear (A)
34	B41-1702	Worm shaft holder washer
35	320-5901	Worm shaft retainer
36	122-0601	Line guide pawl
37	F95-0200	Line guide washer
38	E35-4101	Pawl cap
39	E25-2301	Anti-reverse pawl pin
40	B62-6801	Anti-reverse pawl
41	E23-4201	Anti-reverse pawl spring
42	F13-5401	Pinion gear
43	F09-3101	Yoke plate
44	E25-9101	Yoke
45	E03-7706	Yoke washer
46	E33-5301	Yoke spring

Key No	Parts No.	Description
47	F09-2102	Counter assembly
48	E24-1801	Counter plate
49	373-1300	Counter washer
50	E31-6701	Counter screw
51	E24-1901	Counter gear (B)
52	B65-6201	Counter gear collar
53	E10-7401	Counter gear screw
54	F09-2201	Counter gear (C)
55	E67-1903	Right side plate
56	B93-9601	Spool tension spring
57	375-7405	Washer (D)
58	B93-9701	Cast control cap
59	E32-2301	Clutch spring
60	F09-2001	Clutch cam
61	E42-6805	Clutch lever
62	160-8001	Clutch lever lock washer
63	E00-7601	Clutch lever screw
65	G90-4201	Right side plate screw (A)
66	B00-9701	Right side plate screw (B)
67	E11-9602	Right side plate screw (C)
68	320-7601	Drive shaft retainer
69	375-5801	Drive shaft washer (A)
70	E25-2501	Drive shaft bushing
71	---	Drive shaft plate
72	---	Drive shaft plate screw
73	E25-2601	Drive shaft
74	E25-2801	Clutch wheel
75	374-6604	Drive shaft washer (B)
76	F09-3401	Drive gear
77	E32-6501	Drag washer
78	E20-0201	Key washer (A)
79	376-3101	Eared washer
80	373-7806	Washer (E)
81	E32-6301	Spacing sleeve (A)
82	E32-6401	Bushing (C)
83	373-7806	Washer (F)
84	E25-3501	Drag spring washer
85	E25-3601	Star drag
86	E25-3901	Spacing sleeve (B)
87	G90-5301	Handle assembly
88	B86-2102	Handle nut
89	E44-0001	Handle nut plate
90	351-1803	Handle nut plate screw
91	-	Key washer (B)