


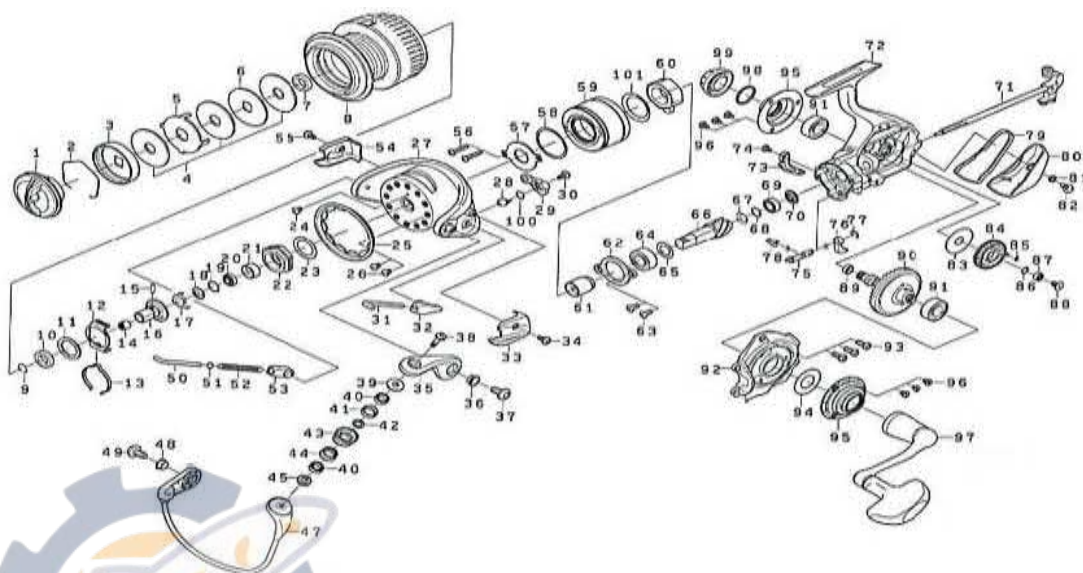

Key No.	Part No.	Part Name
1	J40-4701	DRAG KNOB
2	F71-0001	DRAG WASHER RET
3	F89-5304	DRAG KNOB CLICK PLT
4	H80-6501	DRAG WASHER
5	F63-5201	EARED WASHER
6	F63-5101	KEY WASHER
7	H41-6301	DRAG COLLAR
8	J29-3901	SPOOL ASSEMBLY
9	G47-2401	BEARING RETAINER
10	H41-6301	DRAG COLLAR
11	H80-6301	WASHER
12	H41-6001	CLICK HOLDER
13	H41-6101	CLICK LEAF SPRING
14	J18-0801	SPOOL METAL NUT
15	G37-5001	PIN
16	H41-5901	SPOOL METAL
17	G47-1501	BEARING RET
18	H41-5701	ROTOR NUT PACKING
19	375-5201	WASHER
20	J25-3201	BALL BEARING
21	J25-3101	COLLAR
22	J25-3001	ROTOR NUT
23	371-2824	WASHER
24	H02-2701	SCREW
25	J25-7101	LINE GUARD RING
26	H02-2701	LINE GUARD SCREW
27	J25-4301	ROTOR
28	H41-3601	BAIL TRIP LEVER SPRING
29	J25-4401	BAIL TRIP LEVER
30	H41-7701	SCREW B
31	J25-4601	SHAFT
32	J25-4701	BAIL SPRING HOLDER
33	J25-5101	SIDE COVER (A)
34	J25-5201	SCREW
35	J25-4801	BAIL ARM
36	J25-4901	COLLAR
37	J25-5001	BAIL ARM SCREW
38	J25-7001	SCREW
39	J25-6801	MAGNET ASSEMBLY (A)
40	J25-6701	BALL BEARING
41	J25-6601	COLLAR
42	J25-6301	COLLAR
43	J25-6501	LINE ROLLER
44	J25-6401	COLLAR
45	J25-6001	MAGNET ASSEMBLY (B)
47	J25-5401	BAIL ASSEMBLY
48	J25-4901	COLLAR
49	J25-5001	BAIL ARM SCREW
50	G47-1803	BAIL SPRING SHAFT
51	G68-5401	BAIL SPRING WASHER

Key No.	Part No.	Part Name
52	J25-5301	SPRING
53	G47-1602	BAIL SPRING HOLDER
54	J25-5901	SIDE COVER (B)
55	J25-5201	SCREW
56	H41-3201	SCREW
57	H53-2602	MAGNET HOLDER
58	H41-3001	O-RING
59	H51-9309	COVER
60	H41-2601	ROLLER CLUTCH
61	H41-2501	SPACING SLEEVE
62	H73-9191	BEARING RET
63	E13-4501	SCREW
64	G53-5105	BALL BEARING
65	H41-1401	WASHER
66+90	Z02-2470	PINION+DRIVE GEAR UNIT
67	H41-1301	SPRING WASHER
68	E09-6501	WASHER
69	G53-8007	BALL BEARING
70	H41-1201	COLLAR
71	J25-2501	MAIN SHAFT
72	J25-2401	BODY
73	H41-2201	BAIL TRIP PLT
74	H45-5406	SCREW
75	H41-0001	A/R CAM
76	H41-0101	A/R LEVER
77	B33-9801	RET
78	H41-0201	A/R CAM SPRING
79	H41-3301	PACKING
80	H41-3401	REAR COVER
81	H35-2801	WASHER
82	H51-2401	SCREW
83	H60-7901	WASHER
84	H41-0401	OSC GEAR
85	G68-3301	O-RING
86	H12-9201	WASHER
87	G46-9002	BALL BEARING
88	G94-0402	SCREW
89	H45-5601	RING
91	J03-0301	BALL BEARING (MS)
92	H41-2308	SIDE COVER
93	H43-1001	SCREW
94	H41-2401	WASHER
95	J25-2003	BODY COVER (A)
96	H74-0302	SCREW
97	J25-3401	HANDLE ASSEMBLY
98	G39-9702	O-RING
99	H41-7201	HANDLE SCREW CAP
100	J33-9500	WASHER
100	J33-9501	WASHER (THICKNESS 0.05)
100	J33-9502	WASHER (THICKNESS 0.1)