




Please order by parts number, not key number
Veuillez indiquer le numéro de la pièce (Non "Key" No.)

SPINNING REEL

CERTATE 2000HA/2500HA/3000HA

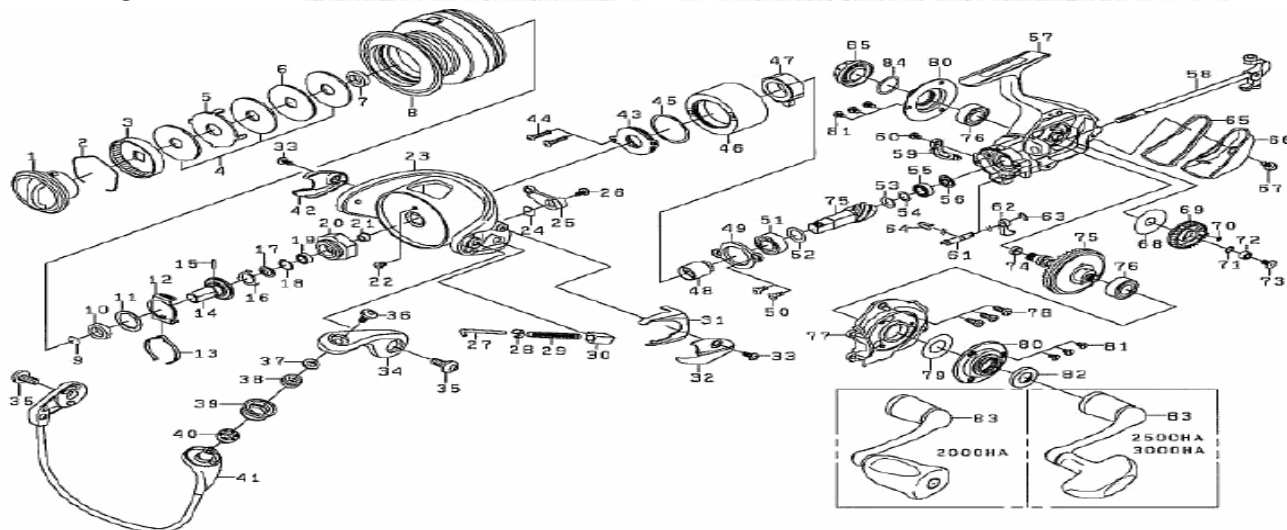

Key No.	CERTATE 2000HA Parts No.	Parts Name	CERTATE 2500HA Parts No.	CERTATE 3000HA Parts No.
1	I144-5701	Drag Knob	I141-8201	I141-8201
2	F71-2501	Drag Washer Retainer	F71-0001	F71-0001
3	G99-5301	Drag Knob Click Plate	G99-5301	G99-5301
4	F63-5001	Drag Washer	F69-1001	F69-1001
5	F63-5201	Fared Washer	F62-7301	F62-7301
6	F63-5101	Key Washer	F62-7201	F62-7201
7	H41-6301	Collar (A)	H41-6301	H41-6301
8	H70-7201	Spool Assembly	H70-9701	H70-9701
9	G47-2401	Collar Retainer	G47-2401	G47-2401
10	H41-6301	Collar (B)	H41-6301	H41-6301
11	F62-5500	Washer (A)	F62-5500	F62-5500
12	H41-6001	Click Leaf Spring Holder	H41-6001	H41-6001
13	H41-6101	Spool Click Leaf Spring	H41-6101	H41-6101
14	H41-5901	Spool Metal	H41-5901	H41-5901
15	G37-6001	Pin	G37-6001	G37-6001
16	H41-5801	Bearing Retainer (A)	H41-5801	H41-5801
17	H41-5701	Packing (A)	H41-5701	H41-5701
18	G46-6103	Washer (D)	G46-6103	G46-6103
19	G46-6204	Ball Bearing (A)	G46-6204	G46-6204
20	H41-5601	Rotor Nut	H41-5601	H41-5601
21	H41-5501	Collar (C)	H41-5501	H41-5501
22	H02-2701	Screw (A)	H02-2701	H02-2701
23	I144-3201	Rotor	I141-3501	I141-3501
24	H44-3301	Bail Trip Lever Spring	H41-3601	H41-3601
25	H44-3401	Bail Trip Lever	H41-3701	H41-3701
26	H41-7701	Screw (B)	H41-7701	H41-7701
27	H44-3601	Bail Spring Shaft	H41-4101	H41-4101
28	I157-6101	Bail Spring Plate	I157-6101	I157-6101
29	H44-3701	Bail Spring	H41-4201	H41-4201
30	H41-4301	Bail Spring Holder	H41-4301	H41-4301
31	H41-3701	Cover (C)	H41-4001	H41-4001
32	H44-3801	Cover (A)	H41-4601	H41-4601
33	H43-1301	Screw (C)	H43-1301	H43-1301
34	H41-4401	Bail Arm	H41-4401	H41-4401
35	I143-1201	Screw (D)	I143-1201	I143-1201
36	H43-1401	Screw (E)	H43-1401	H43-1401
37	H41-5401	Collar (D)	H41-5401	H41-5401
38	H41-5201	Collar (F)	H41-5201	H41-5201
39	G68-6701	Line Roller	G68-6701	G68-6701
40	I141-5201	Collar (F)	I141-5201	I141-5201
41	H44-3901	Bail Assembly	H41-4701	H41-4701
42	H44-4001	Cover (B)	H41-4801	H41-4801
43	H53-2601	Magnet Assembly	H53-2601	H53-2601
44	H41-3201	Screw (F)	H41-3201	H41-3201
45	I141-3001	"O" ring (A)	I141-3001	I141-3001
46	H51-0301	Cover (D)	H51-0301	H51-0301
47	H41-2601	Roller clutch	H41-2601	H41-2601
48	H41-2501	Spacing Sleeve	H41-2501	H41-2501
49	H73-9101	Bearing Retainer (B)	H73-9101	H73-9101
50	E13-4501	Screw (G)	E13-4501	E13-4501
51	G53-5101	Ball Bearing (B)	G53-5101	G53-5101
52	H41-1401	Washer (C)	H41-1401	H41-1401
53	H41-1300	Spring Washer	H41-1300	G57-2500
54	E09-6500	Washer (D)	E09-6500	J75-5200
55	G53-5003	Ball Bearing (C)	G53-5003	G46-7101
56	H41-1201	Collar (G)	H41-1201	H45-9401
57	I140-9001	Body	I140-9001	I145-0601
58	H47-8702	Main Shaft	H41-0602	H45-0102
59	H47-9101	Bail Trip Plate	H41-2201	H41-2201
60	H45-5401	Screw (H)	H45-5401	H45-5401
61	H41-0001	Anti-Reverse Cam	H41-0001	H41-0001
62	I141-0101	Anti-Reverse Lever	I141-0101	I141-0101
63	B33-0801	Retainer	B33-0801	B33-0801
64	H41-0201	Anti Reverse Cam Spring	H41-0201	H41-0201
65	H41-3301	Packing (B)	H41-3301	H47-2601
66	H41-3401	Rear Cover	H41-3401	H47-2701
67	H51-2101	Screw (I)	H51-2101	H51-2101
68	H60-7901	Washer (E)	H60-7901	H54-5401
69	H47-8601	Oscillating Gear	H41-0401	H45-8901
70	G68-3301	"O" Ring (B)	G68-3301	G86-9601
71	H12-9200	Washer (F)	H12-9200	G46-8100
72	G94-9001	Ball Bearing (D)	G94-9001	G46-9001
73	G94-0402	Screw (J)	G94-0402	G94-0402
74	I145-5001	Ring	I145-5001	I145-9901
75	Z02-0620	Pinion Gear + Drive Gear	Z02-0350	Z02-0350
76	G46-7301	Ball Bearing (E)	G46-7301	G46-7301
77	H41-2301	Side Cover	H41-2301	H45-0101
78	H43-1001	Screw (K)	H43-1001	H43-1001
79	I141-2400	Washer (G)	I141-2400	I141-2400
80	H41-2106	Bearing Retainer (C)	H41-2106	H45-0201
81	F62-3306	Screw (L)	F62-3306	F62-3306
82	H41-7101	Packing (C)	H41-7101	H41-7101
83	H70-7101	Handle Assembly	H70-7701	H70-9601
84	G80-6001	Ring (C)	G80-6001	G80-6001
85	H41-7201	Handle Screw Gap	H41-7201	H41-7201