




ISLA 4000

Feel Alive.

Please quote by part number, not key number when ordering.
spares@daiwaaustralia.com.au PH: (02) 8644 8644

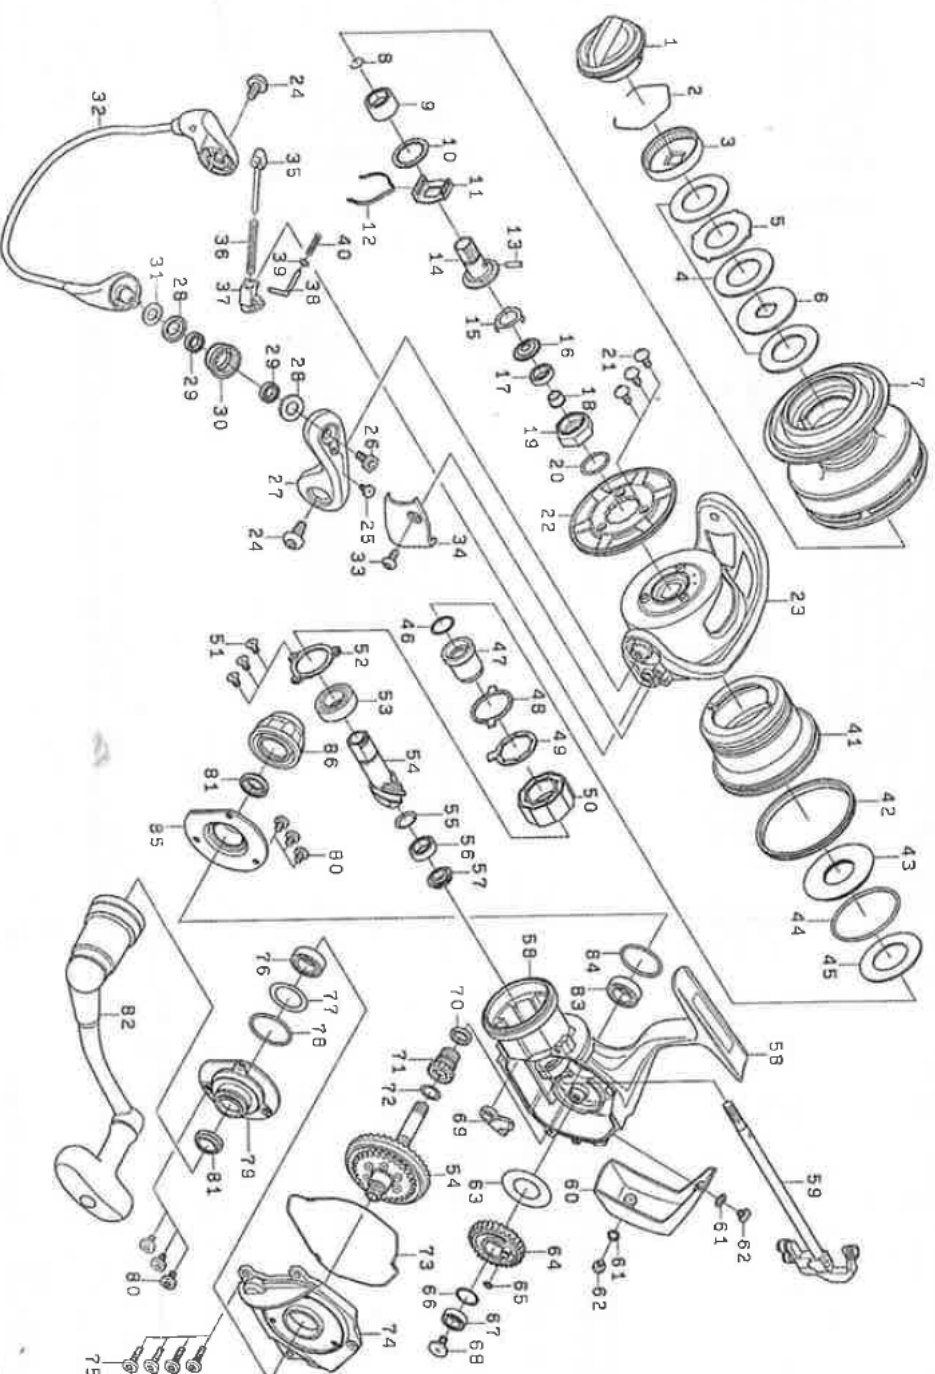

REEL NAME	MGFT CODE	KEY NO	PARTS CODE	DESCRIPTION
ISLA 4000		1	6H775501	DRAW KNOB
ISLA 4000		2	6F710001	DRAW WASHER RETAINER
ISLA 4000		3	6F895305	DRAW KNOB CLICK PLATE
ISLA 4000		4	6H247202	DRAW WASHER RETAINER
ISLA 4000		5	6G165903	EARED WASHER
ISLA 4000		6	6F644702	KEY WASHER
ISLA 4000		2-7	6G936301	SPOOL ASSEMBLY
ISLA 4000		8	6G525101	RING (A)
ISLA 4000		9	6H774501	COLLAR (A)
ISLA 4000		10	6G903900	WASHER (A)
ISLA 4000		11	6G694001	CLICK LEAF SPRING HOLDER
ISLA 4000		12	6H737101	SPOOL CLICK LEAF SPRING
ISLA 4000		13	6F643601	PIN
ISLA 4000		14	6H621701	SPOOL METAL
ISLA 4000		15	6G524801	ROTOR NUT PLATE
ISLA 4000		16	6H621501	PACKING (A)
ISLA 4000		17	6G212502	BALL BEARING (A)
ISLA 4000		18	6H621301	COLLAR (B)
ISLA 4000		19	6H621401	ROTOR NUT
ISLA 4000		20	6G162401	"O" RING (A)
ISLA 4000		21	6H417701	SCREW (A)
ISLA 4000		22	6H621601	COLLAR (C)
ISLA 4000		23	6H620201	ROTOR
ISLA 4000		24	6H503701	SCREW (B)
ISLA 4000		25	6H638402	SCREW (C)
ISLA 4000		26	6H504701	SCREW (D)
ISLA 4000		27	6H620604	BAIL ARM
ISLA 4000		28	6G162001	PACKING (B)
ISLA 4000		29	6G370905	BALL BEARING (B)
ISLA 4000		30	6H621202	LINE ROLLER
ISLA 4000		31	6E096500	WASHER (B)
ISLA 4000		32	6H620802	BAIL ASSEMBLY
ISLA 4000		33	6H503901	SCREW (E)
ISLA 4000		34	6H620702	COVER (A)
ISLA 4000		35	6G017503	BAIL SPRING SHAFT (A)
ISLA 4000		36	6H736301	BAIL SPRING (A)
ISLA 4000		37	6H620501	BAIL SPRING HOLDER
ISLA 4000		38	6H620301	BAIL SPRING SHAFT (B)
ISLA 4000		39	6G685401	WASHER (C)
ISLA 4000		40	6H620401	BAIL SPRING (B)
ISLA 4000		41	6H619701	COVER (B)
ISLA 4000		42	6H619801	RING (B)
ISLA 4000		43	6H619301	MAGNET ASSEMBLY
ISLA 4000		44	6H452801	"O" RING (B)
ISLA 4000		45	6H619201	WASHER (D)
ISLA 4000		46	6H620101	"O" RING (C)
ISLA 4000		47	6H619101	SPACING SLEEVE
ISLA 4000		48	6H690201	CLUTCH CAM RETAINER
ISLA 4000		49	6H624501	CLUTCH CAM
ISLA 4000		50	6G314501	ROLLER CLUTCH
ISLA 4000		51	6E134508	SCREW (F)
ISLA 4000		52	6G522901	BEARING RETAINER
ISLA 4000		53	6G522802	BALL BEARING (C)
ISLA 4000		54	6Z020412	PINION + DRIVE GEAR SET
ISLA 4000		55	6G578502	SPRING WASHER
ISLA 4000		56	6G522702	BALL BEARING (D)
ISLA 4000		57	6H618001	COLLAR (D)
ISLA 4000		58	6H772602	BODY
ISLA 4000		59	6H617702	MAIN SHAFT
ISLA 4000		60	6H772802	REAR COVER

[illegible]