


# JUPITER-Z2505T

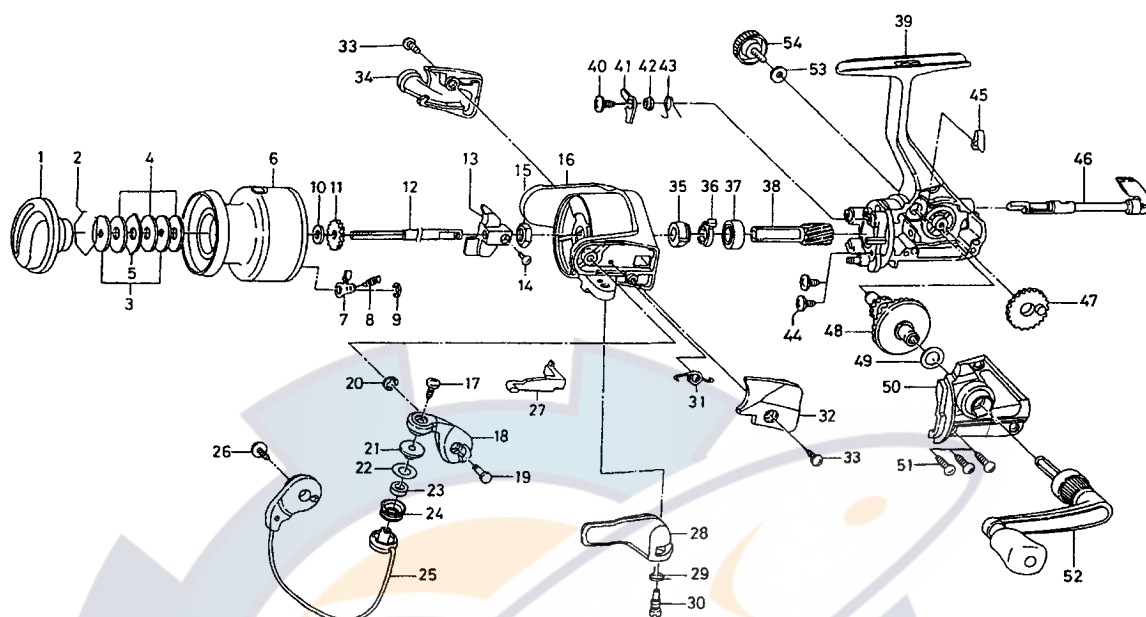

## Key No. Parts No. Parts Name

|     |          |                     |
|-----|----------|---------------------|
| 2-9 | F61-0101 | SPOOL               |
| 1   | F32-2105 | DRAG KNOB           |
| 2   | 171-7701 | DRAG WASHER RET     |
| 3   | E46-7201 | KEY WASHER          |
| 4   | E13-6003 | DRAG WASHER         |
| 5   | 373-3603 | EARED WASHER        |
| 7   | B07-5304 | CLICK PAWL          |
| 8   | E40-3101 | CLICK SPRING        |
| 9   | 320-5901 | CLICK RET           |
| 10  | E46-7101 | SPOOL WASHER        |
| 11  | 270-6501 | CLICK GEAR          |
| 12  | F61-9401 | MAIN SHAFT          |
| 13  | F39-5801 | OSC SLIDER          |
| 14  | 351-0315 | OSC SLIDER SCREW    |
| 15  | 341-9201 | ROTOR NUT           |
| 16  | F31-0114 | ROTOR               |
| 17  | B67-9304 | LINE ROLLER SCREW   |
| 18  | F61-9301 | BAIL ARM            |
| 19  | E49-3501 | BAIL ARM SCREW      |
| 20  | 320-5901 | BAIL ARM SCREW RET  |
| 21  | F44-6302 | LINE ROLLER COLLAR  |
| 22  | F44-6202 | LINE ROLLER WASHER  |
| 23  | F47-3401 | LINE ROLLER BUSHING |
| 24  | F45-4901 | LINE ROLLER         |
| 25  | F61-9701 | BAIL                |
| 26  | B84-2102 | BAIL HOLDER SCREW   |
| 27  | E45-1601 | BAIL TRIP LEVER     |

## Key No. Parts No. Parts Name

|    |          |                         |
|----|----------|-------------------------|
| 28 | F18-0010 | TRIGGER LEVER           |
| 29 | E36-9901 | TRIGGER SPRING          |
| 30 | E37-0003 | TRIGGER SCREW           |
| 31 | F12-8901 | BAIL SPRING             |
| 32 | F31-0509 | BAIL SPRING COVER       |
| 33 | E36-4202 | BAIL SPRING COVER SCREW |
| 34 | F31-0609 | BAIL TRIP COVER         |
| 35 | E38-5501 | SPRING HOLDER           |
| 36 | E49-2401 | A/R RATCHET             |
| 37 | L03-6601 | BALL BEARING            |
| 38 | L01-3902 | PINION GEAR             |
| 39 | F60-9802 | BODY                    |
| 40 | L00-1801 | A/R PAWL SCREW          |
| 41 | L01-4401 | A/R PAWL                |
| 42 | L01-4302 | A/R PAWL COLLAR         |
| 43 | L00-1501 | A/R PAWL SPRING         |
| 44 | E03-7801 | BEARING RET SCREW       |
| 45 | F38-5901 | A/R CAM SPRING          |
| 46 | F08-5121 | A/R LEVER               |
| 47 | F60-6001 | OSC GEAR                |
| 48 | F08-4801 | DRIVE GEAR              |
| 49 | 373-7808 | DRIVE GEAR WASHER       |
| 50 | F60-9902 | SIDE COVER              |
| 51 | B83-5002 | SIDE COVER SCREW        |
| 52 | F61-2401 | HANDLE                  |
| 53 | B92-4902 | HANDLE LOCK WASHER      |
| 54 | F03-5605 | HANDLE LOCK SCREW       |