


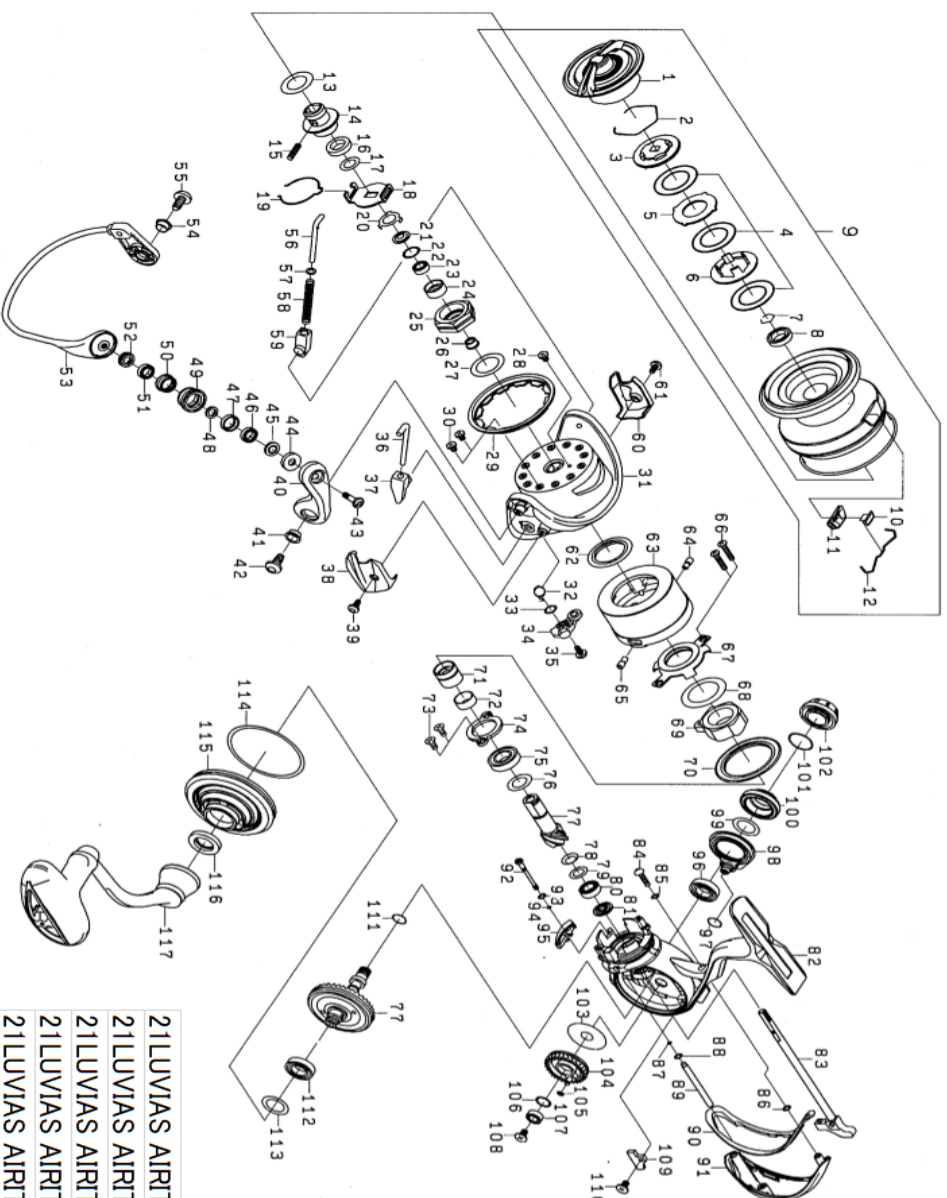

21LUVIAS AIRITY LT3000-

Feel Alive.

Please quote by part number, not key number when ordering.
spares@daiwaaustralia.com.au PH: (02) 8644 8644



21LUVIAS AIRITY LT2500	S36421J
21LUVIAS AIRITY LT2500-XH	S36422J
21LUVIAS AIRITY LT3000S-C	S36521J
21LUVIAS AIRITY LT3000S-CXH	S36522J
21LUVIAS AIRITY LT3000	S36621J
21LUVIAS AIRITY LT3000-XH	S36622J
21LUVIAS AIRITY LT4000-C	S36721J
21LUVIAS AIRITY LT4000-CXH	S36722J

REEL NAME	MGFT CODE	KEY NO	PARTS CODE	DESCRIPTION
21LUVIAS AIRITY LT3000-XH		1	6M136401	DRAW KNOB
21LUVIAS AIRITY LT3000-XH		2	6J556701	DRAW RING
21LUVIAS AIRITY LT3000-XH		3	6J556601	DRAW DISC WASHER(A)
21LUVIAS AIRITY LT3000-XH		4	6J561101	DRAW WASHER
21LUVIAS AIRITY LT3000-XH		5	6J561201	DRAW LIP WASHER
21LUVIAS AIRITY LT3000-XH		6	6J556501	DRAW METAL
21LUVIAS AIRITY LT3000-XH		7	6B358702	BEARING RETAINER
21LUVIAS AIRITY LT3000-XH		8	6G212503	SPOOL BALL BEARING
21LUVIAS AIRITY LT3000-XH		9	6M138501	SPOOL ASSY
21LUVIAS AIRITY LT3000-XH		10	6J558001	LINE STOPPER
21LUVIAS AIRITY LT3000-XH		11	6J558101	LINE STOPPER PLATE
21LUVIAS AIRITY LT3000-XH		12	6J314801	LINE STOPPER SPRING
21LUVIAS AIRITY LT3000-XH		13	6J546304	SPOOL WASHER (A)
21LUVIAS AIRITY LT3000-XH		14	6J549501	SPOOL METAL
21LUVIAS AIRITY LT3000-XH		15	6J558201	SPOOL METAL SCREW
21LUVIAS AIRITY LT3000-XH		16	6H624801	SPOOL METAL COLLAR
21LUVIAS AIRITY LT3000-XH		17	6J602201	SPOOL WASHER (B)
21LUVIAS AIRITY LT3000-XH		18	6M021401	CLICK HOLDER
21LUVIAS AIRITY LT3000-XH		19	6H416101	CLICK LEAF SPRING
21LUVIAS AIRITY LT3000-XH		20	6G471501	ROTOR NUT PLATE
21LUVIAS AIRITY LT3000-XH		21	6J729101	ROTOR NUT PACKING
21LUVIAS AIRITY LT3000-XH		22	63755202	ROTOR NUT BB WASHER
21LUVIAS AIRITY LT3000-XH		23	6H959602	ROTOR NUT BALL BEARING
21LUVIAS AIRITY LT3000-XH		24	6J690201	ROTOR NUT BB COLLAR
21LUVIAS AIRITY LT3000-XH		25	6J253001	ROTOR NUT
21LUVIAS AIRITY LT3000-XH		26	6J808501	ROTOR NUT COLLAR
21LUVIAS AIRITY LT3000-XH		27	63712836	ROTOR NUT WASHER
21LUVIAS AIRITY LT3000-XH		28	6H022701	ROTOR NUT SCREW
21LUVIAS AIRITY LT3000-XH		29	6J257101	ROTOR COVER
21LUVIAS AIRITY LT3000-XH		30	6H022701	ROTOR COVER SCREW
21LUVIAS AIRITY LT3000-XH		31	6J254307	ROTOR
21LUVIAS AIRITY LT3000-XH		32	6J435201	KICK LEVER SPRING
21LUVIAS AIRITY LT3000-XH		33	6J339502	KICK LEVER WASHER
21LUVIAS AIRITY LT3000-XH		34	6J254401	KICK LEVER ASSY
21LUVIAS AIRITY LT3000-XH		35	6H417701	KICK LEVER SCREW
21LUVIAS AIRITY LT3000-XH		36	6J254601	ARM LEVER SHAFT
21LUVIAS AIRITY LT3000-XH		37	6J254701	ARM LEVER SHAFT HOLDER
21LUVIAS AIRITY LT3000-XH		38	6J255103	ARM LEVER SPRING COVER
21LUVIAS AIRITY LT3000-XH		39	6J255201	COVER SCREW
21LUVIAS AIRITY LT3000-XH		40	6J254807	ARM LEVER
21LUVIAS AIRITY LT3000-XH		41	6J254901	ARM LEVER SCREW COLLAR
21LUVIAS AIRITY LT3000-XH		42	6J255001	ARM LEVER SCREW
21LUVIAS AIRITY LT3000-XH		43	6J257001	ROLLER SCREW
21LUVIAS AIRITY LT3000-XH		44	6J538001	ROLLER COLLAR (A)
21LUVIAS AIRITY LT3000-XH		45	6J538401	ROLLER MAGNET ASSY(A)
21LUVIAS AIRITY LT3000-XH		46	6J256702	ROLLER BALL BEARING
21LUVIAS AIRITY LT3000-XH		47	6J256601	ROLLER COLLAR (B)
21LUVIAS AIRITY LT3000-XH		48	6J256301	ROLLER COLLAR (C)
21LUVIAS AIRITY LT3000-XH		49	6J256501	LINE ROLLER
21LUVIAS AIRITY LT3000-XH		50	6J256401	ROLLER COLLAR (D)
21LUVIAS AIRITY LT3000-XH		51	6J256702	ROLLER BALL BEARING
21LUVIAS AIRITY LT3000-XH		53	6J891101	BAIL ASSY
21LUVIAS AIRITY LT3000-XH		54	6J254901	BAIL HOLDRE SCREW COLLAR
21LUVIAS AIRITY LT3000-XH		55	6J255001	BAIL HOLDRE SCREW
21LUVIAS AIRITY LT3000-XH		56	6G471803	BAIL SPRING SHAFT
21LUVIAS AIRITY LT3000-XH		57	6G685401	BAIL SPRING SHAFT WASHER
21LUVIAS AIRITY LT3000-XH		58	6J255301	BAIL SPRING
21LUVIAS AIRITY LT3000-XH		59	6G471601	BAIL SPRING SHAFT HOLDER
21LUVIAS AIRITY LT3000-XH		60	6J255903	BAIL HOLDER COVER
21LUVIAS AIRITY LT3000-XH		61	6J255201	BAIL HOLDER COVER SCREW

REEL NAME	MGFT CODE	KEY NO	PARTS CODE	DESCRIPTION
21LUVIAS AIRITY LT3000-XH		62	6J554901	MAGSEALED CAP PACKING(A)
21LUVIAS AIRITY LT3000-XH		63	6J774701	MAGSEALED CAP
21LUVIAS AIRITY LT3000-XH		64	6J782101	MAGSEALED CAP SCREW(A)
21LUVIAS AIRITY LT3000-XH		65	6J782101	MAGSEALED CAP SCREW(B)
21LUVIAS AIRITY LT3000-XH		66	6H842808	MAGSEALED PLATE SCREW
21LUVIAS AIRITY LT3000-XH		67	6J553803	MAGSEALED PLATE ASSY
21LUVIAS AIRITY LT3000-XH		68	6H502203	MAGSEALED PLATE WASHER
21LUVIAS AIRITY LT3000-XH		69	6H412602	ONEWAY CLUTCH
21LUVIAS AIRITY LT3000-XH		70	6J553701	MAGSEALED CAP PACKING(B)
21LUVIAS AIRITY LT3000-XH		71	6J554801	CLUTCH RING
21LUVIAS AIRITY LT3000-XH		72	6J536202	CLUTCH RING COLLAR
21LUVIAS AIRITY LT3000-XH		73	6J552203	PINION BEARING PLATE SCREW
21LUVIAS AIRITY LT3000-XH		74	6J552101	PINION BALLBEARING PLATE
21LUVIAS AIRITY LT3000-XH		75	6G279602	PINION BALLBEARING (A)
21LUVIAS AIRITY LT3000-XH		76	63758502	PINION BALLBEARING (A)WASHER
21LUVIAS AIRITY LT3000-XH		77	6Z024673	PINION DRIVE GEAR SET
21LUVIAS AIRITY LT3000-XH		78	6H814902	PINION BALLBEARING (B)SP WASHER
21LUVIAS AIRITY LT3000-XH		79	6E096500	PINION BALLBEARING (B) WASHER
21LUVIAS AIRITY LT3000-XH		80	6G538007	PINION BALLBEARING (B)
21LUVIAS AIRITY LT3000-XH		81	6J552001	PINION BALLBEARING COLLAR
21LUVIAS AIRITY LT3000-XH		82	6M137501	BODY
21LUVIAS AIRITY LT3000-XH		83	6J612301	MAIN SHAFT
21LUVIAS AIRITY LT3000-XH		84	6J553605	REAR CAP SCREW
21LUVIAS AIRITY LT3000-XH		85	6G315301	REAR CAP WASHER(A)
21LUVIAS AIRITY LT3000-XH		86	6G315302	REAR CAP WASHER(B)0125
21LUVIAS AIRITY LT3000-XH		87	6G683301	OSCILLATING POST O RING
21LUVIAS AIRITY LT3000-XH		88	6G712401	OSCILLATING POST WASHER
21LUVIAS AIRITY LT3000-XH		89	6J553102	OSCILLATING POST
21LUVIAS AIRITY LT3000-XH		90	6J571601	REAR CAP PACKING
21LUVIAS AIRITY LT3000-XH		91	6J571701	REAR CAP
21LUVIAS AIRITY LT3000-XH		92	6J609108	KICK COLLAR SCREW
21LUVIAS AIRITY LT3000-XH		93	6J718501	KICK COLLAR WASHER
21LUVIAS AIRITY LT3000-XH		94	6J718601	KICK COLLAR O RING
21LUVIAS AIRITY LT3000-XH		95	6J571801	KICK COLLAR
21LUVIAS AIRITY LT3000-XH		96	6G818902	DRIVE BALL BEARING(A)
21LUVIAS AIRITY LT3000-XH		97	6J551301	SET PLATE O RING
21LUVIAS AIRITY LT3000-XH		98	6J570303	SET PLATE
21LUVIAS AIRITY LT3000-XH		99	6J555501	DRIVE BEARING WASHER(A)
21LUVIAS AIRITY LT3000-XH		100	6J571304	DRIVE BEARING COVER (A) R
21LUVIAS AIRITY LT3000-XH		101	6G399702	HANDLE CAP O RING
21LUVIAS AIRITY LT3000-XH		102	6J555901	HANDLE CAP
21LUVIAS AIRITY LT3000-XH		103	6J551401	OSCILLATING GEAR WASHER
21LUVIAS AIRITY LT3000-XH		104	6J618501	OSCILLATING GEAR
21LUVIAS AIRITY LT3000-XH		105	6G869601	OSCILLATING GEAR O-RING
21LUVIAS AIRITY LT3000-XH		106	6H129201	OSCILLATING BEARING WASHER
21LUVIAS AIRITY LT3000-XH		107	6G686904	OSCILLATING BALL BEARING
21LUVIAS AIRITY LT3000-XH		108	6G940402	OSCILLATING GEAR SCREW
21LUVIAS AIRITY LT3000-XH		109	6J724001	PLATE
21LUVIAS AIRITY LT3000-XH		110	6G940407	PLATE SCREW
21LUVIAS AIRITY LT3000-XH		111	6J552701	DRIVEGEAR RING
21LUVIAS AIRITY LT3000-XH		112	6H739702	DRIVE BEARING (B)
21LUVIAS AIRITY LT3000-XH		113	6G613401	DRIVE BEARING (B) WASHER002
21LUVIAS AIRITY LT3000-XH		114	6J571501	BODY COVER O RING
21LUVIAS AIRITY LT3000-XH		115	6M137603	BODY COVER (A) L
21LUVIAS AIRITY LT3000-XH		116	6H866201	HANDLE PACKING
21LUVIAS AIRITY LT3000-XH		117	6M207401	HANDLE ASSY