




21LUVIAS AIRITY LT3000

Feel Alive.

Please quote by part number, not key number when ordering.
spares@daiwaaustralia.com.au PH: (02) 8644 8644

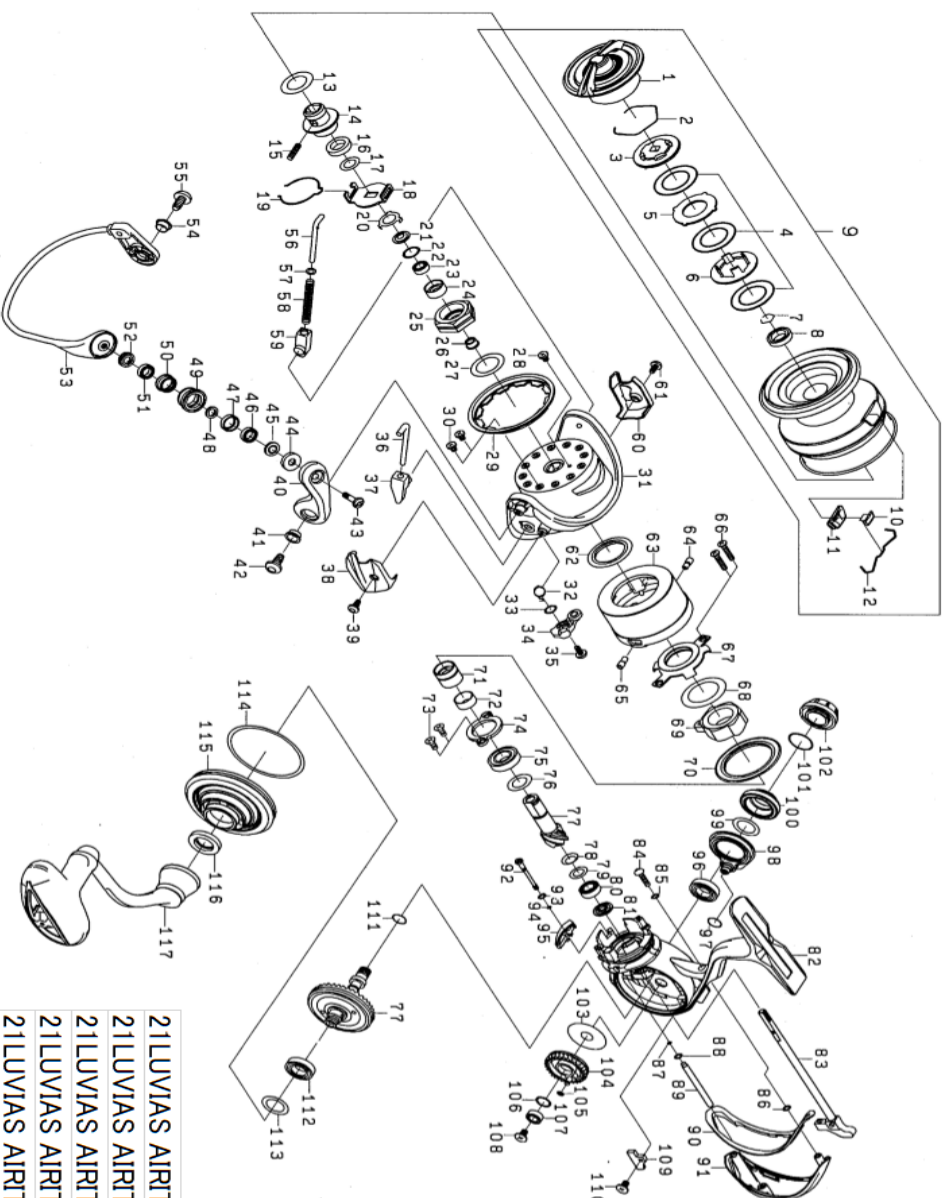

21LUVIAS AIRITY LT2500	S36421J
21LUVIAS AIRITY LT2500-XH	S36422J
21LUVIAS AIRITY LT3000S-C	S36521J
21LUVIAS AIRITY LT3000S-CXH	S36522J
21LUVIAS AIRITY LT3000	S36621J
21LUVIAS AIRITY LT3000-XH	S36622J
21LUVIAS AIRITY LT4000-C	S36721J
21LUVIAS AIRITY LT4000-CXH	S36722J

REEL NAME	MGFT CODE	KEY NO	PARTS CODE	DESCRIPTION
21LUVIAS AIRITY LT3000		1	6M136401	DRAG KNOB
21LUVIAS AIRITY LT3000		2	6J556701	DRAG RING
21LUVIAS AIRITY LT3000		3	6J556601	DRAG DISC WASHER(A)
21LUVIAS AIRITY LT3000		4	6J561101	DRAG WASHER
21LUVIAS AIRITY LT3000		5	6J561201	DRAG LIP WASHER
21LUVIAS AIRITY LT3000		6	6J556501	DRAG METAL
21LUVIAS AIRITY LT3000		7	6B358702	BEARING RETAINER
21LUVIAS AIRITY LT3000		8	6G212503	SPOOL BALL BEARING
21LUVIAS AIRITY LT3000		9	6M144601	SPOO ASSY
21LUVIAS AIRITY LT3000		10	6J558001	LINE STOPPER
21LUVIAS AIRITY LT3000		11	6J558101	LINE STOPPER PLATE
21LUVIAS AIRITY LT3000		12	6J314801	LINE STOPPER SPRING
21LUVIAS AIRITY LT3000		13	6J546304	SPOOL WASHER (A)
21LUVIAS AIRITY LT3000		14	6J549501	SPOOL METAL
21LUVIAS AIRITY LT3000		15	6J558201	SPOOL METAL SCREW
21LUVIAS AIRITY LT3000		16	6H624801	SPOOL METAL COLLAR
21LUVIAS AIRITY LT3000		17	6I602201	SPOOL WASHER (B)
21LUVIAS AIRITY LT3000		18	6M021401	CLICK HOLDER
21LUVIAS AIRITY LT3000		19	6H416101	CLICK LEAF SPRING
21LUVIAS AIRITY LT3000		20	6G471501	ROTOR NUT PLATE
21LUVIAS AIRITY LT3000		21	6J729101	ROTOR NUT PACKING
21LUVIAS AIRITY LT3000		22	63755202	ROTOR NUT BB WASHER
21LUVIAS AIRITY LT3000		23	6H959602	ROTOR NUT BALL BEARING
21LUVIAS AIRITY LT3000		24	6J690201	ROTOR NUT BB COLLAR
21LUVIAS AIRITY LT3000		25	6J253001	ROTOR NUT
21LUVIAS AIRITY LT3000		26	6J808501	ROTOR NUT COLLAR
21LUVIAS AIRITY LT3000		27	63712836	ROTOR NUT WASHER
21LUVIAS AIRITY LT3000		28	6H022701	ROTOR NUT SCREW
21LUVIAS AIRITY LT3000		29	6J257101	ROTOR COVER
21LUVIAS AIRITY LT3000		30	6H022701	ROTOR COVER SCREW
21LUVIAS AIRITY LT3000		31	6J254307	ROTOR
21LUVIAS AIRITY LT3000		32	6J435201	KICK LEVER SPRING
21LUVIAS AIRITY LT3000		33	6J339502	KICK LEVER WASHER
21LUVIAS AIRITY LT3000		34	6J254401	KICK LEVER ASSY
21LUVIAS AIRITY LT3000		35	6H417701	KICK LEVER SCREW
21LUVIAS AIRITY LT3000		36	6J254601	ARM LEVER SHAFT
21LUVIAS AIRITY LT3000		37	6J254701	ARM LEVER SHAFT HOLDER
21LUVIAS AIRITY LT3000		38	6J255103	ARM LEVER SPRING COVER
21LUVIAS AIRITY LT3000		39	6J255201	COVER SCREW
21LUVIAS AIRITY LT3000		40	6J254807	ARM LEVER
21LUVIAS AIRITY LT3000		41	6J254901	ARM LEVER SCREW COLLAR
21LUVIAS AIRITY LT3000		42	6J255001	ARM LEVER SCREW
21LUVIAS AIRITY LT3000		43	6J257001	ROLLER SCREW
21LUVIAS AIRITY LT3000		44	6J538001	ROLLER COLLAR (A)
21LUVIAS AIRITY LT3000		45	6J538401	ROLLER MAGNET ASSY(A)
21LUVIAS AIRITY LT3000		46	6J256702	ROLLER BALL BEARING
21LUVIAS AIRITY LT3000		47	6J256601	ROLLER COLLAR (B)
21LUVIAS AIRITY LT3000		48	6J256301	ROLLER COLLAR (C)
21LUVIAS AIRITY LT3000		49	6J256501	LINE ROLLER
21LUVIAS AIRITY LT3000		50	6J256401	ROLLER COLLAR (D)
21LUVIAS AIRITY LT3000		51	6J256702	ROLLER BALL BEARING
21LUVIAS AIRITY LT3000		53	6J891101	BAIL ASSY
21LUVIAS AIRITY LT3000		54	6J254901	BAIL HOLDRE SCREW COLLAR
21LUVIAS AIRITY LT3000		55	6J255001	BAIL HOLDRE SCREW
21LUVIAS AIRITY LT3000		56	6G471803	BAIL SPRING SHAFT
21LUVIAS AIRITY LT3000		57	6G685401	BAIL SPRING SHAFT WASHER
21LUVIAS AIRITY LT3000		58	6J255301	BAIL SPRING
21LUVIAS AIRITY LT3000		59	6G471601	BAIL SPRING SHAFT HOLDER
21LUVIAS AIRITY LT3000		60	6J255903	BAIL HOLDER COVER
21LUVIAS AIRITY LT3000		61	6J255201	BAIL HOLDER COVER SCREW

REEL NAME	MGFT CODE	KEY NO	PARTS CODE	DESCRIPTION
21LUVIAS AIRITY LT3000		62	6J554901	MAGSEALED CAP PACKING(A)
21LUVIAS AIRITY LT3000		63	6J774701	MAGSEALED CAP
21LUVIAS AIRITY LT3000		64	6J782101	MAGSEALED CAP SCREW(A)
21LUVIAS AIRITY LT3000		65	6J782101	MAGSEALED CAP SCREW(B)
21LUVIAS AIRITY LT3000		66	6H842808	MAGSEALED PLATE SCREW
21LUVIAS AIRITY LT3000		67	6J553803	MAGSEALED PLATE ASSY
21LUVIAS AIRITY LT3000		68	6H502203	MAGSEALED PLATE WASHER
21LUVIAS AIRITY LT3000		69	6H412602	ONEWAY CLUTCH
21LUVIAS AIRITY LT3000		70	6J553701	MAGSEALED CAP PACKING(B)
21LUVIAS AIRITY LT3000		71	6J554801	CLUTCH RING
21LUVIAS AIRITY LT3000		72	6J536202	CLUTCH RING COLLAR
21LUVIAS AIRITY LT3000		73	6J552203	PINION BEARING PLATE SCREW
21LUVIAS AIRITY LT3000		74	6J552101	PINION BALLBEARING PLATE
21LUVIAS AIRITY LT3000		75	6G279602	PINION BALLBEARING (A)
21LUVIAS AIRITY LT3000		76	63758502	PINION BALLBEARING (A)WASHER
21LUVIAS AIRITY LT3000		77	6Z026348	PINION DRIVE GEAR SET
21LUVIAS AIRITY LT3000		78	6H814902	PINION BALLBEARING (B)SP WASHER
21LUVIAS AIRITY LT3000		79	6E096500	PINION BALLBEARING (B) WASHER
21LUVIAS AIRITY LT3000		80	6G538007	PINION BALLBEARING (B)
21LUVIAS AIRITY LT3000		81	6J552001	PINION BALLBEARING COLLAR
21LUVIAS AIRITY LT3000		82	6M137501	BODY
21LUVIAS AIRITY LT3000		83	6J612301	MAIN SHAFT
21LUVIAS AIRITY LT3000		84	6J553605	REAR CAP SCREW
21LUVIAS AIRITY LT3000		85	6G315301	REAR CAP WASHER(A)
21LUVIAS AIRITY LT3000		86	6G315302	REAR CAP WASHER(B)0125
21LUVIAS AIRITY LT3000		87	6G683301	OSCILLATING POST O RING
21LUVIAS AIRITY LT3000		88	6G712401	OSCILLATING POST WASHER
21LUVIAS AIRITY LT3000		89	6J553102	OSCILLATING POST
21LUVIAS AIRITY LT3000		90	6J571601	REAR CAP PACKING
21LUVIAS AIRITY LT3000		91	6J571701	REAR CAP
21LUVIAS AIRITY LT3000		92	6J609108	KICK COLLAR SCREW
21LUVIAS AIRITY LT3000		93	6J718501	KICK COLLAR WASHER
21LUVIAS AIRITY LT3000		94	6J718601	KICK COLLAR O RING
21LUVIAS AIRITY LT3000		95	6J571801	KICK COLLAR
21LUVIAS AIRITY LT3000		96	6G818902	DRIVE BALL BEARING(A)
21LUVIAS AIRITY LT3000		97	6J551301	SET PLATE O RING
21LUVIAS AIRITY LT3000		98	6J570303	SET PLATE
21LUVIAS AIRITY LT3000		99	6J555501	DRIVE BEARING WASHER(A)
21LUVIAS AIRITY LT3000		100	6J571304	DRIVE BEASRING COVER (A) R
21LUVIAS AIRITY LT3000		101	6G399702	HANDLE CAP O RING
21LUVIAS AIRITY LT3000		102	6J555901	HANDLE CAP
21LUVIAS AIRITY LT3000		103	6J551401	OSCILLATING GEAR WASHER
21LUVIAS AIRITY LT3000		104	6J618501	OSCILLATING GEAR
21LUVIAS AIRITY LT3000		105	6G869601	OSCILLATING GEAR O-RING
21LUVIAS AIRITY LT3000		106	6H129201	OSCILLATING BEARING WASHER
21LUVIAS AIRITY LT3000		107	6G686904	OSCILLATING BALL BEARING
21LUVIAS AIRITY LT3000		108	6G940402	OSCILLATING GEAR SCREW
21LUVIAS AIRITY LT3000		109	6J724001	PLATE
21LUVIAS AIRITY LT3000		110	6G940407	PLATE SCREW
21LUVIAS AIRITY LT3000		111	6J552701	DRIVEGEAR RING
21LUVIAS AIRITY LT3000		112	6H739702	DRIVE BEARING (B)
21LUVIAS AIRITY LT3000		113	6G613401	DRIVE BEARING (B) WASHER002
21LUVIAS AIRITY LT3000		114	6J571501	BODY COVER O RING
21LUVIAS AIRITY LT3000		115	6M137604	BODY COVER (A) L
21LUVIAS AIRITY LT3000		116	6H866201	HANDLE PACKING
21LUVIAS AIRITY LT3000		117	6M207401	HANDLE ASSY