


PROCASTER-X103HA

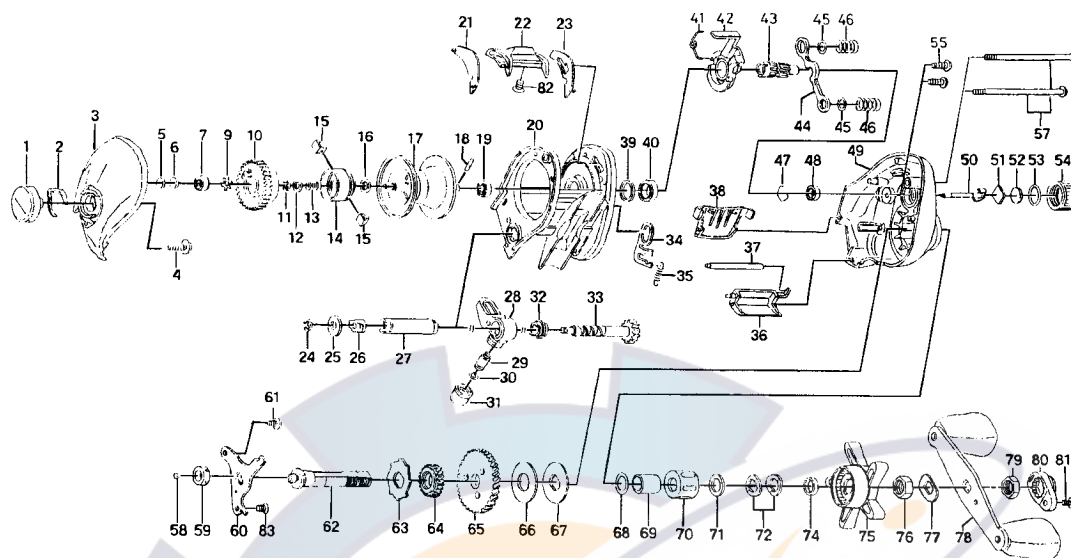

Key No.	Parts No.	Parts Name
1	F87-6902	BRAKE ADJ KNOB
2	F05-1701	BRAKE CLICK SPRING
3	F87-6202	L/S PLT
4	B84-2102	BRAKE ADJ KNOB SCREW
5	374-9103	SPACER A
6	374-9105	SPACER B
7	F40-3701	BUSHING A
9	F41-2301	BEARING RET A
10	F87-6601	MAGNET HOLDER
11-19	Z01-1535	SPOOL
20	F87-4002	FRAME
21	F87-4301	CLUTCH LEVER PLT A
22	F87-4501	CLUTCH LEVER
23	F87-4201	CLUTCH LEVER PLT B
24	320-5901	WORM SHAFT RET
25	F65-5501	WORM SHAFT WASHER
26	B71-5601	WORM SHAFT HOLDER A
27	F90-5001	LEVEL WIND GUARD
28	F87-5101	LINE GUIDE
29	121-4212	LINE GUIDE PAWL
30	373-1303	LINE GUIDE WASHER
31	F40-2801	PAWL CAP
32	F90-5101	WORM SHAFT HOLDER B
33	F87-5301	WORM SHAFT
34	F42-8801	CLUTCH TRIP PLT
35	F87-7901	CLUTCH TRIP PLT SPRING
36	F87-5902	FRONT PLT
37	F91-5601	STABILIZER BAR
38	F87-6002	PALMING PLT
39	F79-3401	CLUTCH CAM RET
40	B86-1702	BALL BEARING A
41	F87-4801	CLUTCH CAM SPRING
42	F87-4401	CLUTCH CAM
43	F87-5001	PINION GEAR
44	F87-4901	YOKE
45	E03-7706	YOKE WASHER

Key No.	Parts No.	Parts Name
46	F86-4101	YOKE SPRING
47	E21-9701	BEARING RET B
48	F05-5601	BALL BEARING B
49	F87-5807	R/S PLT
50	F80-0501	PINION SHAFT
51	B17-5402	SPOOL ADJ CAP METAL A
52	B17-5503	SPOOL ADJ CAP METAL B
53	171-5201	O RING
54	F40-3002	CAST CONTROL CAP
55	B67-9304	R/S PLT SCREW A
57	F93-8201	R/S PLT SCREW B
58	F64-7201	DRIVE SHAFT WASHER
59	B55-0301	BUSHING B
60	F87-4701	DRIVE SHAFT RET
61	F50-5701	DRIVE SHAFT RET SCREW A
62	F93-8501	DRIVE SHAFT
63	F76-1701	A/R RATCHET
64	F87-5601	WORM DRIVE GEAR
65	F87-5701	DRIVE GEAR
66	375-9405	DRAG WASHER A
67	E20-0201	KEY WASHER
68	E42-5401	DRAG WASHER B
69	F82-1301	GEAR SHAFT COLLAR
70	F58-0601	ROLLER CLUTCH
71	373-7810	BEARING WASHER
72	150-8901	DRAG SPRING WASHER
74	B97-4901	HANDLE COLLAR
75	F40-3202	STAR DRAG
76	B43-3601	DRAG NUT
77	150-9001	FRICTION WASHER
78	F93-8401	HANDLE
79	B43-3601	HANDLE NUT
80	F05-4403	HANDLE NUT PLT
81	351-1803	HANDLE NUT PLT SCREW
82	F21-1103	CLUTCH LEVER SCREW
83	F21-1101	DRIVE SHAFT RET SCREW B