


BAITCASTING REEL PROCASTER-Z153iV

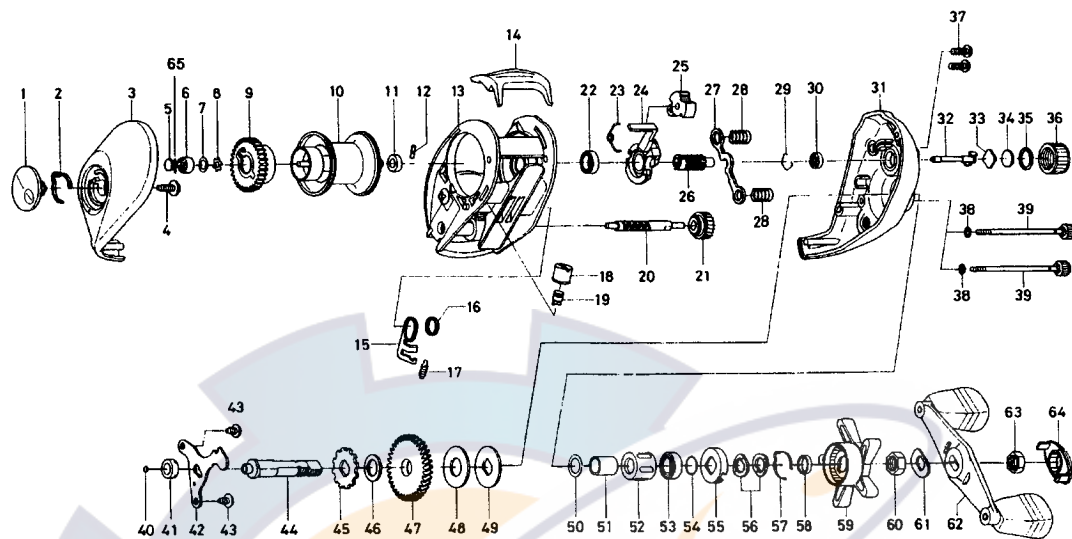

Key No. Parts No.

Parts Name

1	F40-3616	BRAKE ADJ KNOB
2	F03-2401	BRAKE CLICK SPRING
3	F64-9101	L/S PLT
4	B84-2102	BRAKE ADJ KNOB SCREW
5	374-9103	SPACER A
6	E08-8001	BALL BEARING A
7	375-3003	SPACER C
8	F41-2301	BEARING RET
9	E23-9501	MAGNET HOLDER
10-12	F64-8002	SPOOL
13	F64-8701	FRAME
14	F40-2002	CLUTCH LEVER
15	F42-8801	CLUTCH TRIP PLT
16	F44-0201	CLUTCH TRIP PLT RET
17	F63-9901	CLUTCH TRIP PLT SPRING
18	F40-2801	PAWL CAP
19	F51-6501	LINE GUIDE PAWL
20	F51-0301	WORM SHAFT
21	F67-5101	WORM SHAFT GEAR
22	B86-1701	BALL BEARING B
23	F73-1201	CLUTCH CAM SPRING
24	F64-7001	CLUTCH CAM
25	E24-9102	A/R LEVER
26	F58-3401	PINION GEAR
27	E23-7701	YOKE
28	E16-7101	YOKE SPRING
29	E21-9701	BEARING RET B
30	F05-5601	BALL BEARING C
31	E33-0402	R/S PLT
32	F65-0401	PINION SHAFT
33	B17-5401	SPOOL ADJ CAP METAL
34	B17-5503	SPACER D

Key No. Parts No.

Parts Name

35	171-5201	O RING A
36	F64-9801	CAST CONTROL CAP
37	E33-0402	SET PLT SCREW
38	B85-3101	O RING B
39	B91-1726	R/S PLT SCREW
40	F64-7201	DRIVE SHAFT WASHER
41	B35-8601	BALL BEARING D
42	F64-7301	DRIVE SHAFT RET
43	F21-2201	DRIVE SHAFT RET SCREW
44	F64-7101	DRIVE SHAFT
45	E32-7701	A/R RATCHET
46	375-7103	DRIVE SHAFT WASHER B
47	F40-2501	DRIVE GEAR
48	F60-2401	DRAG WASHER A
49	B36-0303	KEY WASHER
50	E42-5401	DRAG WASHER B
51	F40-7901	GEAR SHAFT COLLAR
52	F40-8001	ROLLER CLUTCH
53	F05-5501	BALL BEARING E
54	B55-3801	DRAG WASHER C
55	F02-8201	CLICK LEAF SPRING HOLDER
56	150-8901	DRAG SPRING WASHER
57	F03-2401	CLICK LEAF SPRING
58	B97-4901	SPACING SLEEVE
59	F40-3202	STAR DRAG
60	B43-3601	DRAG NUT
61	150-9001	FRICTION WASHER
62	F64-9001	HANDLE
63	B43-3601	HANDLE NUT
64	F40-8404	HANDLE SCREW CAP
65	374-9105	SPACER B