


# SPINNING REEL

## REGAL D1000

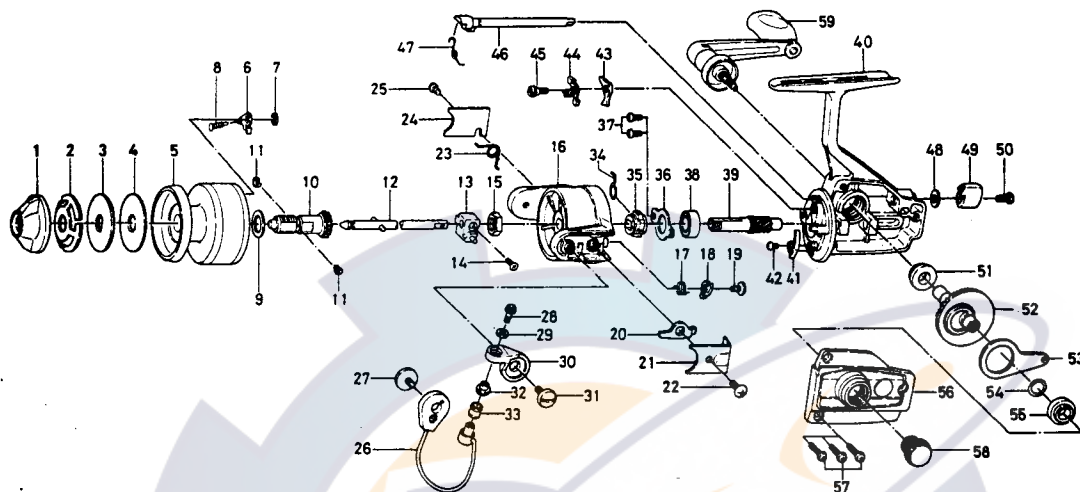

Key  
No.

Parts No.

Parts Name

|    |            |                             |                  |
|----|------------|-----------------------------|------------------|
| 1  | 6-441-5301 | Drag knob                   |                  |
| 2  | 6-151-7301 | Drag spring washer          |                  |
| 3  | 6-375-6001 | Drag D washer               |                  |
| 4  | 6-375-5902 | Disc washer                 |                  |
| 5  | 6-733-8405 | Spool                       | Sold as one unit |
| 6  | 6-807-5302 | Spool click claw            | Spool assembly   |
| 7  | 6-320-5901 | Spool click claw retainer   | 6-733-2009       |
| 8  | 6-144-1211 | Spool click claw spring     |                  |
| 9  | 6-375-5701 | Spool washer                |                  |
| 10 | 6-381-8621 | Spool metal                 |                  |
| 11 | 6-151-7211 | Spool metal leaf spring     |                  |
| 12 | 6-711-4202 | Main Shaft                  |                  |
| 13 | 6-636-7602 | Oscillating support         |                  |
| 14 | 6-812-8201 | Oscillating slider screw    |                  |
| 15 | 6-341-9201 | Rotor nut                   |                  |
| 16 | 6-202-0923 | Rotor                       |                  |
| 17 | 6-145-0701 | Bail kick cam spring        |                  |
| 18 | 6-571-0611 | Bail kick cam               |                  |
| 19 | 6-354-0701 | Bail kick cam screw         |                  |
| 20 | 6-571-0501 | Bail kick lever             |                  |
| 21 | 6-041-7021 | Bail kick lever cover       |                  |
| 22 | 6-351-7701 | Bail kick lever cover screw |                  |
| 23 | 6-145-2601 | Bail spring                 |                  |
| 24 | 6-041-6901 | Bail spring cover           |                  |
| 25 | 6-351-7701 | Bail spring cover screw     |                  |
| 26 | 6-725-8011 | Bail                        |                  |
| 27 | 6-363-4301 | Bail holder screw           |                  |
| 28 | 6-363-4411 | Bail screw                  |                  |
| 29 | 6-375-4301 | Bail washer                 |                  |
| 30 | 6-231-2821 | Arm lever                   |                  |

Key  
No.

Parts No.

Parts Name

|    |            |                                |
|----|------------|--------------------------------|
| 31 | 6-363-4301 | Arm lever screw                |
| 32 | 6-501-4411 | Roller collar                  |
| 33 | 6-250-1921 | Line roller                    |
| 34 | 6-145-0501 | Anti-reverse claw spring       |
| 35 | 6-280-8901 | Ratchet                        |
| 36 | 6-321-0801 | Ball bearing ret. washer       |
| 37 | 6-351-0901 | Ball bearing ret. washer screw |
| 38 | 6-636-6401 | Ball bearing                   |
| 39 | 6-403-0701 | Pinion gear                    |
| 40 | 6-838-2401 | Body                           |
| 41 | 6-822-3201 | Cam kick plate                 |
| 42 | 6-351-6601 | Cam kick plate screw           |
| 43 | 6-111-8301 | Anti-reverse claw              |
| 44 | 6-041-6801 | Anti-reverse claw plate        |
| 45 | 6-363-8801 | Anti-reverse claw screw        |
| 46 | 6-461-7302 | Anti-reverse cam               |
| 47 | 6-145-2701 | Anti-reverse cam spring        |
| 48 | 6-371-6903 | Anti-reverse lever washer      |
| 49 | 6-541-6801 | Anti-reverse lever             |
| 50 | 6-353-4401 | Anti-reverse lever screw       |
| 51 | 6-637-4511 | Bearing metal                  |
| 52 | 6-414-0012 | Drive gear                     |
| 53 | 6-481-1801 | Oscillating slider             |
| 54 | 6-375-8500 | Drive gear washer              |
| 55 | 6-637-4511 | Bearing metal                  |
| 56 | 6-838-2501 | Body cover                     |
| 57 | 6-353-0001 | Body cover screw               |
| 58 | 6-803-4802 | Handle screw cap               |
| 59 | 6-815-8601 | Handle                         |