


SPINNING REEL

REGAL-Z2505T

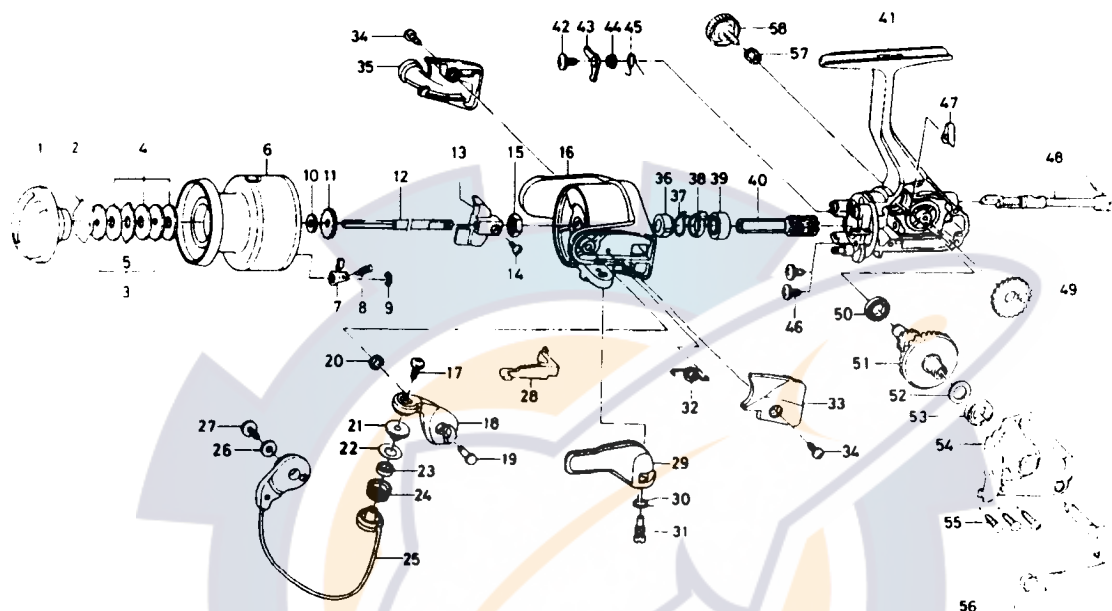

Key No.

2-9
1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18
19
20
21
22
23
24
25
26
27
28
29

Parts No.

F47-1401
F42-0905
F37-3301
E46-7201
E13-6001
F47-1801
B07-5304
E40-3101
320-5901
E46-7101
270-6501
F45-4502
E45-1401
351-0315
341-9201
F42-0805
B67-9308
F45-2701
E49-3501
320-5901
F44-6302
F44-6201
F05-5601
F45-4902
F47-1601
F40-1001
B84-2102
E45-1601
F18-0005

Parts Name

Spoof assembly
Drag knob
Drag washer retainer
Key washer
Drag washer
Eared washer
Spool assembly
Click pawl
Click spring
Click retainer
Spool washer
Click gear
Main shaft
Oscillating slider
Oscillating slider screw
Rotor nut
Rotor assembly
Line roller screw
Bail arm
Bail arm screw
Bail arm screw retainer
Line roller collar
Line roller washer
Ball bearing A
Line roller
Bail assembly
Bail holder washer
Bail trip cam screw
Bail trip lever
Trigger lever

Key No.

30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58

Parts No.

E36-9901
E41-7801
F12-8901
F31-0505
E36-4202
F31-0605
E49-2402
F38-4701
F37-5101
L03-6601
E51-9801
F46-1002
L00-1801
F37-5001
L01-4302
L00-1501
E03-7801
E32-7801
F08-5121
E45-1301
E30-6801
F17-0001
373-7805
631-6901
F46-1802
B83-5002
F49-9601
F40-4801
B92-5010

Parts Name

Trigger spring
Trigger screw
Bail spring
Bail spring cover
Bail spring cover screw
Bail trip cover
Anti-reverse ratchet
Anti-reverse pawl spring
Spring holder
Ball bearing B
Pinion gear
Body assembly
Anti-reverse pawl screw
Anti-reverse pawl
Anti-reverse pawl collar
Anti-reverse pawl spring
Bearing retainer screw
Anti-reverse cam spring
Anti-reverse lever
Oscillating gear
Ball bearing C
Drive gear
Drive gear washer
Ball bearing
Side cover
Side cover screw
Handle assembly
Handle collar
Handle lock screw