


SABAYJ3500H-JDM

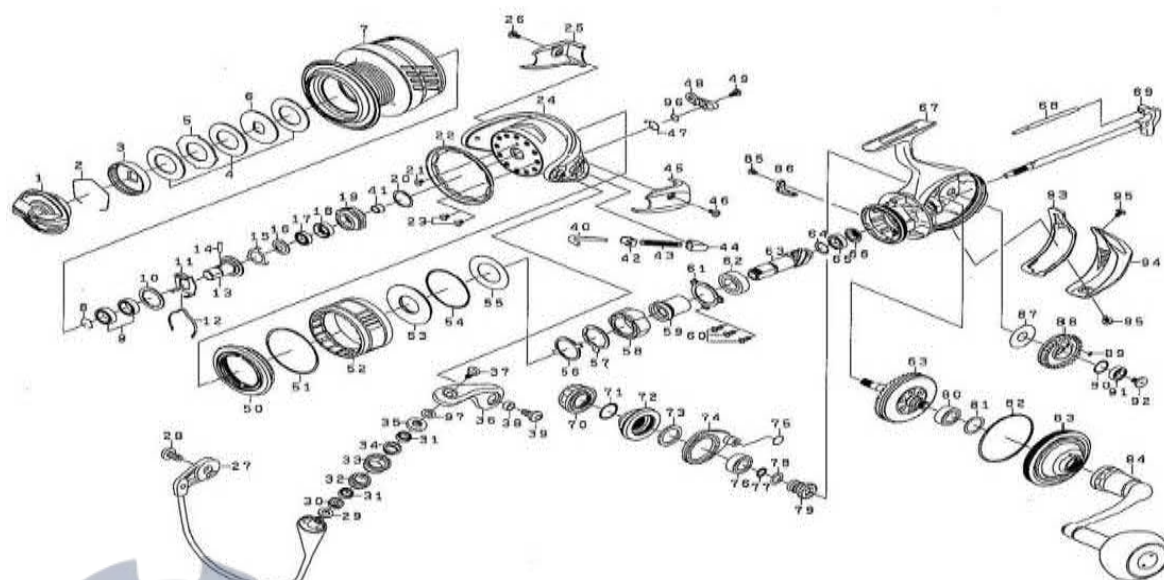

Key No.	Part No.	Part Name	Key No.	Part No.	Part Name
1	J45-8401	DRAG KNOB	50	J30-1801	MAGSEAL COVER NUT
2	F71-0001	DRAG WASHER RET	51	H17-6501	O'RING
3	F89-5305	DRAG KNOB CLICK PLATE	52	J30-1702	MAGSEAL COVER NUT
4	J39-8801	ATD-DRAG WASHER KIT	53	H61-9301	MAGNET
5	F64-4702	KEY WASHER	54	H45-2801	O'RING
6	G16-5903	EARED WASHER	55	H61-9201	WASHER
7	J45-6101	SPOOL ASSEMBLY	56	H69-0201	CLUTCH CAM RETAINER
8	G52-5101	BEARING RETAINER	57	J54-1901	CLUTCH CAM PLATE
9	G43-1004	BALL BEARING	58	G31-4501	ROLLER CLUTCH
10	G90-3901	WASHER	59	H78-2302	SPACING SLEEVE
11	G69-4001	CLICK LEAF SPRING HOLDER	60	E13-4508	SCREW
12	H73-7101	LEAF SPRING	61	G52-2901	BEARING RETAINER
13	J30-2801	SPOOL METAL	62	G52-2803	BALL BEARING
14	F64-3601	PIN	63	Z02-3232	PINION + DRIVE GEAR UNIT
15	G52-4801	BEARING RETAINER	64	G57-8501	WASHER
16	H62-1501	PACKING	65	G52-2705	BALL BEARING
17	G21-2503	BALL BEARING	66	H61-8001	COLLAR
18	J30-2501	COLLAR	67	J45-4701	BODY
19	J30-2401	ROTOR NUT	68	H63-9301	STABILIZER BAR
20	G64-5603	WASHER	69	J30-0601	MAIN SHAFT
21	H02-2701	LINE GUARD SCREW	70	J30-3301	HANDLE SCREW CAP
22	J30-2301	LINE GUARD RING	71	G16-2401	O'RING
23	H02-2701	LINE GUARD SCREW	72	J45-5001	DRIVE BEARING COVER
24	J30-2101	ROTOR	73	J30-1301	COLLAR
25	J30-2201	SIDE COVER	74	J30-0301	BODY SET PLATE
26	H43-1301	SCREW	75	J30-0401	O'RING
27	J45-5201	BAIL ASSEMBLY	76	J04-0001	BALL BEARING (MS)
28	H43-1201	SCREW	77	J18-5701	O'RING
29	B41-1703	WASHER	78	G80-0701	O'RING
30	H74-3401	MAGNET COLLAR	79	J30-0501	OSC GEAR PINION
31	G68-6903	BALL BEARING	80	J04-0001	BALL BEARIG (MS)
32	H74-3701	COLLAR D	81	G64-5603	DRIVE GEAR WASHER
33	H74-3801	LINE ROLLER	82	H50-2601	O'RING
34	H74-3901	COLLAR	83	J45-5103	BODY COVER
35	H74-4001	MAGNET COLLAR	84	J45-5501	HANDLE ASSEMBLY
36	H96-0121	ARM LEVER	85	H45-5407	SCREW
37	H74-4201	SCREW	86	H90-6201	BAIL TRIP PLATE
38	H96-2401	COLLAR	87	G64-4203	WASHER
39	H43-1201	SCREW	88	J30-4201	OSC GEAR
40	H64-0601	BAIL SPRING SHAFT	89	B85-3101	O'RING
41	J40-1401	COLLAR	90	G52-2103	WASHER
42	H57-6101	BAIL SPRING PLATE	91	G46-7102	BALL BEARING
43	H64-0701	BAIL SPRING	92	H27-2202	SCREW
44	J08-9401	BAIL SPRING HOLDER	93	J30-1901	PACKING
45	H99-4601	COVER	94	J30-2001	REAR COVER
46	H43-1301	SCREW	95	H75-3302	SCREW
47	H41-3601	BAIL TRIP LEVER SPRING	96	J33-9502	WASHER
48	H99-4401	BAIL TRIP LEVER	97	J33-9502	WASHER
49	H41-7701	SCREW B			