


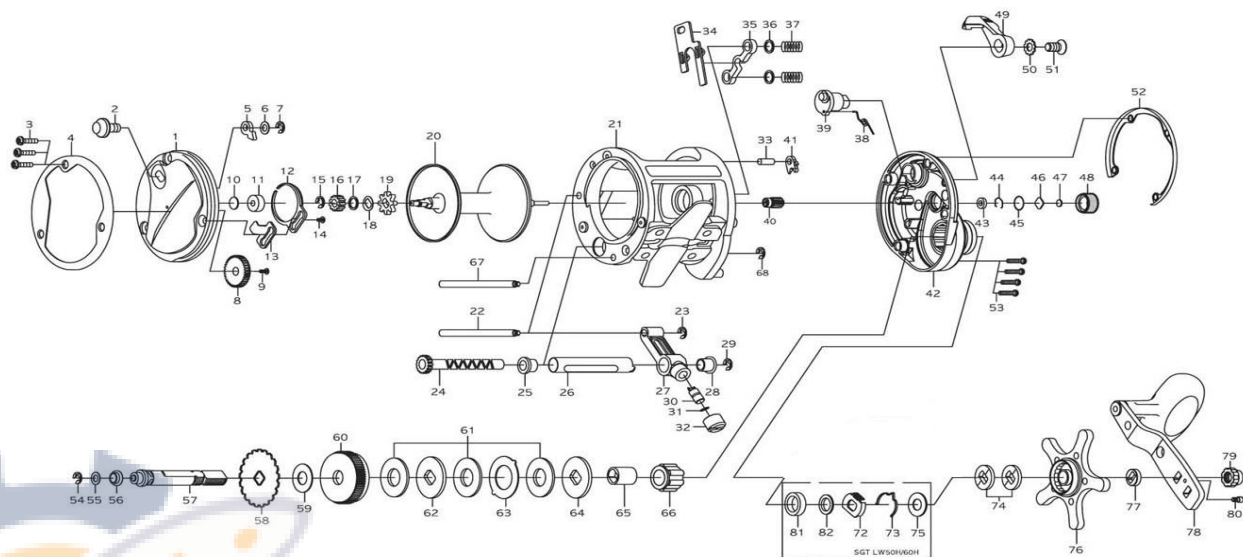

Key No.	Part No.	Part Name	Key No.	Part No.	Part Name
1	230-2540	LEFT SIDE PLATE	48	380-1891	CAST CONTROL CAP
2	330-2860	CLICK BUTTON	49	330-2750	CLUTCH LEVER
3	460-6090	LEFT SIDE PLATE SCREW	50	540-5440	CLUTCH LEVER WASHER
4	430-1330	LEFT SIDE OUTER RING	51	460-4330	CLUTCH LEVER SCREW
5	190-1140	CLICK PAWL	52	430-1350	R/S OUTER RING
6	540-4170	WASHER (A)	53	460-6080	R/S PLATE SCREW
7	200-0580	CLICK PAWL RET	54	200-0590	DRIVE SHAFT RET.
8	240-2890	IDLE GEAR	55	540-6980	DRIVE SHAFT WASHER
9	460-2150	IDLE GEAR SCREW	56	150-1760	DRIVE SHAFT BUSHING
10	540-3200	WASHER (B)	57	470-3170	DRIVE SHAFT
11	140-1880	BALL BEARING	58	240-2540	A/R RATCHET
12	510-5120	CLICK SPRING	59	540-7110	DRAG WASHER
13	410-3040	CLICK SPRING RET	60	250-1520	DRIVE GEAR
14	460-2260	CLICK SPRING SCREW	61	540-6570	DRAG WASHER
15	200-0870	SPOOL GEAR RET	62	540-6180	KEY WASHER
16	240-2230	SPOOL GEAR RET	63	540-6190	EARDE WASHER
17	540-5580	WASHER "C"	64	540-6580	WASHER
18	540-5570	CLICK SPRING WASHER	65	150-2250	COLLAR
19	240-2850	CLICK GEAR	66	140-1890	ROLLER CLUTCH
20	700-9380	SPOOL ASSEMBLY	72	410-2020	CLICK SPRING HOLDER
21	700-0750	FRAME ASSEMBLY	73	510-4540	LEAF SPRING
22	400-2710	STABILIZER BAR	74	510-4590	DRAG SPRING WASHER
23	200-0570	E-CLIP	75	540-9020	WASHER
24	470-3160	WORM SHAFT ASSEMBLY	76	320-1180	STAR DRAG
25	150-1790	WORM SHAFT HOLDER	77	210-0990	SPACING SLEEVE
26	270-0850	LEVEL WIND GUARD	78	700-9370	HANDLE ASSEMBLY
27	490-1090	LINE GUIDE ASSEMBLY	79	380-1441	HANDLE NUT
28	150-1790	WORM SHAFT HOLDER	80	460-4790	HANDLE NUT SCREW
29	200-0590	WORM SHAFT RET.	81	140-0570	BALL BEARING
30	400-2580	LINE GUIDE PALW	82	540-6250	WASHER
31	540-3980	OSC PAWL WASHER			
32	380-1740	PAWL CAP			
33	400-2560	A/R PAWL PIN			
34	410-3050	YOKE PLATE			
35	410-3030	YOKE			
36	540-5480	YOKE WASHER			
37	510-4560	YOKE SPRING			
38	510-5350	CLUTCH SPRING			
39	170-1340	CLUTCH CAM			
40	260-1960	PINION GEAR			
41	530-0790	A/R PAWL			
42	230-2530	RIGHT SIDE PLATE			
43	150-3060	BUSHING			
44	430-1060	RETAINER			
45	430-1000	O-RING			
46	540-6460	WASHER			
47	540-5980	WASHER			

SEAGATE LW60H SPECIAL PARTS		
Key No.	Part No.	Part Name
1	230-2620	LEFT SIDE PLATE
4	430-1370	LEFT SIDE OUTER RING
8	240-2900	IDLE GEAR
20	700-9280	SPOOL ASSEMBLY
21	700-0810	FRAME ASSEMBLY
22	400-2730	STABILIZER BAR
24	470-3190	WORM SHAFT ASSEMBLY
26	270-0890	LEVEL WIND GUARD
34	410-3060	YOKE PLATE
42	230-2610	RIGHT SIDE PLATE
52	430-1360	R/S OUTER RING
67	400-2730	STABILIZER BAR
68	200-0570	RET