


MULTIPLYING REEL SEALINE47SH

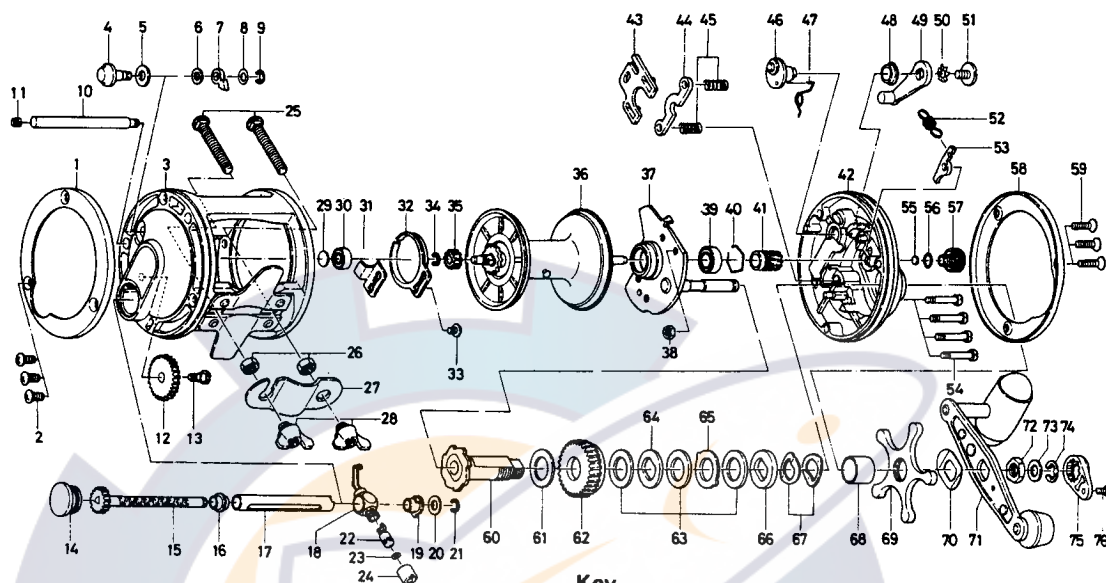

Key No.	Parts No.	Parts Name
1	B21-5401	Left side outer ring
2	354-0801	Left side plate screw
3	B21-5102	Frame assembly
4	B21-6601	Click button
5	375-9301	Click button washer
6	375-1101	Click pawl washer A
7	030-6611	Click pawl
8	373-1600	Click pawl washer B
9	320-1402	Click pawl retainer
10	B21-6301	Stabilizer bar
11	B76-3201	Stabilizer bar spring
12	B21-5801	Idle gear
13	351-1801	Idle gear screw
14	B40-6701	Left side cap
15	B21-5901	Worm shaft
16	B10-0301	Worm bearing A
17	B21-6201	Level wind guard
18	B21-6401	Line guide
19	B09-9701	Worm bearing B
20	373-1302	Worm shaft holder washer
21	320-5901	Worm shaft retainer
22	B91-2601	Line guide pawl
23	375-0800	Line guide washer
24	341-5901	Pawl cap
25	353-9801	Clamp bolt
26	341-9701	Clamp nut
27	041-5601	Rod brace
28	342-2111	Rod brace nut
29	375-7403	Spacer A
30	633-8811	Ball bearing A
31	B21-5501	Click spring retainer
32	160-7922	Click spring
33	352-9501	Click spring screw
34	320-8002	Spool gear retainer
35	403-2901	Spool gear
36	E15-1901	Spool assembly
37	B30-7901	Set plate
38	B03-7201	Set plate screw retaining nut

Key No.	Parts No.	Parts Name
39	636-6401	Ball bearing B
40	170-7701	Bearing retainer
41	E15-1601	Pinion gear
42	B21-4702	Right side plate
43	041-5701	Yoke plate
44	041-5801	Yoke
45	145-2411	Yoke spring
46	B12-0301	Clutch cam
47	145-2501	Clutch spring
48	B35-2501	Clutch lever screw holder
49	782-5401	Clutch lever
50	160-8001	Clutch lever lock washer
51	363-5301	Clutch lever screw
52	145-2801	Anti-reverse pawl spring
53	B12-0701	Anti-reverse pawl
54	B34-3301	Set plate screw
55	B75-6101	Spacer B
56	637-0601	"O" ring
57	E15-1501	Cast control cap
58	B21-4901	Right side outer ring
59	353-5204	Right side plate screw
60	B12-1101	Drive shaft
61	375-2901	Drive shaft washer
62	E15-1801	Drive gear
63	375-9903	Drag washer
64	376-3401	Key washer A
65	376-3501	Eared washer
66	375-6204	Key washer B
67	151-8701	Drag spring washer
68	B36-5101	Spacing sleeve
69	B21-5001	Star drag
70	B17-2801	Friction washer
71	B12-1603	Handle assembly
72	B26-7403	Handle nut
73	371-0605	Handle nut washer
74	320-7601	Handle nut retainer
75	B15-2301	Handle nut plate
76	351-1801	Handle nut plate screw