


STS-X300CI/X400CI/X500CI/X600CI

SEALINE REEL

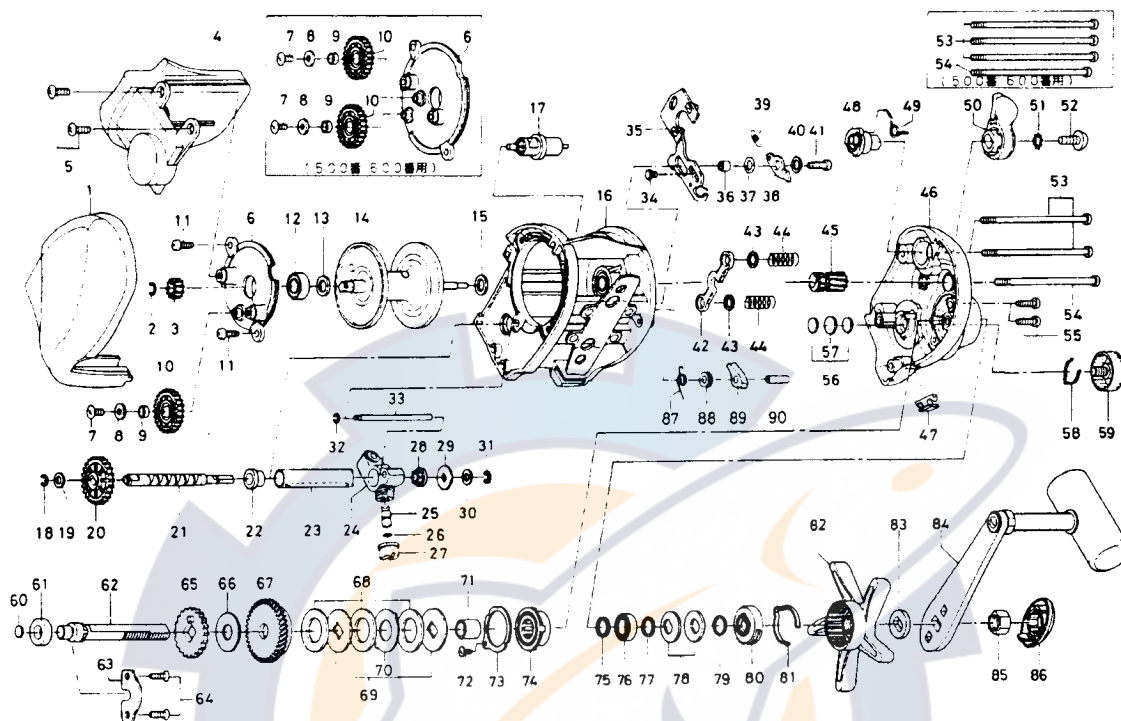

STS-X300CI

KEY NO.	PART NO.	PART NAME
76	F05-5501	HANDLE BEARING
77	F36-6801	HANDLE BEARING WASHER B
78	E25-3501	DRAG SPRING WASHER
80	F17-0501	DRAG HOLDER
81	B74-7702	DRAG HOLDER LEAF SPRING
82	F55-0408	STAR DRAG
83	E25-3901	HANDLE WASHER
84	F55-7601	HANDLE
85	B86-2101	HANDLE NUT
86	F47-1201	HANDLE NUT PLT
87	F61-8701	A/R PAWL SPRING
88	F00-8001	A/R PAWL COLLAR
89	F06-9801	A/R PAWL
90	E25-2301	A/R PAWL PIN

STS-X400CI SPECIAL PARTS

KEY NO.	PART NO.	PART NAME
1	F55-5804	L/S PLT
4	F54-1905	IC MODULE
14	F55-9301	SPOOL
16	F56-5701	FRAME
17	F55-8901	INPUT ROLLER
21	F55-8301	WORM SHAFT
23	F56-1701	WORM SHIELD
33	F55-8401	LEVEL WIND POST
53	F58-3001	R/S PLT SCREW A
54	F55-6501	R/S PLT SCREW B

STS-X500CI SPECIAL PARTS

KEY NO.	PART NO.	PART NAME
1	F56-2702	L/S PLT
4	F54-1908	IC MODULE
6	F56-3501	LEFT SET PLT
7	352-0407	CHANGE GEAR SCREW

STS-X500CI SPECIAL PARTS

KEY NO.	PART NO.	PART NAME
14	F56-5201	SPOOL
16	F56-2202	FRAME
17	F56-3301	INPUT ROLLER
21	F56-2401	WORM SHAFT
23	F56-2501	WORM SHIELD
33	F56-2601	LEVEL WIND POST
45	F55-4701	PINION GEAR
46	F56-5101	R/S PLT
53	F56-3201	R/S PLT SCREW A
54	F58-6301	R/S PLT SCREW B
67	F56-3801	DRIVE GEAR

STS-X600CI SPECIAL PARTS

KEY NO.	PART NO.	PART NAME
1	F56-2704	L/S PLT
4	F54-1911	IC MODULE
6	F56-3501	LEFT SET PLT
7	352-0407	CHANGE GEAR SCREW
14	F56-5401	SPOOL
16	F56-3902	FRAME
17	F56-4801	INPUT ROLLER
21	F56-4101	WORM SHAFT
24	F56-4201	LEVEL WIND
33	F56-4301	LEVEL WIND POST
45	F56-3701	PINION GEAR
46	F56-5101	R/S PLT
53	F56-4701	R/S PLT SCREW A
54	F58-6401	R/S PLT SCREW B
67	F56-3801	DRIVE GEAR