


Please order by parts number, not key number
Veuillez indiquer le numéro de la pièce (Non "Key" No.)

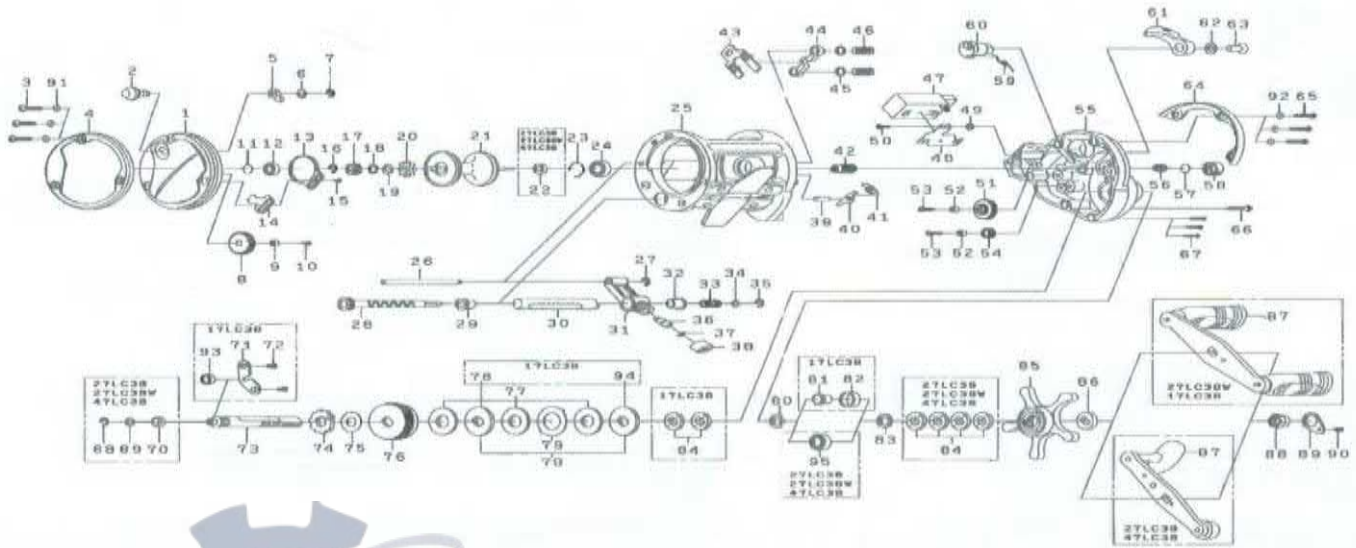

CONVENTIONAL REEL SG27LC3B/27LC3BW/47LC3B/17LC3B



KEY NO.	PART NAME	SG27LC3B PART NO.	SG27LC3BW PART NO.	SG47LC3B PART NO.	SG17LC3B PART NO.
1	LEFT SIDE PLATE	F09-3711	F09-3711	F09-3711	F09-3711
2	CLICK BUTTON	B21-6602	B21-6602	B21-6602	B21-6602
3	LEFT SIDE PLATE SCREW	G00-3601	G00-3601	G00-3601	G00-3601
4	LEFT SIDE OUTER RING	F09-3903	F09-3903	F09-3903	F09-3903
5	CLICK PAWL	030-6611	030-6611	030-6611	030-6611
6	WASHER(A)	373-1800	373-1800	373-1800	373-1800
7	CLICK PAWL RETAINER	320-1402	320-1402	320-1402	320-1402
8	IDLE GEAR	B21-5801	B21-5801	B21-5801	B21-5801
9	IDLE GEAR COLLAR	B65-6201	B65-6201	B65-6201	B65-6201
10	IDLE GEAR SCREW	E10-7401	E10-7401	E10-7401	E10-7401
11	WASHER(B)	375-7405	375-7405	375-7405	375-7405
12	BALL BEARING(A)	637-2102	637-2102	637-2102	637-2102
13	CLICK SPRING	E36-1402	E36-1402	E36-1402	E36-1402
14	CLICK SPRING RETAINER	B21-5501	B21-5501	B21-5501	B21-5501
15	CLICK SPRING SCREW	B63-4402	B63-4402	B63-4402	B63-4402
16	SPOOL SHAFT RETAINER	320-8002	320-8002	320-8002	320-8002
17	SPOOL GEAR	403-2901	403-2901	403-2901	403-2901
18	WASHER(C)	E15-4801	E15-4801	E15-4801	E15-4801
19	CLICK SPRING WASHER	E36-1402	E36-1402	E36-1402	E36-1402
20	CLICK GEAR	B21-5701	B21-5701	B21-5701	B21-5701
21	SPOOL	E67-2501	E67-2501	E67-2501	E67-2501
22	BUSHING(B)	C38-7401	C38-7401	C38-7401	C38-7401
23	BUSHING RETAINER	B27-0501	B27-0501	B27-0501	B27-0501
24	BALL BEARING	E16-2801	E16-2801	E16-2801	E16-2801
25	FRAME ASSEMBLY	E67-2301	E67-2301	E67-2301	E67-2301
26	STABILIZER BAR	F09-3001	F09-3001	F09-3001	F09-3001
27	STABILIZER BAR RETAINER	320-5501	320-5501	320-5501	320-5501
28	WORM SHAFT ASSEMBLY	F09-5601	F09-5601	F09-5601	F09-5601
29	WORM SHAFT HOLDER(A)	E14-4801	E14-4801	E14-4801	E14-4801
30	LEVEL WIND GUARD	F09-2801	F09-2801	F09-2801	F09-2801
31	LINE CLAMP	E36-2401	E36-2401	E36-2401	E36-2401
32	WORM SHAFT HOLDER(B)	E14-4801	E14-4801	E14-4801	E14-4801
33	COUNTER GEAR(A)	F09-2501	F09-2501	F09-2501	F09-2501
34	WORM SHAFT HOLDER	E34-1702	E34-1702	E34-1702	E34-1702
35	WORM SHAFT RETAINER	320-5501	320-5501	320-5501	320-5501
36	LINE GUIDE PAWL	122-0801	122-0801	122-0801	122-0801
37	CLUTCH WASHER	F09-6201	F09-6201	F09-6201	F09-6201
38	PAWL CAP	E35-4101	E35-4101	E35-4101	E35-4101
39	ANTI-REVERSE PAWL PIN	E25-2301	E25-2301	E25-2301	E25-2301
40	ANTI-REVERSE PAWL SPR	B62-8801	B62-8801	B62-8801	B62-8801
41	ANTI-REVERSE PAWL SPR	E23-4201	E23-4201	E23-4201	E23-4201
42	PINION GEAR	F13-5401	F13-5401	F13-5401	F13-5401
43	YOKE	E09-3101	E09-3101	E09-3101	E09-3101
44	YOKE	E25-9101	E25-9101	E25-9101	E25-9101
45	YOKE WASHER	E03-7706	E03-7706	E03-7706	E03-7706
46	YOKE SPRING	E33-5301	E33-5301	E33-5301	E33-5301
47	COUNTER ASSEMBLY	F09-2101	F09-2101	F09-2101	F09-2101
48	COUNTER PLATE	E24-1801	E24-1801	E24-1801	E24-1801
49	COUNTER WASHER	373-1300	373-1300	373-1300	373-1300
50	COUNTER SCREW	E31-6701	E31-6701	E31-6701	E31-6701
51	COUNTER GEAR(B)	E24-1901	E24-1901	E24-1901	E24-1901
52	COUNTER GEAR COLLAR	B65-6201	B65-6201	B65-6201	B65-6201
53	COUNTER GEAR SCREW	E10-7401	E10-7401	E10-7401	E10-7401
54	COUNTER GEAR(C)	F09-2201	F09-2201	F09-2201	F09-2201
55	RIGHT SIDE PLATE	E07-3202	E07-3202	E07-3202	E07-3202
56	SPOOL TENSION SPRING	B93-6601	B93-6601	B93-6601	B93-6601
57	WASHER(D)	375-7405	375-7405	375-7405	375-7405
58	CAST CONTROL CAP	B93-6702	B93-6702	B93-6702	B93-6702
59	CLUTCH SPRING	E32-2301	E32-2301	E32-2301	E32-2301
60	CLUTCH CAM	F09-2001	F09-2001	F09-2001	F09-2001
61	CLUTCH LEVER	E42-8802	E42-8802	E42-8802	E42-8802
62	CLUTCH LEVER LOCK WAS	160-8001	160-8001	160-8001	160-8001
63	CLUTCH LEVER SCREW	E00-7802	E00-7802	E00-7802	E00-7802
64	RIGHT SIDE PLATE SCREW	F09-3601	F09-3601	F09-3601	F09-3601
65	RIGHT SIDE PLATE SCREW	B00-9702	B00-9702	B00-9702	B00-9702
66	RIGHT SIDE PLATE SCREW	E11-0501	E11-0501	E11-0501	E11-0501
67	DRIVE SHAFT RETAINER	320-7602	320-7602	320-7602	320-7602
68	DRIVE SHAFT WASHER(A)	375-6805	375-6805	375-6805	375-6805
69	DRIVE SHAFT BUSHING	E25-2501	E25-2501	E25-2501	E25-2501
70	DRIVE SHAFT PLATE	-	-	-	-
71	DRIVE SHAFT PLATE SCRE	-	-	-	-
72	DRIVE SHAFT	-	-	-	-
73	CLUTCH WHEEL	E25-2601	E25-2601	E25-2601	E25-2601
74	DRIVE SHAFT WASHER(B)	E25-2601	E25-2601	E25-2601	E25-2601
75	DRIVE SHAFT	374-6504	374-6504	374-6504	374-6504
76	DRIVE SHAFT	F09-3503	F09-3503	F09-3503	F09-3503
77	DRAG WASHER	E32-6503	E32-6503	E32-6503	E32-6503
78	KEY WASHER(A)	E20-0301	E20-0301	E20-0301	E20-0301
79	WASHER	375-3101	375-3101	375-3101	375-3101
80	WASHER(B)	373-7808	373-7808	373-7808	373-7808
81	SPACING SLEEVE(A)	-	-	-	-
82	BUSHING(C)	-	-	-	-
83	WASHER(F)	373-7807	373-7807	373-7807	373-7807
84	DRAG SPRING WASHER	E25-3501	E25-3501	E25-3501	E25-3501
85	TAR DRAG	E25-3501	E25-3501	E25-3501	E25-3501
86	SPACING SLEEVE(B)	E25-3501	E25-3501	E25-3501	E25-3501
87	HANDLE ASSEMBLY	E67-2401	E67-2401	E67-2401	E67-2401
88	HANDLE NUT	G79-3314	G79-3314	G79-3314	G79-3314
89	HANDLE NUT PLATE	G40-3218	G40-3218	G40-3218	G40-3218
90	HANDLE NUT PLATE SCRE	353-6302	353-6302	353-6302	353-6302
91	WASHER(G)	B66-3001	B66-3001	B66-3001	B66-3001
92	WASHER(H)	B65-3001	B65-3001	B65-3001	B65-3001
93	BALL BEARING(C)	-	-	-	-
94	KEY WASHER(B)	-	-	-	-
95	BALL BEARING(D)	G82-3401	G82-3401	G82-3401	G82-3401