


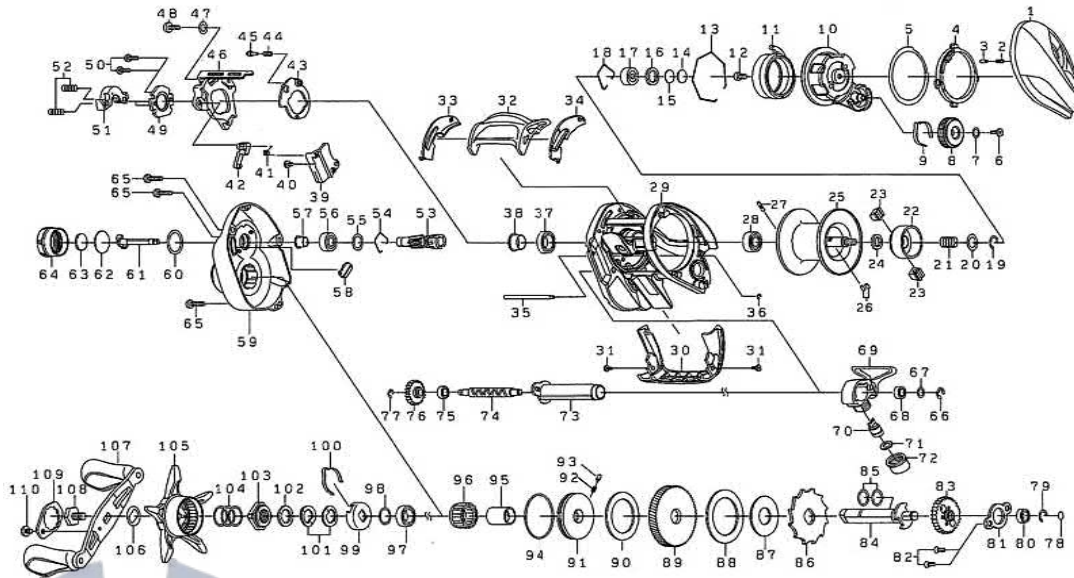

BAITCASTING REEL

Please order by parts number, not key number
Veuillez indiquer le numéro de la pièce (Non "Key" No.)

STEEZATW1016HL/1016SHL



Key No.	Part No.	Part Name	Key No.	Part No.	Part Name
1	J44-4501	RIGHT SIDE PLATE	59	J44-3801	LEFT SIDE PLATE
2	J28-6201	LEVER PLATE SPRING	60	J27-9701	SPOOL ADJ. CAP O'RING
3	J28-6301	LEVER PLATE PIN	61	J19-8801	PINION SHAFT
4	J44-4901	LEVER PLATE (A)	62	H16-1001	SPOOL ADJ. CAP WASHER (A)
5	J28-6101	LEVER PLATE (B)	63	B17-5503	SPOOL ADJ. CAP WASHER (B)
6	G94-0402	SCREW	64	J27-9602	SPOOL ADJ. CAP
7	H15-9201	WASHER O	65	G04-0822	L/S PLATE SCREW
8	J28-2602	BRAKE ADJ KNOB	66	320-5901	WORM SHAFT RETAINER
9	H66-3401	BRAKE CLICK SPRING	67	B41-1702	WORM SHAFT WASHER
10	J44-4701	SET PLATE ASSEMBLY	68	G46-9001	WORM SHAFT BEARING
11	J29-6701	MAGNET HOLDER	69	J44-2501	LEVEL WIND
12	H66-6002	SET PLATE SCREW	70	121-4212	OSC PAWL
13	J31-5701	RIGHT SIDE PLATE	71	373-1303	OSC PAWL WASHER
14	375-7404	R/S BB WASHER (A)	72	F40-2801	OSC PAWL HOLDER NUT
15	375-7411	R/S BB WASHER (B)	73	J33-3801	WORM SHAFT GUARD
16	G18-5101	R/S BB WASHER O	74	J24-3601	WORM SHAFT
17	G51-1506	R/S BALL BEARING	75	G46-9001	WORM SHAFT BEARING
18	F03-2201	R/S BEARING RETAINER	76	J28-1401	WORM SHAFT GEAR
19	320-8202	SPOOL SPRING RETAINER	77	B33-9801	WORM SHAFT GER RETAINER
20	G15-0301	SPOOL SPRING WASHER	78	G09-9801	DRIVE SHAFT WASHER
21	H53-7301	SPOOL SPRING	79	320-8002	DRIVE SHAFT RETAINER
22	H16-7801	SPOOL INDUCT ROTOR	80	G46-6201	DRIVE SHAFT BALL BEARING
23	H45-4901	SPOOL COLLAR	81	J28-1101	DRIVE SHAFT PLATE (A)
24	F57-4303	SPOOL SPACER	82	E13-4509	DRIVE SHAFT PLATE SCREW
26	H66-5301	SPOOL PIN HOLDER	83	J28-1001	WORM GEAR
27	J25-2301	SPOOL PIN	84	J44-2402	DRIVE SHAT
28	G49-8511	BALL BEARING	85	F65-7801	DRIVE SHAFT O'RING
19-28	Z02-3246	SPOOL ASSEMBLY	86	H66-0901	RATCHET
29	J44-4001	FRAME	87	H66-1101	RATCHET WASHER
30	J28-1802	FRONT PLATE	88	H66-1001	DRIVE GEAR WASHER
31	H53-1508	FRONT PLATE SCREW	90	H35-9001	DRAG WASHER
32	J44-2301	CLUTCH LEVER	91	J44-3001	DRAG DISK WASHER
33	J44-2101	CLUTCH LEVER PLATE *	92	J41-0801	DRAG DISK WASHER PIN SPRING
34	J44-2201	CLUTCH LEVER PLATE (L)	93	J41-0901	DRAG DISK WASHER PIN
35	J28-1902	STABILIZER BAR	94	J45-8101	DRAG DISK WASHER O'RING
36	H70-4101	STABILIZER BAR RETAINER	95	G01-1401	DRIVE SHAFT COLLAR
37	G43-1002	BALL BEARING	96	G81-9801	ROLLER CLUTCH
38	H26-6601	CLUTCH CAM BEARING COLLAR	97	G43-1002	BALL BEARING
39	J33-3601	KICK LEVER PLATE (A)	98	B55-3801	BALL BEARING WASHER
40	H53-1508	PLATE SCREW	99	F02-8203	CLICK LEAF SPRING HOLDER
41	J40-7801	KICK LEVER PLATE SPRING	100	F03-2401	CLICK LEAF SPRING
42	J33-3701	KICK LEVER	101	150-8901	SPRING WASHER
43	J33-3501	CLUTCH CAM PLATE	102	H92-9501	STAR DRAG WASHER
44	H92-8801	CLUTCH CAM PLATE SPRING	103	J14-1002	DRAG NUT
45	J05-5201	CLUTCH CAM PLATE PIN	104	J01-1901	DRAG NUT SPRING
46	J33-3001	CLUTCH CAM	105	J14-0004	STAR DRAG
47	H15-9201	CLUTCH CAM PLATE WASHER (A)	106	F57-6601	HANDLE WASHER
48	352-2510	CLUTCH CAM PLATE SCREW	107	J45-8201	HANDLE
49	H65-9101	KICK LEVER PLATE (B)	108	J29-5502	HANDLE SCREW
50	B03-2904	KICK LEVER PLATE (B) SCREW	109	H83-4508	HANDLE NUT PLATE
51	H94-4401	PINION YOKE	110	G83-5501	HANDLE NUT PLATE SCREW
52	J31-3901	PINION YOKE SPRING			
53+89	Z02-3302	PINION + DRIVE GEAR UNIT			
54	H44-8401	PINION BB RETAINER			
55	J07-3501	PINION BB RETAINER WASHER			
56	J01-9301	PINION BALL BEARING			
57	H15-9502	PINON BEARING COLLAR			
58	H44-0201	CLUTCH CAM SP COVER PLATE			

Key No.	Part No.	Part Name
53+89	Z02-3410	PINION + DRIVE GEAR UNIT
59	J44-3802	LEFT SIDE PLATE
109	H83-4504	HANDLE NUT PLATE

SPECIAL PARTS STEEZATW1016SHL