



Key No.	Part No.	Part Name	Key No.	Part No.	Part Name
1	J45-8301	LEFT SIDE PLATE	58	H44-0201	CLUTCH CAM SP COVER PLATE
2	J28-6201	LEVER PLATE SPRING	59	J44-1601	RIGHT SIDE PLATE
3	J28-6301	LEVER PLATE PIN	60	J27-9701	SPOOL ADJ. CAP O'RING
4	J44-3301	LEVER PLATE (A)	61	J19-8801	PINION SHAFT
5	J28-6101	LEVER PLATE (B)	62	H16-1001	SPOOL ADJ. CAP WASHER (A)
6	G94-0402	BRAKE DIAL SCREW	63	B17-5503	SPOOL ADJ. CAP WASHER (B)
7	H15-9201	BRAKE DIAL WASHER	64	J27-9602	CAST CONTROL CAP
8	J28-2603	BRAKE DIAL	65	G04-0822	R/S PLATE SCREW
9	H66-3401	BRAKE DIAL LEAF SPRING	66	320-5901	WORM SHAFT RETAINER
10	J44-3101	SET PLATE ASSEMBLY	67	B41-1702	WORM SHAFT WASHER
11	J29-6701	MAG HOLDER	68	G46-9001	WORM SHAFT BEARING
12	H66-6002	SET PLATE SCREW	69	J44-2501	LEVEL WIND
13	J31-5701	MAG HOLDER RETAINER	70	121-4212	OSC PAWL
14	375-7404	L/S BB WASHER (A)	71	373-1303	OSC PAWL WASHER
15	375-7411	L/S BB WASHER (B)	72	F40-2801	OSC PAWL HOLDER NUT
16	G18-5101	L/S BB WASHER ©	73	J28-1501	WORM SHAFT GUARD
17	G51-1506	L/S BALL BEARING	74	J24-3601	WORM SHAFT
18	F03-2201	L/S BEARING RETAINER	75	G46-9001	WORM SHAFT BEARING
19	320-8202	SPOOL SPRING RETAINER	76	J28-1401	WORM SHAFT GEAR
20	G15-0301	SPOOL SPRING WASHER	77	B33-9801	WORM SHAFT GEAR RETAINER
21	H53-7301	SPOOL SPRING	78	G09-9801	DRIVE SHAFT WASHER
22	H16-7801	SPOOL INDUCT ROTOR	79	320-8002	DRIVE SHAFT RETAINER
23	H45-4901	SPOOL COLLAR	80	G46-6201	DRIVE SHAFT BALL BEARING
24	F57-4303	SPOOL WASHER	81	J28-1101	DRIVE SHAFT PLATE (A)
19-28	Z02-3246	SPOOL ASSEMBLY	82	E13-4509	DRIVE SHAFT PLATE SCREW
26	H66-5301	SPOOL HOLDER PIN	83	J28-1001	WORM GEAR
27	J25-2301	SPOOL PIN	84	J44-2401	DRIVE SHAFT
28	G49-8511	SPOOL BALL BEARING	85	F65-7801	DRIVE SHAFT O'RING
29	J44-1901	FRAME	86	H66-0901	RATCHET
30	J28-1802	FRONT PLATE	87	H66-1101	RATCHET WASHER
31	H53-1508	FRONT PLATE SCREW	88	H66-1001	DRIVE GEAR WASHER
32	J44-2301	CLUTCH LEVER	90	H35-9001	DRAG WASHER
33	J44-2101	CLUTCH LEVER *	91	J44-3001	DRAG DISK WASHER
34	J44-2201	CLUTCH LEVER (L)	92	J41-0801	DRAG DISK WASHER PIN SPRING
35	J28-1902	STABILIZER BAR	93	J41-0901	DRAG DISK WASHER PIN
36	H70-4101	STABILIZER BAR RETAINER	94	J45-8101	DRAG DISK WASHER O'RING
37	G43-1002	CLUTCH CAM BALL BEARING	95	G01-1401	DRIVE SHAFT COLLAR
38	H26-6601	CLUTCH CAM BEARING COLLAR	96	G81-9801	ROLLER CLUTCH
39	J28-0501	KICK LEVER PLATE (A)	97	G43-1002	BALL BEARING
40	H53-1508	KICK LEVER PLATE SCREW	98	B55-3801	BALL BEARING WASHER
41	J40-7701	KICK LEVER PLATE SPRING	99	F02-8203	CLICK LEAF SPRING HOLDER
42	J28-0801	KICK LEVER	100	F03-2401	CLICK LEAF SPRING
43	J28-0401	CLUTCH CAM PLATE	101	150-8901	SPRING WASHER
44	H92-8801	CLUTCH CAM PLATE SPRING	102	H92-9501	STAR DRAG WASHER
45	J05-5201	CLUTCH CAMPLATE PIN	103	J14-1001	DRAG NUT
46	J29-6001	CLUTCH CAM	104	J01-1901	DRAG NUT SPRING
47	H15-9201	CLUTCH CAM PLATE WASHER (A)	105	J14-0004	STAR DRAG
48	352-2510	CLUTCH CAM PLATE SCREW	106	F57-6601	HANDLE WASHER
49	H65-9101	KICK LEVER PLATE (B)	107	J45-8201	HANDLE
50	B03-2904	KICK LEVER PLATE (B) SCREW	108	J29-5502	HANDLE SCREW
51	H92-9001	PINION YOKE	109	H83-4508	HANDLE NUT PLATE
52	J31-3901	PINION YOKE SPRING	110	G83-5501	HANDLE NUT PLATE SCREW
53+89	Z02-3243	PINION + DRIVE GEAR UNIT			
54	H44-8401	PINION BB RETAINER			
55	J07-3501	PINION BB WASHER			
56	J01-9301	PINION BALL BEARING			
57	H15-9502	PINION BEARING COLLAR			

Key No.	Part No.	Part Name
53+89	Z02-3312	PINION + DRIVE GEAR UNIT
59	J44-1602	LEFT SIDE PLATE
109	H83-4504	HANDLE NUT PLATE

SPECIAL PARTS STEEZATW1016SH		
Key No.	Part No.	Part Name
53+89	Z02-3312	PINION + DRIVE GEAR UNIT
59	J44-1602	LEFT SIDE PLATE
109	H83-4504	HANDLE NUT PLATE