


Please order by parts number, not key number
Veuillez indiquer le numéro de la pièce (Non "Key" No.)



BAITCASTING REEL

T3-1016HL/T3-1016SHL

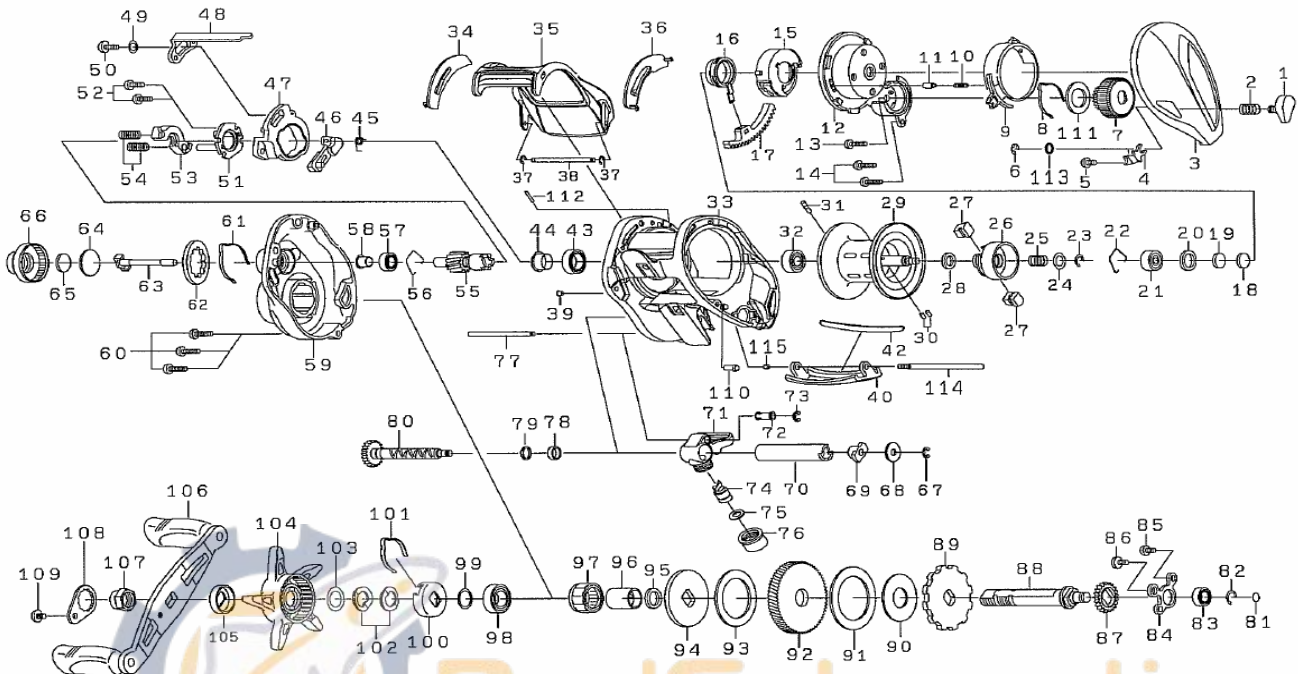

Key No.	Parts No.	Parts Name	Key No.	Parts No.	Parts Name
1	H67-1501	Push button As	68	373-1306	Worm shaft washer
2	I166-4001	Spring	69	F79-5801	Worm shaft spacer (A)
3	H67-1001	Right side plate	70	H68-8701	Level wind guard
4	H67-1701	Plate (A)	71	H66-0201	T Level wind
5	H58-5401	Screw (A)	72	H16-8701	Line guide collar
6	B86-1101	Retainer (A)	73	B86-1101	Line guide retainer
7	H66-3303	Brake adjusting knob (A)	74	H66-0801	Line guide pawl
8	H66-3401	Brake click spring	75	373-1300	Washer (C)
9	H67-1101	Brake adjusting knob (B)	76	F10-2801	Line guide nut
10	H77-5901	Brake adjusting knob spring	77	H66-0401	Stabilizer bar (B)
11	H28-5601	Brake adjusting knob pawl	78	F64-8301	Worm shaft bearing
12	H67-1301	Right set plate (A)	79	E09-6504	Worm shaft bearing (B)
13	H16-3101	Set plate screw (A)	80	H66-0501	Worm shaft
14	H66-6001	Set plate screw (B)	81	G09-9800	Washer (D)
15	I128-4501	Right set plate (B)	82	320-8002	Retainer (C)
16	H66-3701	Magnet holder	83	G53-8004	Ball bearing (D)
17	H66-3501	Magnet holder gear	84	H66-0101	Plate (B)
18	375-7400	Spacer (A)	85	G17-1402	Screw (C)
19	375-7411	Spacer (B)	86	G19-3701	Screw (D)
20	G18-5101	Spacer (C)	87	H66-0001	Drive shaft gear
21	G51-1507	Ball bearing (A)	88	H65-9902	Drive shaft
22	I178-6801	Bearing retainer (A)	89	I166-0901	Clutch wheel
23-32	Z02-0476	Spool assembly	90	H66-1101	Drive shaft washer (A)
33	H67-0401	Frame	91	H66-1001	Drive shaft washer (B)
34	H65-9201	Spacer (D)	92	H67-0801	Drive gear
35	I165-9401	Twing	93	I135-9001	Drag washer
36	H65-9301	Spacer (E)	94	H66-1401	Key washer
37	H70-4101	Retainer (B)	95	B55-3803	Washer (F)
38	H65-8801	Stabilizer bar (A)	96	H58-1101	Gear shaft collar
39	H65-8801	Collar	97	G81-9801	Roller clutch
40	H67-1801	Front plate	98	G52-3401	Ball bearing (E)
42	H66-2501	Front name plate	99	373-7813	Washer (F)
43	G13-1006	Ball bearing (B)	100	F02-8203	Click leaf spring holder
44	H26-6601	Ball bearing collar (A)	101	F03-2401	Click leaf spring (B)
45	I167-0501	Clutch cam spring	102	150-8901	Drag spring washer
46	H60-2301	Clutch trip lever	103	G69-4201	Washer (G)
47	H68-8201	Clutch cam	104	H66-1502	Star drag
48	H67-0601	Clutch cam plate (A)	105	H66-1701	Handle collar
49	I115-9201	Washer (A)	106	I166-1801	Handle assembly
50	G19-3701	Screw (B)	107	G79-3310	Handle screw (A)
51	H65-9101	Clutch cam plate (B)	108	040-3201	Handle screw plate
52	H58-1001	Clutch cam screw	109	353-8301	Handle screw (B)
53	I168-8301	Yoke	110	I179-1001	Pin (A)
54	H58-2001	Yoke spring	111	G46-8003	Washer (H)
55	H67-0701	Pinion gear	112	H75-3001	Pin (B)
56	L21-9701	Bearing retainer (B)	113	F03-7402	Washer (J)
57	G46-8204	Ball bearing (C)	114	H76-2401	Stabilizer bar (C)
58	H15-9501	Ball bearing collar (B)	115	H76-2301	Nut
59	H67-0101	Left side plate			
60	H66-2201	Left side plate screw			
61	F28-2701	Click leaf spring (A)			
62	F62-5502	Washer (B)			
63	H15-9801	Pinion shaft			
64	H44-9401	Spacer (F)			
65	B17-5503	Spacer (G)			
66	H71-4301	Cast control cap			
67	320-5901	Worm shaft retainer			

■T31016SHL		
Key No.	Parts No.	Parts Name
55	H68-8401	Pinion gear
59	H67-0102	Left side plate
66	H71-4302	Cast control cap
92	H68-8501	Drive gear
108	040-3206	Handle screw plate