

# PARTS DIAGRAM & PARTS LIST


## ENGINE MOUNT

### 12 VOLT

The parts diagram and parts list provides Minn Kota® WEEE compliance disassembly instructions. For more information about where you should dispose of your waste equipment for recycling and recovery and/or your European Union member state requirements, please contact your dealer or distributor from which your product was purchased. Tools required, but not limited to: flat head screwdriver, Phillips screwdriver, socket set, pliers, wire cutters.

### ENGINE MOUNT MOTOR

## Engine Mount Parts Diagram

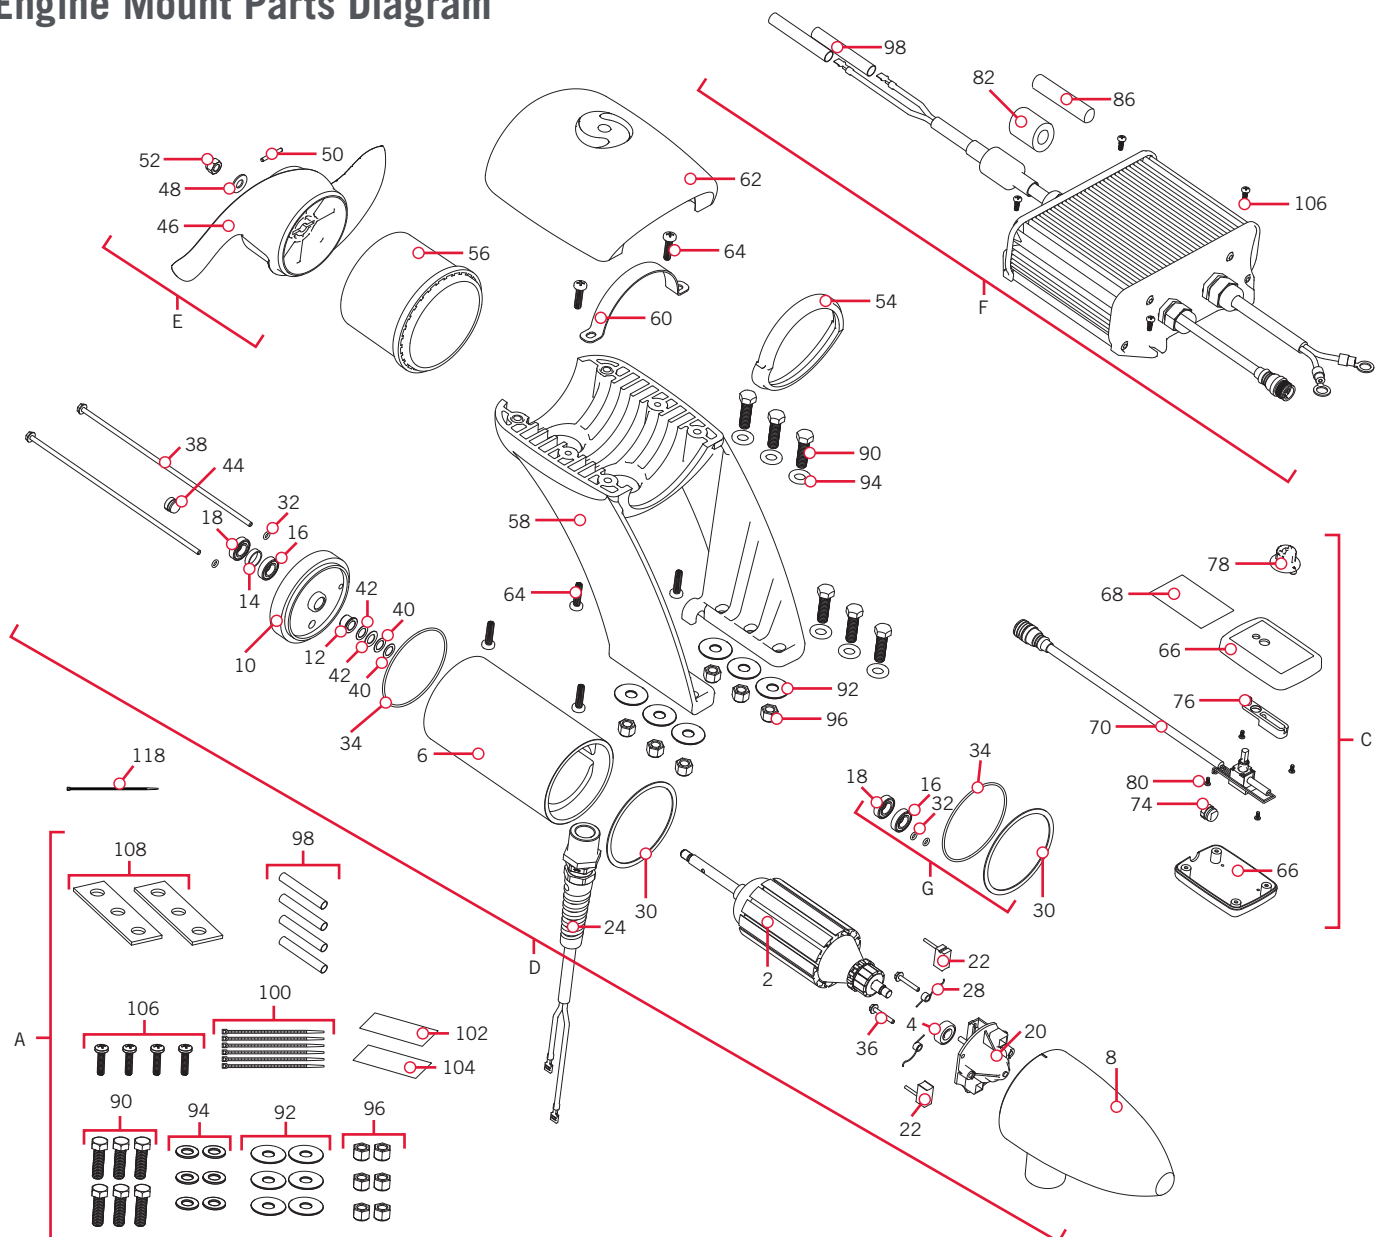

## Engine Mount Parts List

| Assembly | Part #     | Description                         | Quantity |
|----------|------------|-------------------------------------|----------|
| A        | 2994856    | BAG ASSY, EM                        | 1        |
| C        | 2990239    | HAND CONTROLLER ASSY, EM            | 1        |
| D        | 2387102    | MTR ASY 12V 3.625 55# FW "EM"       | 1        |
| E        | 1378170    | PROP KIT PWR PRP                    | 1        |
| F        | 2990246    | CTRL MOD ASY 12V, SINGLE            | 1        |
| G        | 2888460    | SEAL & O-RING KIT TURBO PRO *3.625* | 1        |
| Item     | Part #     | Description                         | Quantity |
| 2        | 2-100-207  | ARM ASY 12V 3.62 55#EM/LS           | 1        |
| 4        | 140-010    | BEARING - BALL                      | 1        |
| 6        | 2-200-101A | CTR HSG ASY 3.62 TX-MGNTZ           | 1        |
| 8        | 421-101    | BRSH END HSG 3.62 FW "EM"           | 1        |
| 10       | 2-400-166  | PLAIN END HSG 3.625 "EM"            | 1        |
| 12       | 144-049    | BEARING - FLANGE                    | 1        |
| 14       | 725-035    | PAPER TUBE - SEAL BORE              | 1        |
| 16       | 880-003    | SEAL                                | 1        |
| 18       | 880-006    | SEAL WITH SHIELD                    | 1        |
| 20       | 2-600-168  | BRUSH PLATE ASSEMBLY- 3.625 EM      | 1        |
| 22       | 188-036    | BRUSH ASSEMBLY 3.625                | 2        |
| 24       | 640-233    | LEADWIRE ASSEMBLY 10 AWG            | 1        |
| 28       | 975-040    | SPRING - TORSION                    | 2        |
| 30       | 337-036    | GASKET                              | 1        |
| 32       | 701-008    | O-RING                              | 2        |
| 34       | 701-081    | O-RING                              | 1        |
| 36       | 830-007    | SCREW, # 8-32                       | 2        |
| 38       | 830-042    | THRU BOLT 10-32 X 8.83              | 2        |
| 40       | 990-067    | WASHER - STEEL THRUST               | 2        |
| 42       | 990-070    | WASHER - NYLATRON                   | 2        |
| 44       | 836-001    | PLUG ALUMINUM 1/8 X 27 NPT          | 1        |
| 46       | 2091170    | PROP-PWR (3 5/8") REAMED            | 1        |
| 48       | 2151726    | WASHER-5/16 STD (S/S)               | 1        |
| 50       | 2092600    | PIN-DRIVE 1.06" LG (SS)             | 1        |
| 52       | 2053101    | NUT-PROP,NYLOC (MED) 5/16 SS        | 1        |
| 54       | 2381530    | ADAPTER RING, FRONT                 | 1        |
| 56       | 2381535    | ADAPTER RING, REAR                  | 1        |
| 58       | 2381940    | BRACKET, LOWER MOUNT                | 1        |
| 60       | 2383810    | STRAP, EM                           | 1        |
| 62       | 2380215    | CAP-TOP (EM) FW                     | 1        |

✖ This part is included in an assembly and cannot be ordered individually.

▲ Not shown on Parts Diagram.

////////////////////////////////////

✖ This part is included in an assembly and cannot be ordered individually.  
 ▲ Not shown on Parts Diagram.