

PARTS DIAGRAM & PARTS LIST


ENGINE MOUNT

24 VOLT

The parts diagram and parts list provides Minn Kota® WEEE compliance disassembly instructions. For more information about where you should dispose of your waste equipment for recycling and recovery and/or your European Union member state requirements, please contact your dealer or distributor from which your product was purchased. Tools required, but not limited to: flat head screwdriver, Phillips screwdriver, socket set, pliers, wire cutters.

ENGINE MOUNT MOTOR

Engine Mount Parts Diagram

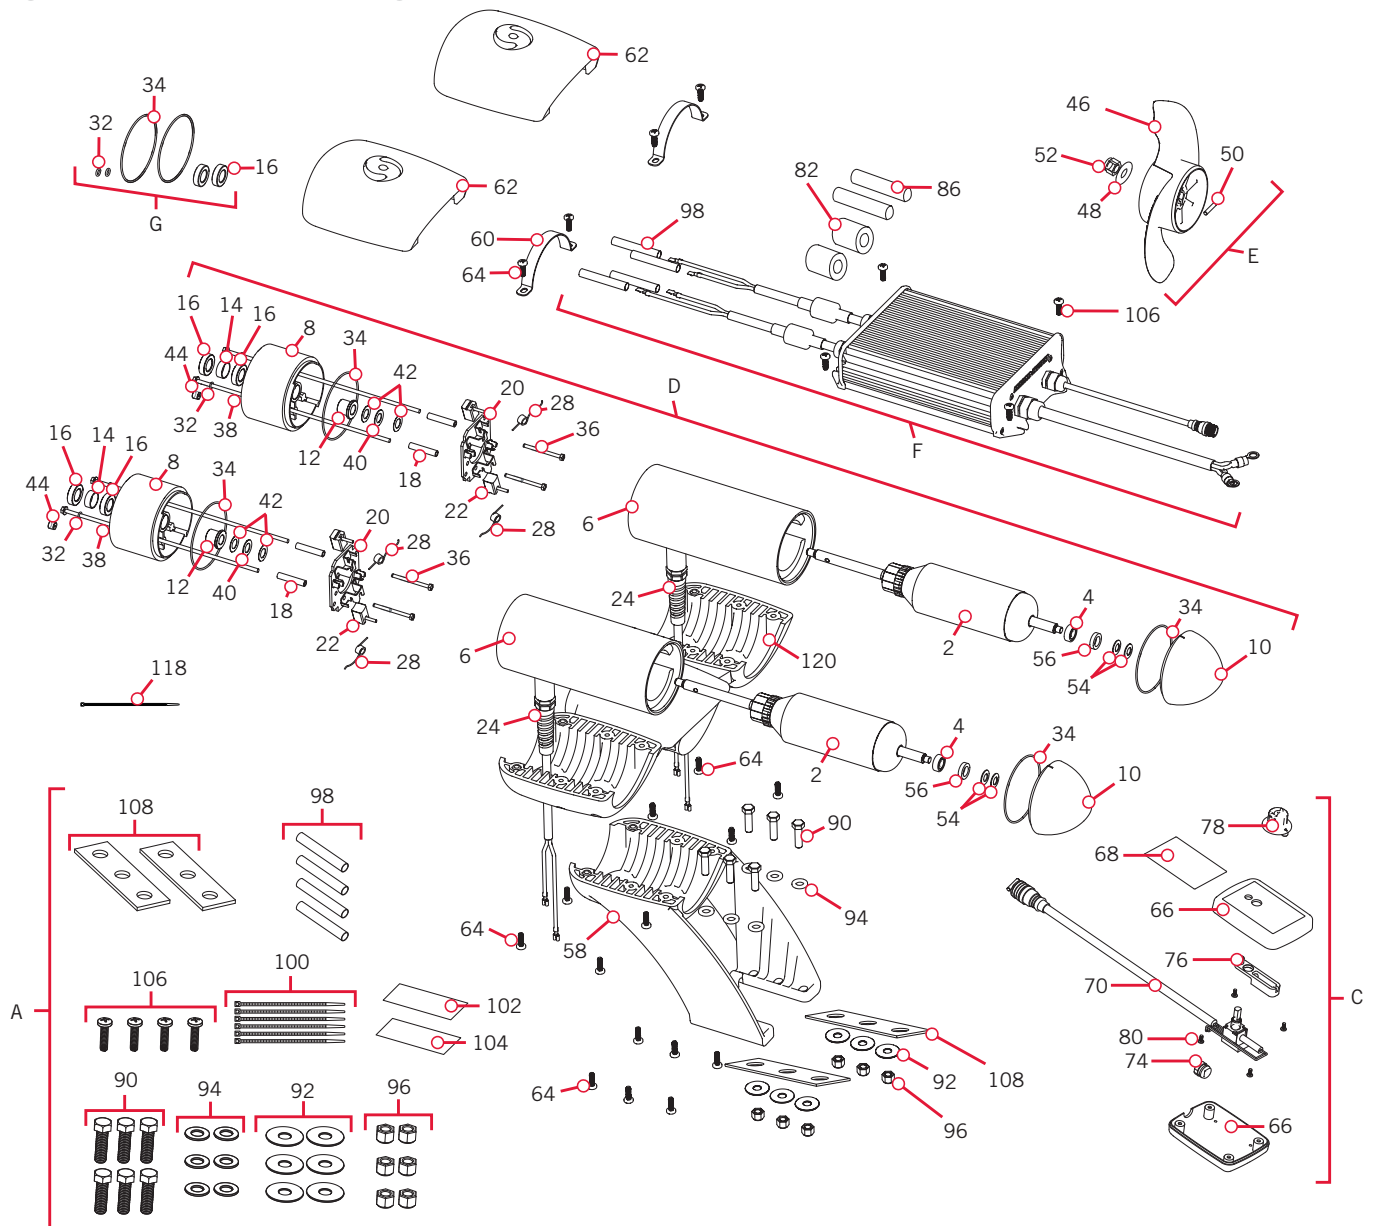

PARTS DIAGRAM & PARTS LIST

» Engine Mount Parts List

Assembly	Part #	Description	Quantity
A	2994856	BAG ASSY, EM	1
C	2990239	HAND CONTROLLER ASSY, EM	1
D	2396234	MTR ASY 24V 4" 80" SW	2
E	1378132	PROP KIT PWR PRP	2
F	2990248	CTRL MOD ASY 24/36V, DUAL	1
G	2889460	SEAL & O RING KIT *4.0*	2
Item	Part #	Description	Quantity
2	2-100-234	ARM ASY 24V 4" 80#	2
4	140-010	BEARING - BALL	2
6	2-200-398	CTR HSG ASY 4.0 WHITE	2
8	2-300-349	BRSH END HSG 4.0	2
10	421-376	PLAIN END HSG 4" WHITE	2
12	144-017	BEARING - FLANGE	2
14	725-095	PAPER TUBE - SEAL BORE	2
16	880-025	SEAL	4
18	973-025	SPACER BRUSH PLATE	4
20	2-600-234	BRUSH PLATE ASSEMBLY 4" EM	2
22	188-094	BRUSH ASSEMBLY	4
24	640-234	LEADWIRE ASSEMBLY 10AWG	2
28	975-041	SPRING - TORSION	4
32	701-009	O-RING THRU BOLT	4
34	701-043	O-RING	4
36	830-027	SCREW, SELF-THREAD	4
38	830-094	THRU BOLT 12-24 X 10.31	4
40	990-051	WASHER-STEEL THRUST	2
42	990-052	WASHER-NYLATRON	4
44	836-001	PLUG ALUMINUM 1/8 X 27 NPT	2
46	2331160	PROP-PWR 4" REAMED	2
48	2091701	WASHER-5/16 STD (S/S)	2
50	2262658	PIN-DRIVE	2
52	2198401	ANODES, ZINC, 4" LWR UNIT	2
54	992-010	WASHER BELLEVILLE	4
56	990-045	SPACER-THRUST	2
58	2381941	BRACKET, DUAL LOWER MOUNT	1
60	2383810	STRAP, EM	2
62	2380215	CAP-TOP (EM) SW	2
64	2383418	SCREW-1/4-10 X 1 " PPH SS PLST	18

✖ This part is included in an assembly and cannot be ordered individually.

▲ Not shown on Parts Diagram.

////////////////////////////////////

▲ Not shown on Parts Diagram.