


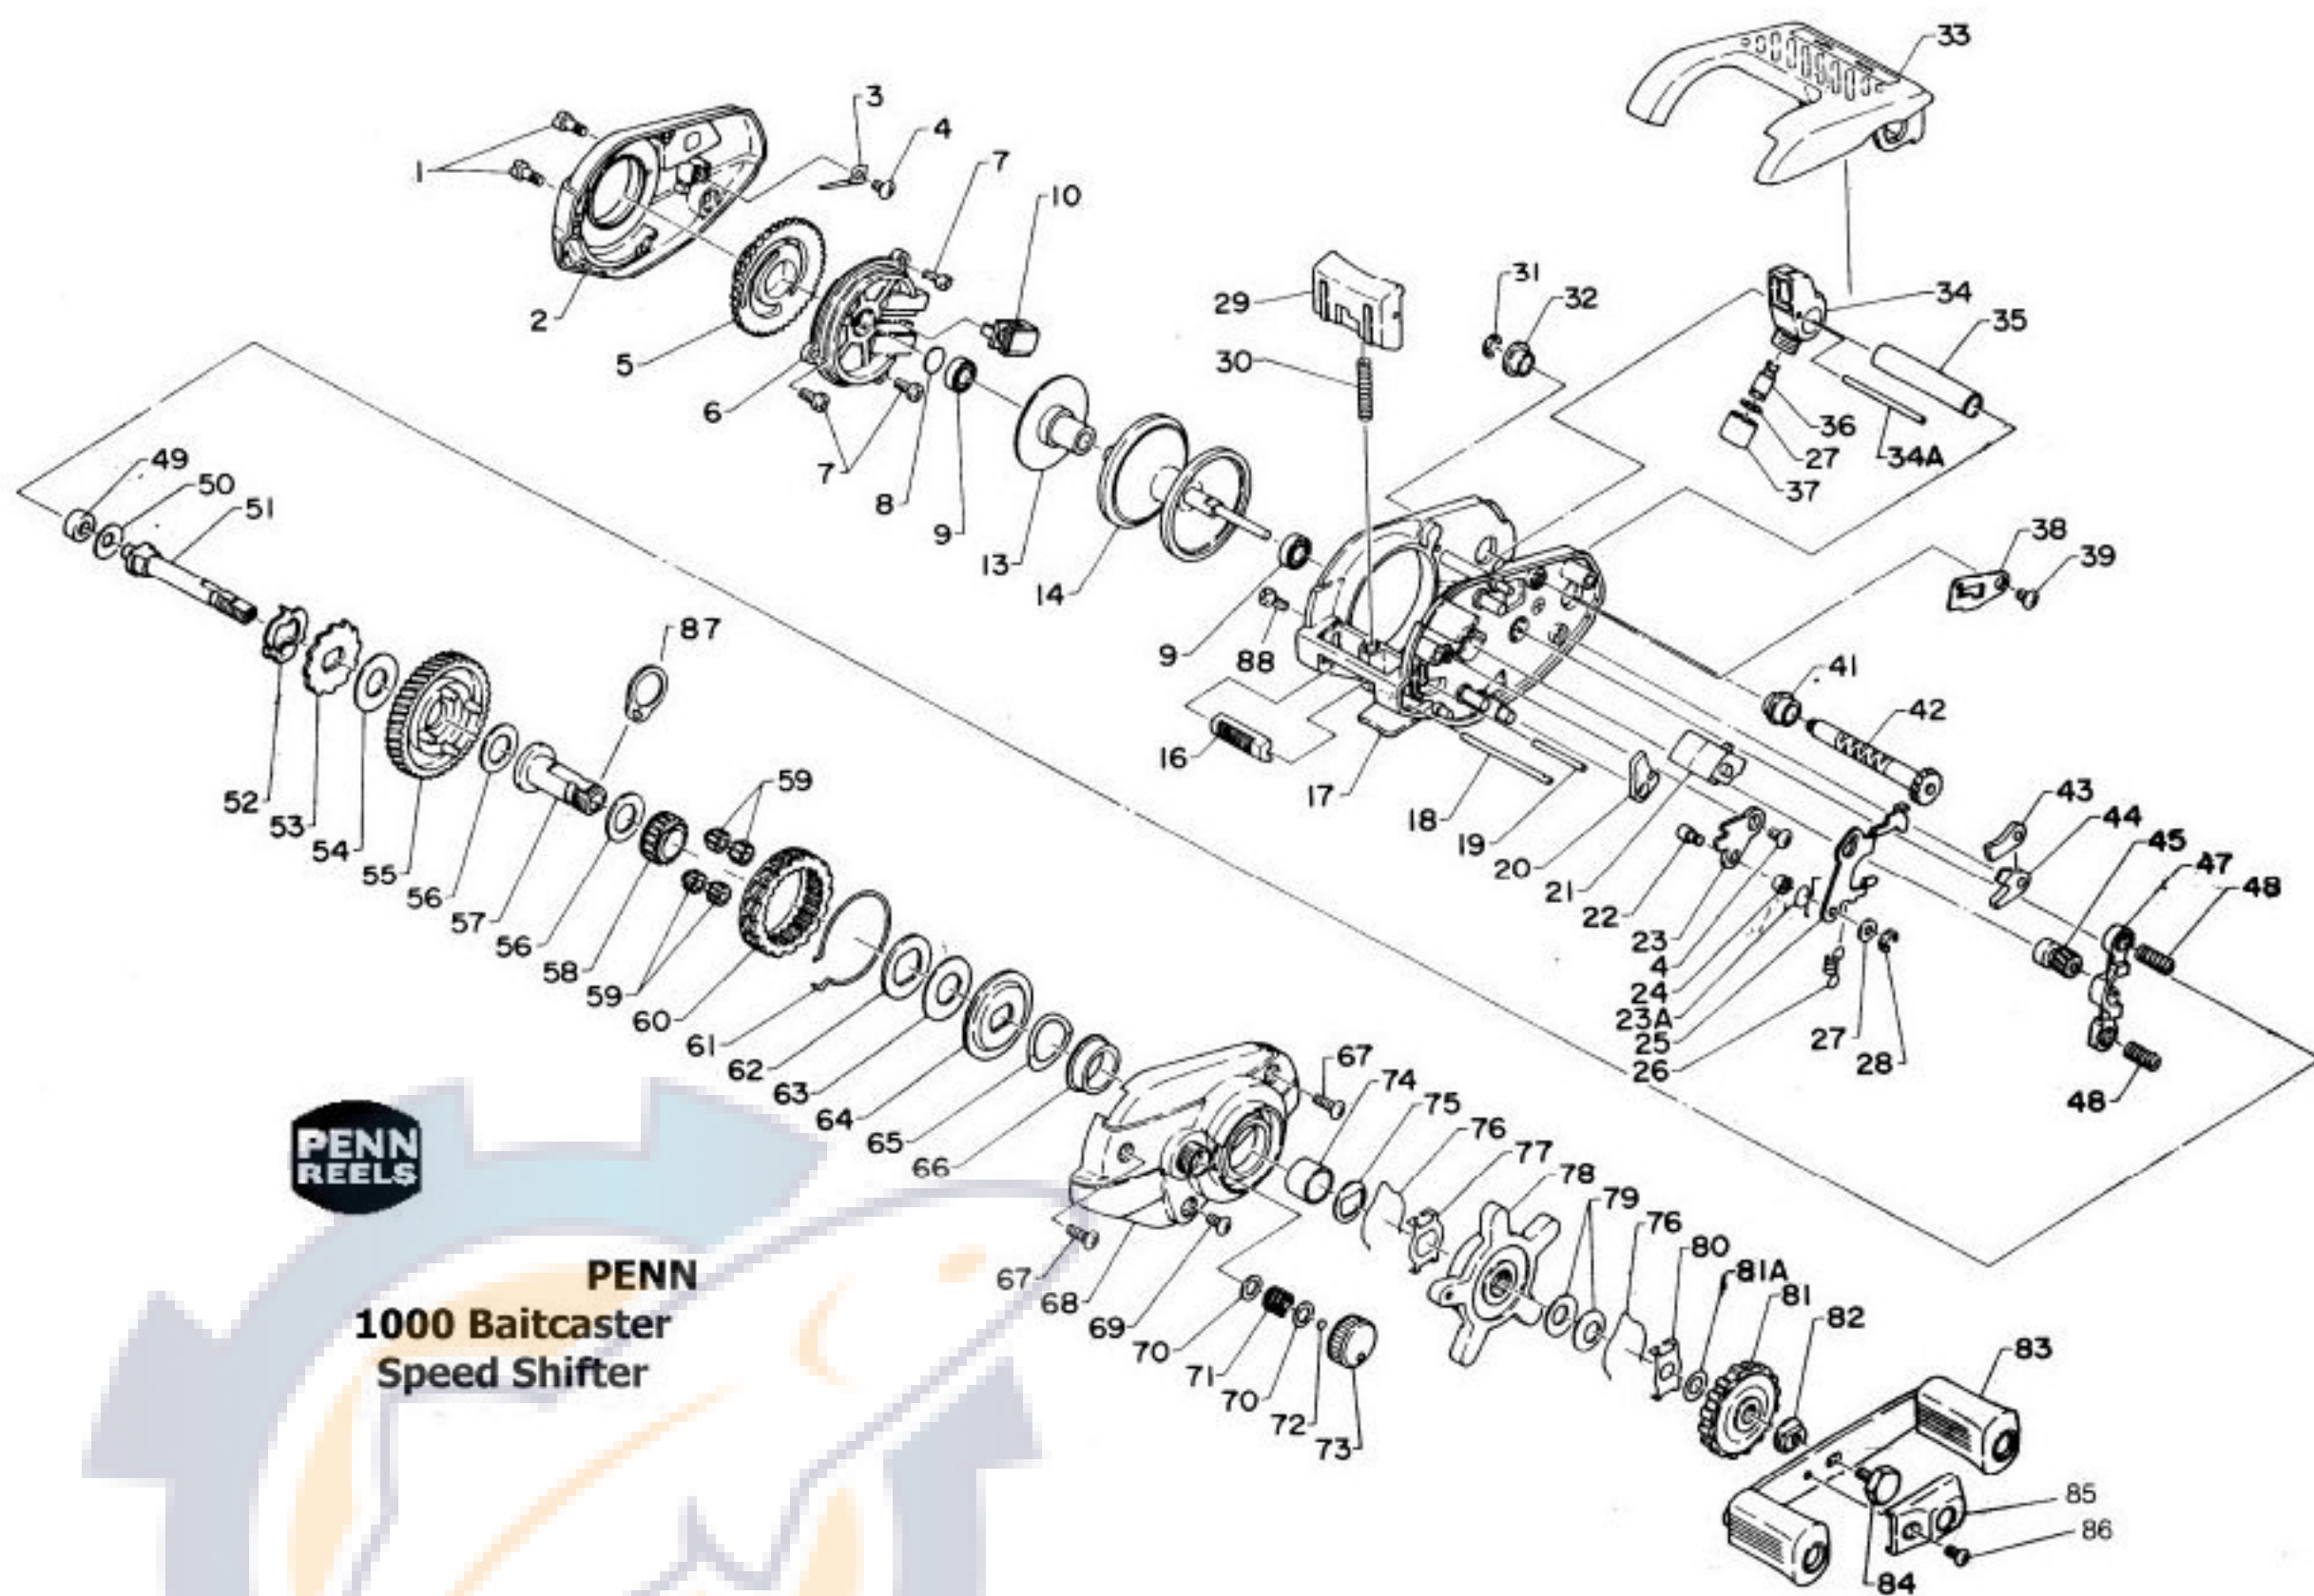

**PENN  
REELS**

**PENN  
1000 Baitcaster  
Speed Shifter**

**Penn Reel Parts list for:**

| KEY NO | PART NO.  | DESCRIPTION                         |
|--------|-----------|-------------------------------------|
| 1      | 32-2000   | L.S. PLATE SCREW (2 REQ.)           |
| 2      | 27-1000   | L.S. PLATE                          |
| 3      | 35-2000   | MAGNET KNOB CLICK                   |
| 4      | 35A-2000  | MAGNET KNOB CLICK SCREW (2 REQ.)    |
| 5      | 305-2000  | MAGNET, ADJ. KNOB                   |
| 6      | 40A-2000  | L.S. BEARING HOUSING                |
| 7      | 40C-2000  | L.S. BEARING HOUSING SCREW (3 REQ.) |
| 8      | 40B-2000  | L.S. THRUST WASHER                  |
| 9      | 55-2000   | SPOOL BEARING (2 REQ.)              |
| 10     | 302A-2000 | MAGNET HOUSING ASSEMBLY             |
| 13     | 303A-2000 | MAGNET ROTOR ASSEMBLY               |
| 14     | 29L-2000  | SPOOL COMPLETE                      |
| 16     | 172-2000  | FLIPPING SELECTION BUTTON           |
| 17     | 183-1000  | FRAME                               |
| 18     | 171-2000  | FLIPPING BUTTON ROD                 |
| 19     | 21B-2000  | PIN                                 |
| 20     | 15A-2000  | INTERNAL GEAR DOG                   |
| 21     | 69-2000   | FREE SPOOL BUTTON                   |
| 22     | 11B-2000  | CLUTCH SLIDE LEVER PIN              |
| 23     | 11A-2000  | CLUTCH SLIDE LEVER                  |
| 23A    | 18C-2000  | CLUTCH LOCK SPRING                  |
| 24     | 11C-2000  | SLIDE LEVER PIN COLLAR              |
| 25     | 11-2000   | CLUTCH SLIDE PLATE                  |
| 26     | 11D-2000  | CLUTCH SLIDE SPRING                 |
| 27     | 11E-2000  | FLAT WASHER (2 REQ.)                |
| 28     | 11F-2000  | RTNG. RING CLUTCH SLIDE             |
| 29     | 21-2000   | THUMB BAR                           |
| 30     | 21A-2000  | THUMB BAR SPRING                    |
| 31     | 69A-2000  | WORM RETAINING RING                 |
| 32     | 44-2000   | L.S. WORM SLEEVE                    |
| 33     | 133A-1000 | TOP COVER ASSEMBLY                  |
| 34     | 46-2000   | LINE GUIDE CARRIAGE                 |
| 34A    | 37-2000   | LINE GUIDE POST                     |
| 35     | 50-2000   | WORM SHIELD                         |
| 36     | 47-2000   | PAWL                                |
| 37     | 48-2000   | PAWL COVER SCREW                    |
| 38     | 2-2000    | CLUTCH LOCK PLATE                   |
| 39     | 16-2000   | CLUTCH LOCK PLATE SCREW             |
| 41     | 43-2000   | R.S. WORM SLEEVE                    |
| 42     | 42-1000   | WORM ASSEMBLY                       |
| 43     | 15-2000   | ANTI-REVERSE DOG                    |
| 44     | 14-2000   | DOG SILENCER                        |
| 45     | 13-1000   | PINION GEAR/COLLAR                  |
| 47     | 12-2000   | CLUTCH YOKE                         |

**Model: 1000 Conventional Baitcaster**

| KEY NO | PART NO.  | DESCRIPTION                     |
|--------|-----------|---------------------------------|
| 48     | 18-2000   | CLUTCH YOKE SPRING (2 REQ.)     |
| 49     | 127-2000  | HANDLE SHAFT BUSHING            |
| 50     | 82-2000   | HANDLE SHAFT WASHER             |
| 51     | 97-1000   | HANDLE SHAFT                    |
| 52     | 173-2000  | CLUTCH CAM PLATE                |
| 53     | 98-2000   | ANTI-REVERSE RATCHET            |
| 54     | 68-2000   | RATCHET DISC                    |
| 55     | 5-1000    | DRIVE GEAR ASSEMBLY             |
| 56     | 6C-2000   | PRE-SET DISC (2 REQ.)           |
| 57     | 7-1000    | METAL WASHER                    |
| 58     | 5A-2000   | DRAG SPACE COLLAR               |
| 59     | 9C-1000   | DRAG SPACE COLLAR               |
| 60     | 5E-2000   | INTERNAL GEAR                   |
| 61     | 5F-2000   | INT. STOPPER SPRING             |
| 62     | 86-2000   | KEYED DRAG WASHER               |
| 63     | 6-2000    | DRAG WASHER                     |
| 64     | 117-2000  | DRAG PRESURE PLATE              |
| 65     | 9B-2000   | SHIM                            |
| 66     | 9A-2000   | R.S. PLATE BUSHING              |
| 67     | 38-2000   | R.S. PLATE SCREW (TOP) (2 REQ.) |
| 68     | 1-1000    | R.S. PLATE                      |
| 69     | 31-2000   | R.S. PLATE SCREW (BOTTOM)       |
| 70     | 103B-2000 | SPOOL TENSION WASHER (2 REQ.)   |
| 71     | 57-2000   | SPOOL TENSION SPRING            |
| 72     | 103A-2000 | R.S. THRUST WASHER              |
| 73     | 103-2000  | SPOOL TENSION KNOB              |
| 74     | 7A-1000   | METAL DRAG WASHER               |
| 75     | 18B-1000  | DRAG SPRING WASHER              |
| 76     | 10B-2000  | STAR CLICK SPRING (2 REQ.)      |
| 77     | 10A-1000  | STAR CLICK HOLDER               |
| 78     | 10-1000   | DRAG STAR                       |
| 79     | 18A-2000  | WAVE SPRING (2 REQ.)            |
| 80     | 144A-2000 | PRE-SET CLICK HOLDER            |
| 81     | 144-2000  | PRE-SET KNOB                    |
| 81A    | 4-2000    | PRE-SET KNOB WASHER             |
| 82     | 8-1000    | HANDLE PLUG                     |
| 83     | 24C-2000  | HANDLE (COMPLETE)               |
| 84     | 23-1000   | HANDLE SCREW                    |
| 85     | 110A-2000 | HANDLE NUT COVER                |
| 86     | 23A-2000  | HANDLE LOCK SCREW               |
| 87     | 91-2000   | ISOLATION RETAINING RING        |
| 88     | 21C-2000  | THUMB BAY SCREW                 |