


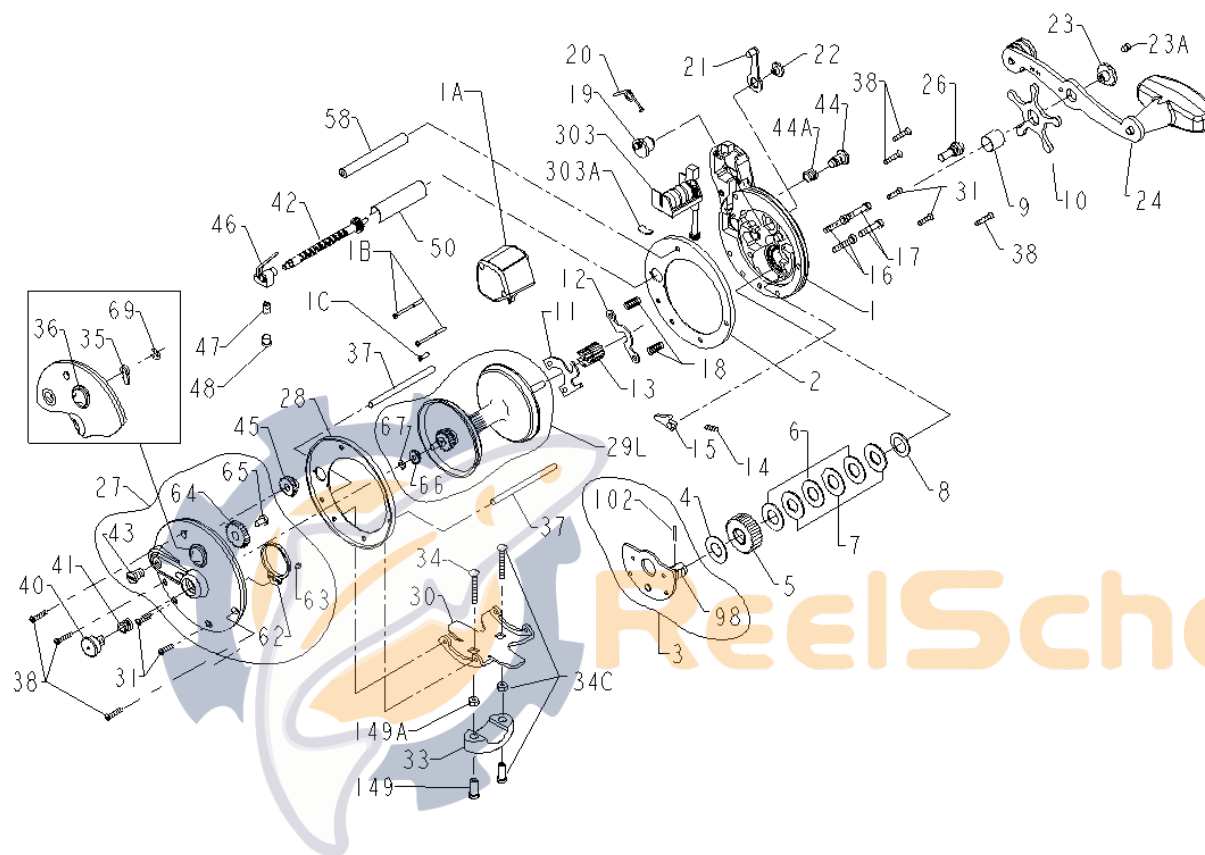

PARTS LIST FOR MODEL 209LC



KEY NO.

1
1A
1B
1C
2
3
4
5
6
7

MODEL 209

PART NO.

001 209LC
001A209LC
001B209LC
001C209LC
002 209
003 155
004 155
005 209LC
006 155
007C155

DESCRIPTION

Right Side Plate
Line Counter Cover
Screw L.C. Cover Top (2 req.)
Screw L.C. Cover - Lower
R.S. Ring
Bridge Assembly
Fiber Washer
Main Gear
Drag Washer (3 req.)
Drag Washer (Metal Set)

KEY NO.

8
9
10
11
12
13
14
15
16
17
18
19
20
21
22
23
23A
24
26
27
28
29L
30
31
33
34
34C
35
36
37
38
40
41
42
43
44
44A
45
46
47
48
50
58
62
63
64
65
66
67
69
98
102
149
149A
303
303A

MODEL 209

PART NO.

008 060
009 060
010 060
011 155
012 155
013 209LC
014 099
015 209
016 060CH
017 060CH
018 060
019 209
020 155
021 209
022 060CH
023 060
110 060
024 066
026 155
027 209
028 209
029L209
030 066
032 022
033 113
033R200
034 045
034C045
035 155
036N209
037 160
038 008
040 060
041 060
042 209LC
043 109
044N109
057 109
045N209
046 209
047 109
048 109
050 209
058 209
062 209
063 209
064 209
065 209
066N209
067 209
069B600
098 155
102 060
149 045
149 200
303 209LC
303A209LC

DESCRIPTION

Tension Washer
Spacing Sleeve
Star Drag
Eccentric Jack
Pinion Yoke
Pinion Gear
Dog Spring
Dog
Lower Bridge Screw (2 req.)
Upper Bridge Screw (2 req.)
Clutch Spring (2 req.)
Eccentric
Eccentric Spring
Eccentric Lever
Eccentric Screw
Handle Screw
Handle Lock Screw
Handle
R.S. Bearing
L.S. Plate Assembly
L.S. Ring
Spool Assembly
Stand
Stand Screw (4 req.)
Rod Clamp
Ringed Rod Clamp (Optional)
Clamp Screw (Only)
Clamp Screw w/Nuts
Click Tongue
Click Button
Frame Post (2 req.)
Post Screw (6 req.)
L.S. Bearing
L.S. Bearing Spring
Worm
Worm Bearing
Worm Bearing
Worm Bearing Spring
Worm Gear
Line Guide
Pawl
Pawl Cover
Worm Shield
Slotted Post
Click Spring
Click Spring Screw
Idle Gear
Idle Gear Screw
Level Wind Drive Gear
Drive Gear Lock Spring
Click Button Retaining Spring
Gear Sleeve
Gear Sleeve Pin
Clamp Nut (2 req.)
Hex Nut (2 req.)
Counter Wheel Assembly
Retainer, C.W. Asm.