


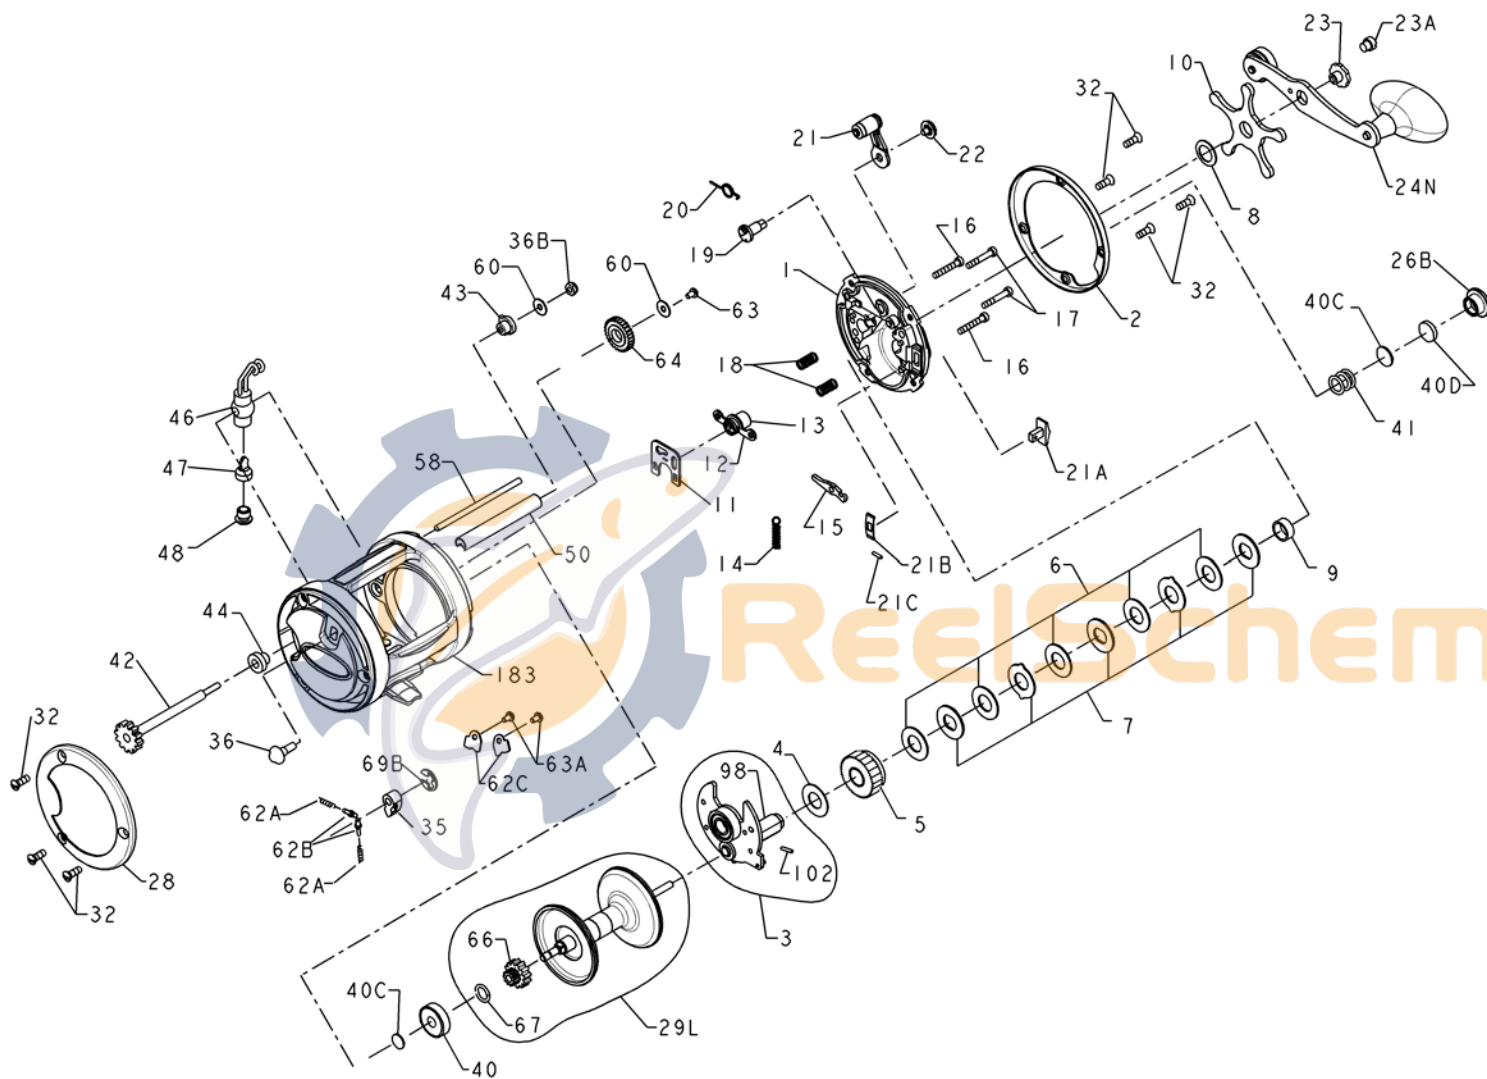

## PARTS LIST FOR MODEL 310GT2



### KEY

| KEY NO. | PART NO.   | DESCRIPTION                   |
|---------|------------|-------------------------------|
| 1       | 001 310GT2 | Right Side Plate              |
| 2       | 002 310    | Right Side Ring               |
| 3       | 003B310    | Bridge Assembly               |
| 4       | 004 155    | Fiber Washer                  |
| 5       | 005 310    | Main Gear                     |
| 6       | 006 060    | Friction Drag Washer (5 req.) |
| 7       | 007C310    | Metal Drag Washer (Set of 5)  |
| 8       | 008 310GT2 | Tension Spring                |
| 9       | 009 310    | Spacing Sleeve                |
| 10      | 010 505    | Star Drag                     |
| 11      | 011 310    | Eccentric Jack                |
| 12      | 012 009    | Pinion Yoke                   |
| 13      | 013 310    | Pinion Gear                   |
| 14      | 014 010    | Dog Spring                    |
| 15      | 015 310    | Dog                           |
| 16      | 016 310    | Lower Bridge Screw (2 req.)   |
| 17      | 017 310    | Upper Bridge Screw (2 req.)   |
| 18      | 018 009    | Clutch Spring (2 req.)        |
| 19      | 019 310GT2 | Eccentric Cam                 |
| 20      | 020 109    | Eccentric Spring              |
| 21      | 021S310    | Eccentric Lever               |
| 21A     | 021A310    | Direct Drive Button           |
| 21B     | 021B310    | Direct Drive Button Spring    |
| 21C     | 021C310    | Direct Drive Button Pin       |
| 22      | 022 310GT2 | Eccentric Screw               |
| 23      | 023 060    | Handle Assembly Screw         |
| 23A     | 110 060    | Handle Lock Screw             |
| 24N     | 024N310    | Handle Assembly               |
| 26B     | 026B320    | Spool Tension Control Cap     |
| 28      | 028 310GT2 | Left Side Ring                |
| 29L     | 029L310GT2 | Aluminum Spool                |
| 32      | 032 310GT2 | Side Plate Screw (7 req.)     |
| 35      | 035 310GT2 | Click Tongue                  |
| 36      | 036 310    | Click Button                  |
| 36B     | 036 700    | Worm Shaft Nut                |
| 40      | 040 320    | Ball Bearing                  |
| 40C     | 040C320    | Metal Thrust Washer (2 req.)  |
| 40D     | 040D320    | Rubber Thrust Washer          |
| 41      | 041 330    | Right Side Thrust Spring      |
| 42      | 042 310    | Worm                          |
| 43      | 043 330    | Right Side Worm Bearing       |
| 44      | 044 330    | Left Side Worm Bearing        |
| 46      | 046 310    | Line Guide Carriage           |
| 47      | 047 975    | Pawl                          |
| 48      | 048 330N   | Pawl Cover Screw              |
| 50      | 050T310    | Worm Shield                   |
| 58      | 058 310    | Line Guide Post               |
| 60      | 060 320    | Idler Gear Washer (2 req.)    |
| 62A     | 062A310    | Click Spring (2 req.)         |
| 62B     | 062S310GT2 | Click Pin (2 req.)            |
| 62C     | 062C321LH  | Click Spring Cover (2 req.)   |
| 63      | 063 500S   | Idler Gear Screw              |
| 63A     | 063 500S   | Click Spring Screw (2 req.)   |
| 64      | 064 310GT2 | Idler Gear                    |
| 66      | 066 310    | Spool Gear Click Ratchet      |
| 67      | 067 009    | Spool Gear Lock Ring          |
| 69B     | 069B600    | Retaining Ring (Click Button) |
| 98      | 098 310    | Gear Sleeve                   |
| 102     | 102 060    | Sleeve Pin                    |
| 183     | 183 310GT2 | Frame                         |