


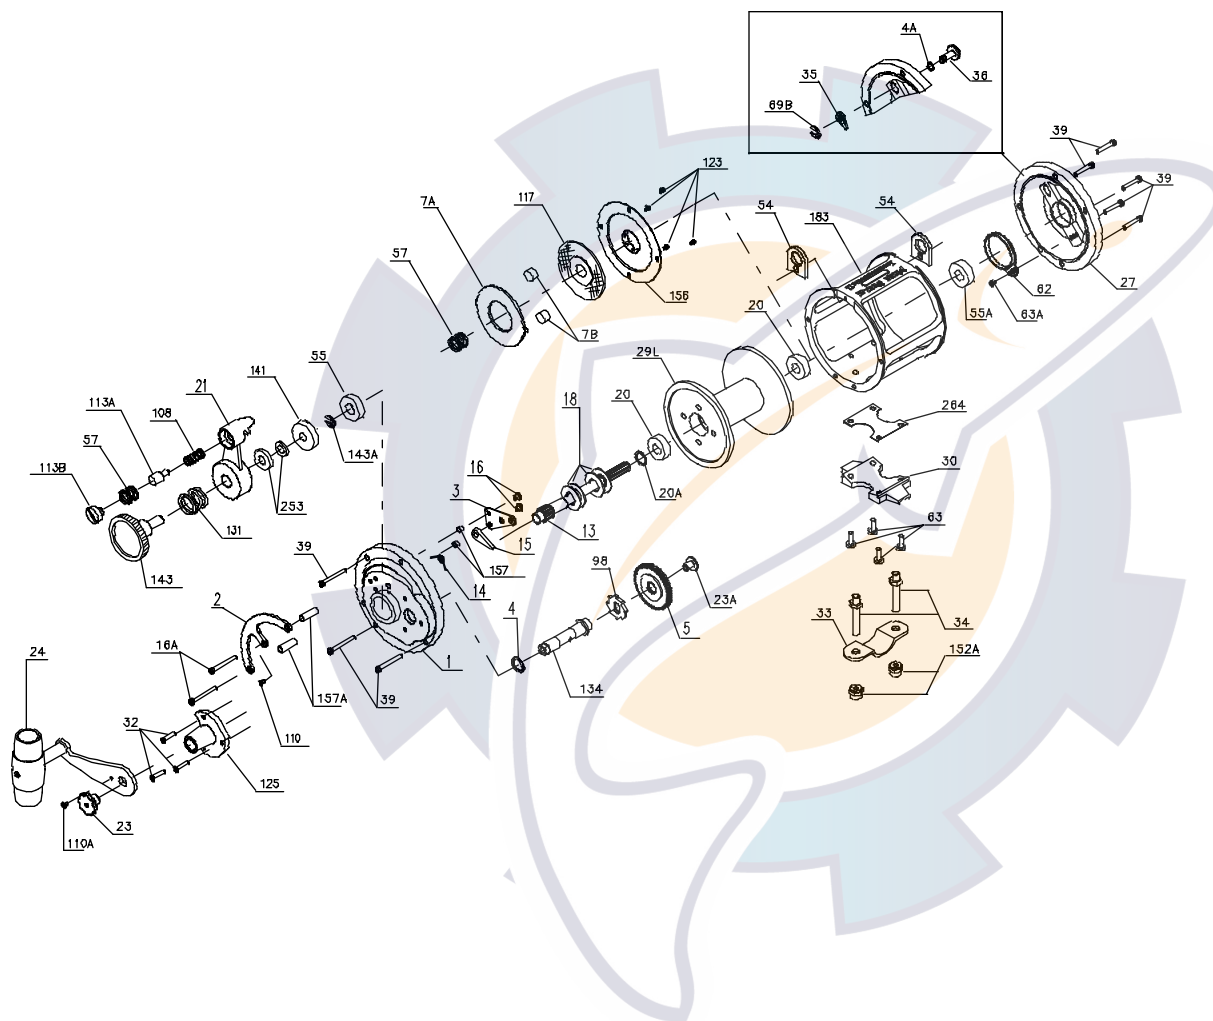

KEY NO.	DESCRIPTION	PART NO.
1	Right Side Plate Assembly	001 012T
2	Quadrant Ring	002 006
3	Ratchet Dog Bridge	003 006
4	Gear Stud Washer	004 012
4A	Click Button Washers (2 req.)	004 012H
5	Main Gear	005 012H
7A	Metal Ear Drag Washer	007A006
7B	Pressure Plugs (2 req.)	007B012H
13	Pinion Gear	013 012H
14	Dog Spring	014 006
15	Dog	015 006
16	Bridge Screws (2 req.)	016 006
16A	Quadrant Screws (2 req.)	016 009
18	Disc Clutch Springs (4 req.)	018 012T
20	Spool Bearings (2 req.)	020L722
20A	Thrust Washer	020A012H
21	Eccentric Lever	021 006
23	Handle Screw	023 060
23A	Gear Screw	023 006CH
24	Handle Complete	024 012H
27	Left Side Plate Assembly	027 012TN
29L	Spool	029L012LT
30	Stand	030 012T
32	Gear Stud Housing Screws (3 req.)	032 014
33	Rod Clamp	033 200
	Ringed Rod Clamp (Optional)	*033R200
34	Rod Clamp Screws (2 req.)	034 030T
35	Click Tongue	035 320
36	Click Button	036 012LT
39	Frame Screws (8 req.)	039 005
54	Harness Lugs (2 req.)	054 113
55	Ball Bearing	055 006
55A	L.S. Plate Bearing	055 012H
57	Spring (2 req.)	057 109
62	Click Spring	062 025
63	Stand Screws (4 req.)	063 030T
63A	Click Spring Screw	063 209
69B	Click Button Retaining Ring	069B600
98	Gear Ratchet	069B600
108	Drag Lever Button Spring	108 140
110	Center Quadrant Screw	110 060
110A	Handle Lock Screw	110 060
113A	Drag Lever Button	113A006
113B	Drag Lever Screw	113B006
117	Drive Plate Assembly	117 012T
123	Drag Cover Screws (4 req.)	016 910
125	Gear Stud Housing	125 006
131	Preset Knob Spring	131 006
134	Gear Stud	134 012H
141	Cam Follower	141 006
143	Preset Knob	143 006
143A	Preset Knob Retaining Ring	143A006
152A	Rod Clamp Acorn Nut (2 req.)	152A030T
156	Drag Cover	156 012LT
157	Bridge Spacer Bushings (2 req.)	157 012
157A	Quadrant Spacer Bushings (2 req.)	157 012T
183	Tube Frame	183 012T
253	Thrust Bearing	253 012
264	Stand Gasket	264 012T

*Not Shown