


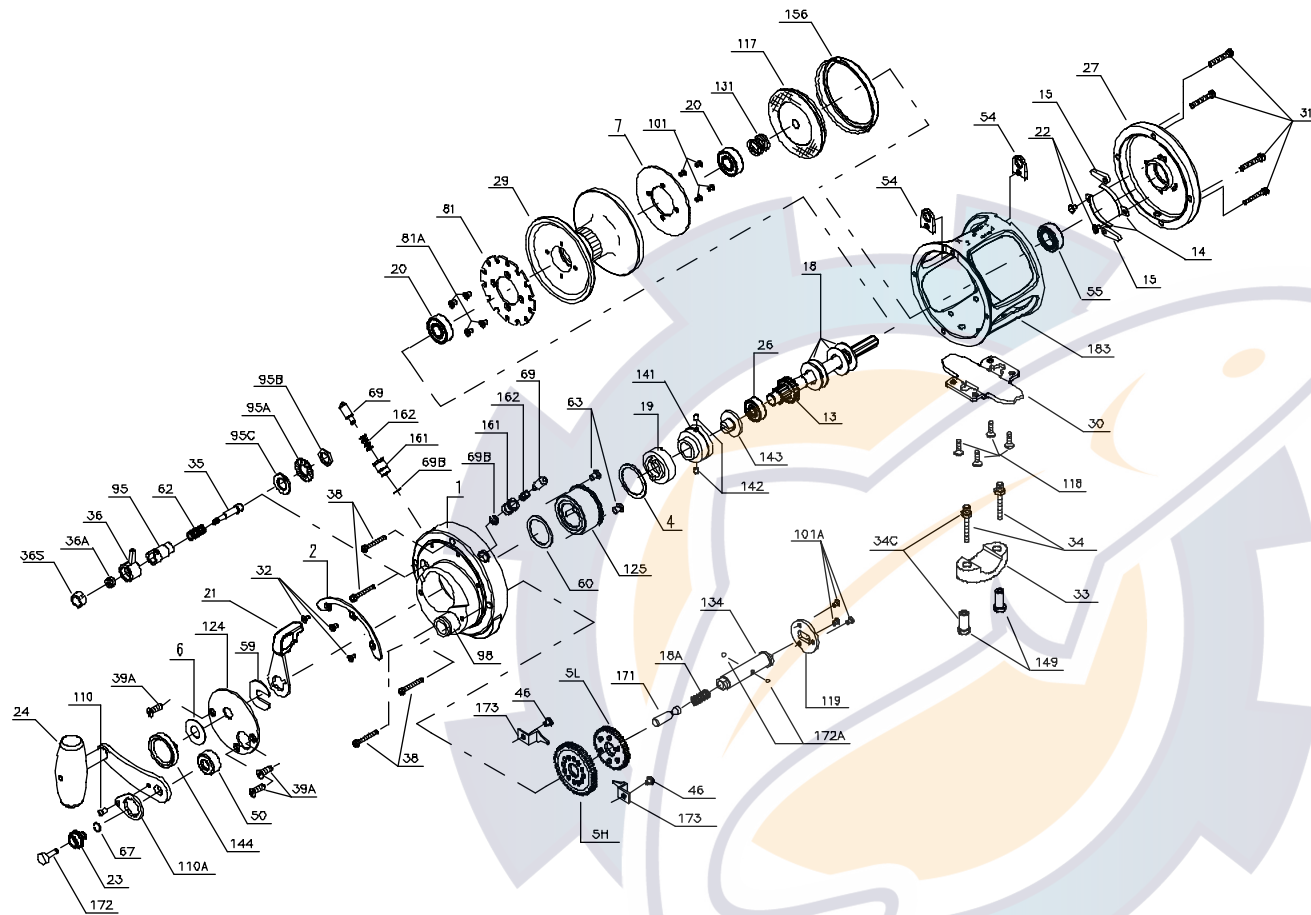

| KEY<br>NO. | PART<br>NO. | DESCRIPTION                 |
|------------|-------------|-----------------------------|
| 1          | 001 016S    | R.S. Plate Assembly         |
| 2          | 002 016S    | Quadrant Ring               |
| 4          | 004 030     | Cam Thrust Washer           |
| 5H         | 005 016HS   | Main Gear High Speed        |
| 5L         | 005 016LS   | Main Gear Low Speed         |
| 6          | 006 155     | Spacer Washer               |
| 7          | 007 016S    | Metal Drag Washer           |
| 13         | 013 016S    | Pinion Gear                 |
| 14         | 014 016S    | Dog Spring (2 req.)         |
| 15         | 015 050     | Dog (2 req.)                |
| 18         | 018 020     | Disc Clutch Spring (4 req.) |
| 18A        | 018 349     | Gear Stud Spring            |

| KEY<br>NO. | PART<br>NO. | DESCRIPTION                   |
|------------|-------------|-------------------------------|
| 19         | 019 016S    | Eccentric Cam                 |
| 20         | 020 704     | Spool Ball Bearing (2 req.)   |
| 21         | 021 016S    | Eccentric Lever               |
| 22         | 022 109     | Dog Spring Screw (2 req.)     |
| 23         | 023 016S    | Handle Screw                  |
| 24         | 024 016S    | Handle Complete               |
| 26         | 026 040     | Ball Bearing                  |
| 27         | 027 016S    | L.S. Plate                    |
| 29         | 029L 016S   | Spool                         |
| 30         | 030 012LT   | Stand                         |
| 31         | 031 080     | L.S. Plate Screw (4 req.)     |
| 32         | 110 050     | Quadrant Screw (3 req.)       |
| 33         | 033 113     | Rod Clamp                     |
| 34         | 034 114HLW  | Clamp Screw (2 req.)          |
| 34C        | 034C114HLW  | Rod Clamp Screw w/Nut         |
| 35         | 035 080T    | Click Tongue                  |
| 36         | 036 050     | Click Button                  |
| 36A        | 036 700     | Click Button Nut              |
| 36S        | 036S080ST   | Click Button Cap              |
| 38         | 038 050     | R.S. Plate Screw (4 req.)     |
| 39A        | 039A080S    | Bridge Cover Screw (3 req.)   |
| 41         | 041 016S    | L.S. Bearing Spring           |
| 46         | 046A704     | Cam Housing Screw (2 req.)    |
| 50         | 050 016S    | Gear Stud Shield              |
| 54         | 054 016S    | Harness Lug (2 req.)          |
| 55         | 055 080ST   | Ball Bearing                  |
| 59         | 059 050     | Slotted Washer                |
| 60         | 060 050     | Backing Washer                |
| 62         | 018 060     | Click Spring                  |
| 63         | 063 349     | Hold Down Screw (2 req.)      |
| 67         | 067 016S    | Plunger Cap Retaining Ring    |
| 69         | 069 050     | Locating Pin (2 req.)         |
| 69B        | 069B050     | Retaining Ring (2 req.)       |
| 81         | 081 016S    | Ratchet                       |
| 81A        | 101 030     | Ratchet Screw (4 req.)        |
| 95         | 095 080     | Click Tongue Bushing          |
| 95A        | 095A020     | Click Bushing Washer          |
| 95B        | 038 710     | Click Bushing Nut             |
| 95C        | 095A050     | Click Bushing Washer          |
| 98         | 098016S     | Bridge Bushing                |
| 101        | 101 030     | Drag Washer Screw (4 req.)    |
| 101A       | 101 050S    | Coupling Plate Screw (3 req.) |
| 110        | 110 050     | Handle Lock Screw             |
| 110A       | 110A016S    | Handle Locking Plate          |
| 117        | 117 016S    | Drive Plate w/Drag Washer     |
| 118        | 118 080     | Stand Screw (4 req.)          |
| 119        | 119 030S    | Coupling Plate                |
| 124        | 124 016S    | Bridge Cover                  |
| 125        | 125 030S    | Cam Housing                   |
| 134        | 134 016S    | Gear Stud                     |
| 141        | 141 016S    | Cam Follower                  |
| 142        | 142 050     | Cam Follower Pin (2 req.)     |
| 143        | 143 030     | Adjusting Screw               |
| 144        | 144 016S    | Preset Knob                   |
| 149        | 149 045     | Rod Clamp Nut (2 req.)        |
| 156        | 156 016S    | Drag Cover                    |
| 161        | 161 050     | Locating Pin Bushing (2 req.) |
| 162        | 162 050     | Locating Pin Spring (2 req.)  |
| 171        | 171 016S    | Plunger                       |
| 172        | 172 016S    | Plunger Cap                   |
| 172A       | 172A016S    | Shifting Ball (2 req.)        |
| 173        | 173 050S    | Gear Retainer (2 req.)        |
| 183        | 183 016S    | Tube Frame                    |