


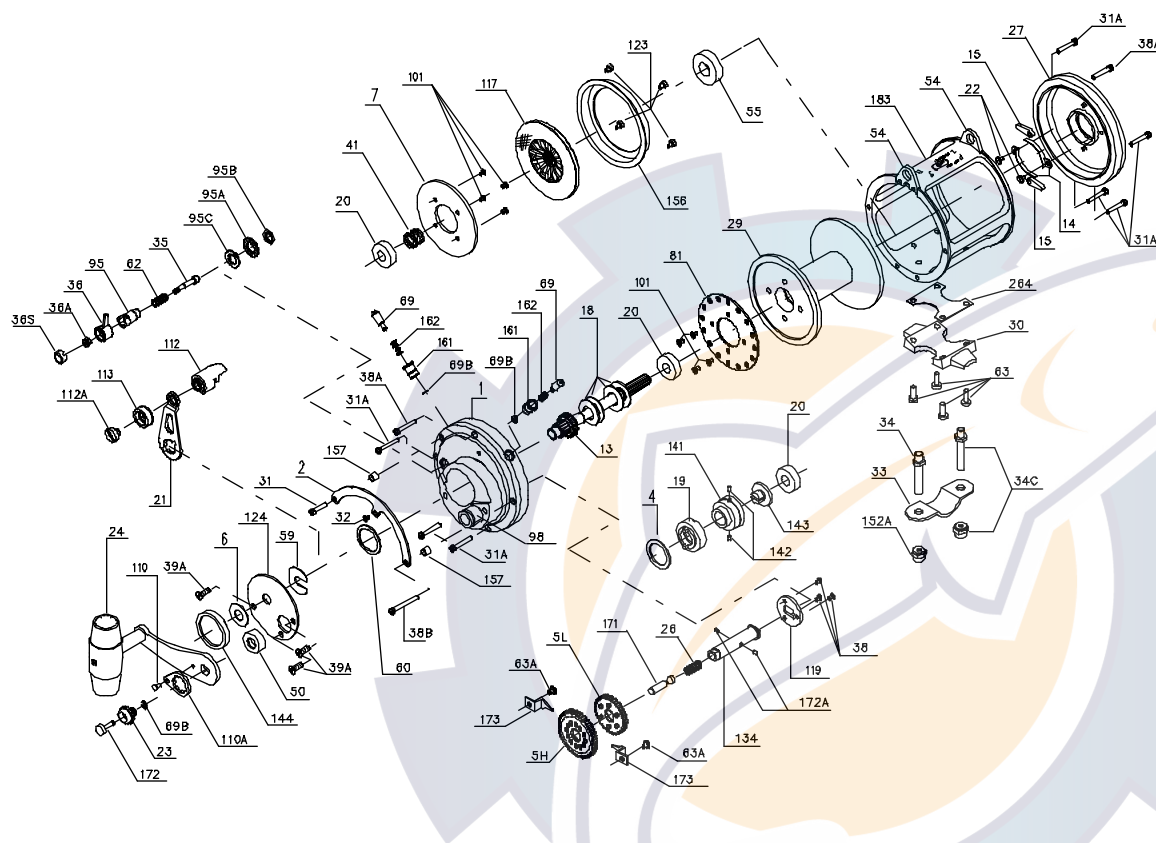

**KEY
NO.**

1	Right-Side Plate Assembly
2	Quadrant Ring
4	Cam Thrust Washer
5H	Main Gear High Speed
5L	Main Gear Low Speed
6	Spacer Washer
7	Metal Drag Washer
13	Pinion Gear
14	Dog Spring (2 req.)
15	Dog (2 req.)
18	Disc Clutch Spring (4 req.)
19	Eccentric Cam
20	Ball Bearing (3 req.)
21	Eccentric Lever
22	Dog Spring Screw (2 req.)

**PART
NO.**

001 030SN
002 030
004 030
005 030HS
005 030LS
006 155
007 030
013 030SW
014 050
015 050
018 030T
019 020
020 704
021 030S
022 109

**KEY
NO.**

23	Handle Screw
24	Handle Complete
26	Gear Stud Spring
27	L.S. Plate Assembly
29	Spool
30	Stand
31	Short Quadrant Screw
31A	Frame Screw (7 req.)
32	Center Quadrant Screw
33	Rod Clamp
	Ringed Rod Clamp (Optional)
34	Clamp Screw (2 req.)
34C	Rod Clamp Screw w/Nut
35	Click Tongue
36	Click Button
36A	Click Button Nut
36S	Click Button Cap
38	Coupling Plate Screw (3 req.)
38A	Frame Screw (2 req.)
38B	Long Quadrant Screw
39A	Cover Screw (3 req.)
41	L.S. Bearing Spring
50	Shield
54	Harness Lug (2 req.)
55	Ball Bearing
59	Slotted Washer
60	Backing Washer
62	Click Spring
63	Stand Screw (4 req.)
63A	Hold Down Screw
69	Locating Pin (2 req.)
69B	Retaining Ring (3 req.)
81	Ratchet
95	Click Tongue Bushing
95A	Click Bushing Washer
95B	Click Bushing Nut
95C	Click Bushing Washer
98	Bridge Bushing
101	Drive Plate Screw (8 req.)
110	Handle Lock Screw
110A	Handle Locking Plate
112	Eccentric Lever Knob
112A	Eccentric Knob Screw
113	Eccentric Lever Cap
117	Drive Plate w/Drag Washer
119	Coupling Plate
123	Drag Cover Screw (4 req.)
124	Bridge Cover
134	Gear Stud
141	Cam Follower
142	Cam Follower Pin (2 req.)
143	Adjusting Screw
144	Preset Knob
152A	Rod Clamp Acorn Nut (2 req.)
156	Drag Cover
157	Quadrant Spacer Bushing (2 req.)
161	Locating Pin Bushing (2 req.)
162	Locating Pin Spring (2 req.)
171	Plunger
172	Plunger Cap
172A	Plunger Pin (2 req.)
173	Gear Ratainer
183	Tube Frame
264	Stand Gasket

**PART
NO.**

023 050S
024 030TW
018 349
027 030T
029L030TW
030 020T
031 020
031 080
032 014
033 114
*033R114
034 050T
034C050T
035 050
036 050
036 700
036S080ST
101 050S
038 050
038 080
039A080S
041 050
050 030S
054 030T
055 080
059 050
060 050
062 050
063 030T
063 349
069 050
069B050
081 050
095 050
095A020
038 710
095A050
098 030SN
101 030
110 050
110A050
112 050
112A050
113 050
117D 030
119 030S
123 050
124 030S
134 050S
141 030
142 050
143 030
144 050
152A050T
156 030T
157 050
161 050
162 050
171 050S
172 050S
172A050S
173 050S
183 030SW
264 030T