


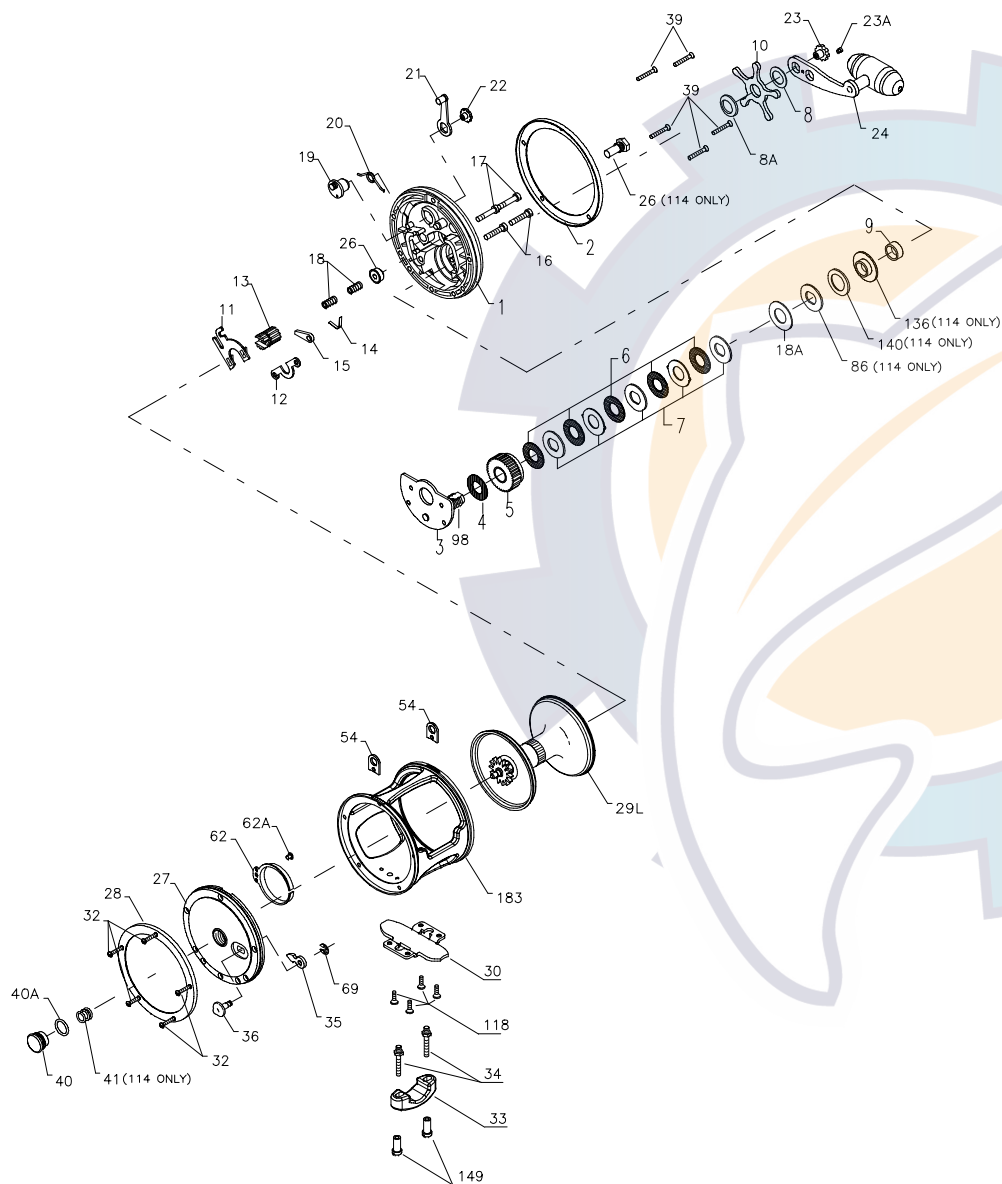

# PARTS LIST FOR MODELS 114, 114H AND 114HLW



| KEY NO. | 114 PART NO. | 114H PART NO. | 114HLW PART NO. | DESCRIPTION                 |
|---------|--------------|---------------|-----------------|-----------------------------|
| 1       | 001 114      | 001 114H      | 001 114H        | Right Side Plate            |
| 2       | 002N114      | 002N114H      | 002N114H        | Right Side Ring             |
| 3       | 003 114      | 003 114H      | 003 114H        | Bridge w/Sleeve             |
| 4       | 004 114      | 004 115       | 004 115         | Fiber Washer                |
| 5       | 005 114      | 005 115       | 005 115         | Main Gear                   |
| 6       | 006 114      | 006 115       | 006 115         | Drag Washer (5 req.)        |
| 7       | 007C114      | 007C115       | 007C115         | Metal Drag Washer Set       |
| 8       | 008 114      | 008 114       | 008 114         | Tension Spring (Set of 2)   |
| 8A      | 008 115      | 008 115       | 008 115         | Tension Spring              |
| 9       | 009N114      | 009 114H      | 009 114H        | Spacing Sleeve              |
| 10      | 010 114      | 010 114       | 010 114         | Star Drag Wheel             |
| 11      | 011 114      | 011 114       | 011 114         | Eccentric Jack              |
| 12      | 012 114      | 012 114       | 012 114         | Pinion Yoke                 |
| 13      | 013 114      | 013 114H      | 013 114H        | Pinion                      |
| 14      | 014 114      | 014 114       | 014 114         | Dog Spring                  |
| 15      | 015 114      | 015 114H      | 015 114H        | Dog                         |
| 16      | 016 114      | 016 114       | 016 114         | Lower Bridge Screw (2 req.) |
| 17      | 017 114      | 017 114       | 017 114         | Upper Bridge Screw (2 req.) |
| 18      | 018 114      | 018 114       | 018 114         | Clutch Spring (2 req.)      |
| 18A     |              | 018 114H      | 018 114H        | Spring Disc                 |
| 19      | 019 114      | 019 114       | 019 114         | Eccentric                   |
| 20      | 020 114      | 020 114       | 020 114         | Eccentric Spring            |
| 21      | 021 114      | 021 114       | 021 114         | Eccentric Lever             |
| 22      | 023 060      | 023 060       | 023 060         | Eccentric Screw             |
| 23      | 023 116      | 023 116       | 023 116         | Handle Screw                |
| 23A     | 110 060      | 110 060       | 110 060         | Handle Lock Screw           |
| 24      | 024 057      | 024 057       | 024 057         | Handle                      |
| 26      | 026 114      | 026 116       | 026 116         | R.S. Bearing                |
| 27      | 027 114      | 027N114H      | 027N114H        | Left Side Plate             |
| 28      | 002N114      | 002N114       | 002N114         | Left Side Ring              |
| 29L     | 029L114      | 029L114HL     | 029L114HLW      | Spool                       |
| 30      | 030 114HL    | 030 114HL     | 030 114HL       | Stand                       |
| 32      | 032 021      | 032 021       | 032 021         | L.S. Screw (5 req.)         |
| 33      | 033 340      | 033 340       | 033 340         | Rod Clamp                   |
|         | *033R114     | *033R114      | *033R114        | Ringed Rod Clamp (Optional) |
| 34      | 034 114HLW   | 034 114HLW    | 034 114HLW      | Rod Clamp Screw (2 req.)    |
| 35      | 035 114      | 035 114       | 035 114         | Click Tongue                |
| 36      | 036 114H     | 036 114H      | 036 114H        | Click Button                |
| 39      | 039 012      | 039 012       | 039 012         | R.S. Plate Screw (5 req.)   |
| 40      | 040 114      | 040 114HL     | 040 114HL       | Left Side Bearing           |
| 40A     |              | 120 114H      | 120 114H        | Left Side Bearing O-Ring    |
| 41      | 041 114      |               |                 | Bearing Spring              |
| 54      | 054 114      | 054 114       | 054 114         | Harness Lug (2 req.)        |
| 62      | 062 114      | 062 114       | 062 114         | Click Spring                |
| 62A     | 063 209      | 063 209       | 063 209         | Click Spring Screw          |
| 69      | 069B600      | 069B600       | 069B600         | Retaining Ring              |
| 86      | 086 114L     |               |                 | Metal Drag Washer           |
| 98      | 098 114      | 098 114       | 098 114         | Gear Sleeve                 |
| 118     | 118 080      | 118 080       | 118 080         | Stand Screws (4 req.)       |
| 136     | 136 114      |               |                 | Pressure Plate Washer       |
| 140     | 140 114      |               |                 | Felt Washer                 |
| 149     | 149 045      | 149 045       | 149 045         | Rod Clamp Nut (2 req.)      |
| 183     | 183 114T     | 183 114HT     | 183 114HLWT     | Frame                       |

\*Not Shown