



KEY NO.	PART NO.	DESCRIPTION
1	1-114	Right Side Plate
2	2-114-O	Right/Left Side Ring Outer
2A	2-114-I	Right Side Ring Inner
3	3-114	Bridge with Sleeve
4	4-114	Fiber Washer
5	5-114	Main Gear
6	6-114	Drag Washer
7	7C-114	Metal Drag Washer Set
8	8-114	Tension Spring
8A	8-115	Tension Spring
9	9N-114	Spacing Sleeve
10	10-114	Star Drag Wheel
11	11-114	Eccentric Jack
12	12-114	Pinion Yoke
13	13-114	Pinion
14	14-114	Dog Spring
15	15-114	Dog
16	16-114	Bridge Screw Lower (2 Required)
17	17-114	Bridge Screw Upper (2 Required)
18	18-114	Clutch Spring
19	19-114	Eccentric
20	20-114	Eccentric Spring
21	21-114	Eccentric Lever
22	23-60	Eccentric Screw
23	23-116	Handle Screw
23A	110-60	Handle Lock Screw

Model: 114 w/posts

KEY NO.	PART NO.	DESCRIPTION
	24 24-114	Handle
	26 26-114	Bearing Right Side
	27 27-114	Left Side Plate
	29 29M-114	Spool
	30 30-114	Stand
	31 31-11	R.S. Stand Screw (3 Required)
	32 32-20	L.S. Stand Screw (3 Required)
	33 33-340	Rod Clamp
	33R-114	Ringed Rod Clamp (Optional)
	34 34-45	Clamp Screw (2 Required)
	34C 34C-45	Rod Clamp Screw with Nuts
	35 35-114	Click Tongue
	36 36-114	Click Button
	37 37-114	Frame Post
	38 39-13	R.S. Post Screw (5 Required)
	39 39-12	L.S. Post Screw (5 Required)
	40 40-114	L.S. Bearing
	41 41-114	L.S. Bearing Spring
	54 54-114	Harness Lug (2 Required)
	62 62-114	Click Spring
	62A 63-209	Click Spring Screw
	69 69B-600	Retaining Ring
	98 98-114	Gear Sleeve
	149 149-45	Clamp Nut (2 Required)
	149A 149-200	Hex Nut (2 Required)