


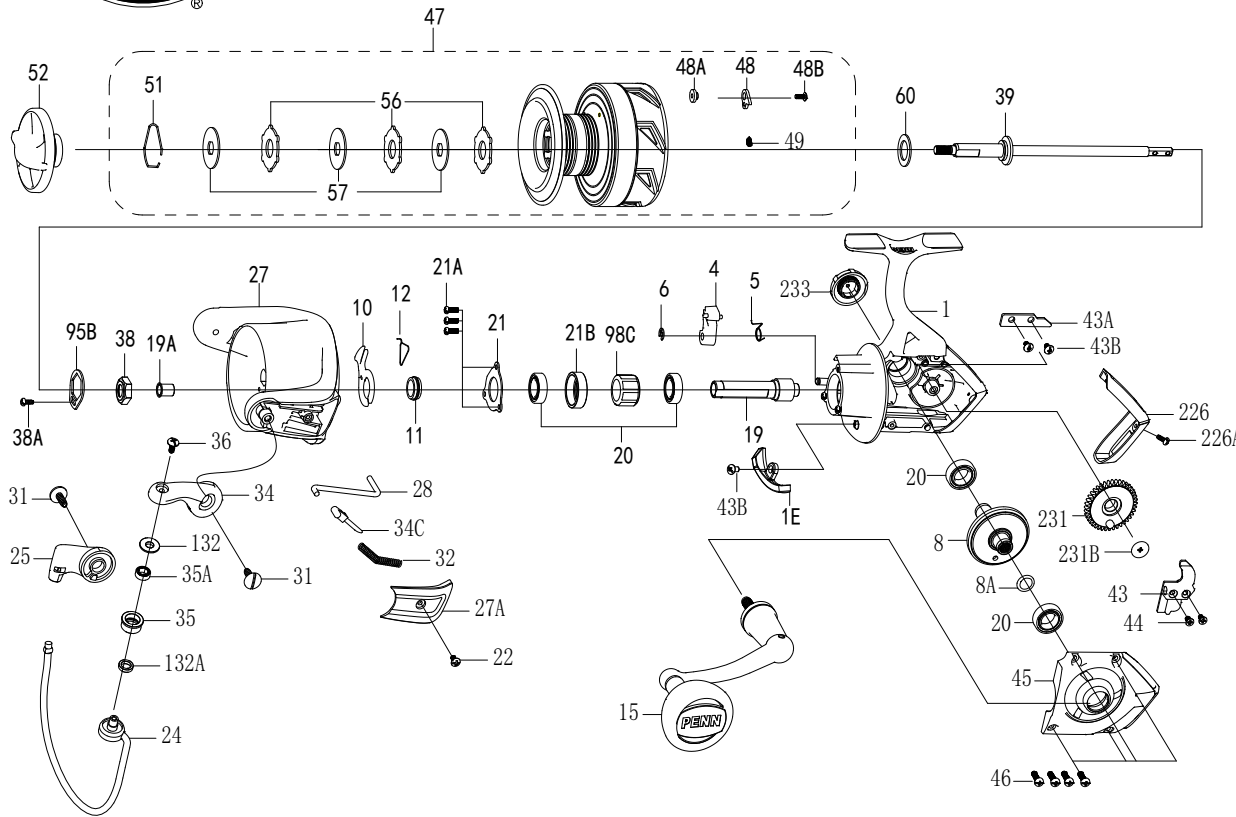

## PARTS LIST FOR MODEL BTLIII8000



| KEY NO. | PART NO. | PENN STYLE NO. | DESCRIPTION        |
|---------|----------|----------------|--------------------|
| 1       | 1529525  | 1-BTLIII8000   | Housing Assembly   |
| 1E      | 1529526  | 1E-BTLIII8000  | Housing Slope      |
| 4       | 1190939  | 4-7000SG       | A/R Dog            |
| 5       | 1190966  | 5-5000SG       | Dog Spring         |
| 6       | 1190979  | 6-5000SG       | Retaining Clip     |
| 8       | 1529527  | 8-BTLIII8000   | Main Gear          |
| 8A      | 1191031  | 8A-7000SG      | Shim               |
| 10      | 1313864  | 10-CFT8000     | A/R Holder         |
| 11      | 1529528  | 11-BTLIII8000  | Bushing            |
| 12      | 1313865  | 12-CFT8000     | A/R Bushing Spring |
| 15      | 1529529  | 15-BTLIII8000  | Handle Assembly    |
| 19      | 1529530  | 19-BTLIII8000  | Pinion Gear        |
| 19A     | 1489299  | 19A-SSVI7500   | BUSHING            |

| KEY NO. | PART NO. | PENN STYLE NO.  | DESCRIPTION                         |
|---------|----------|-----------------|-------------------------------------|
| 20      | 1489300  | 20-SSVI7500     | Ball Bearing (4 req)                |
| 21      | 1192636  | 21-5000SG       | Bearing Retainer                    |
| 21A     | 1192645  | 21A-5000SG      | Bearing Retainer Screw (3 req)      |
| 21B     | 1529531  | 21B-BTLIII8000  | Collar                              |
| 22      | 1204018  | 22-6000PUR      | Screw                               |
| 24      | 1529532  | 24-BTLIII8000   | Bail Wire Assembly                  |
| 25      | 1529533  | 25-BTLIII8000   | Bail Holder                         |
| 27      | 1529534  | 27-BTLIII8000   | Rotor                               |
| 27A     | 1529535  | 27A-BTLIII8000  | Bail Pivot Cover                    |
| 28      | 1529536  | 28-BTLIII8000   | Trip Lever                          |
| 31      | 1365758  | 31-FRCII8000    | Bail Arm Screw (2 req)              |
| 32      | 1313874  | 32-CFT8000      | Bail Spring                         |
| 34      | 1313875  | 34-CFT8000      | Bail Arm                            |
| 34C     | 1529537  | 34C -BTLIII8000 | Pivot Arm                           |
| 35      | 1529538  | 35-BTLIII8000   | Line Roller                         |
| 35A     | 1242222  | 35A-5000BTL     | BEARING                             |
| 36      | 1191699  | 36-3000SG       | Stud Screw                          |
| 38      | 1529539  | 38-BTLIII8000   | Rotor Nut                           |
| 38A     | 1204016  | 21A-5000PUR     | Screw                               |
| 39      | 1529540  | 39-BTLIII8000   | Main Shaft Assembly                 |
| 43      | 1529541  | 43-BTLIII8000   | Crosswind Block                     |
| 43A     | 1489323  | 43A-SSVI7500    | Crosswind Block Plate               |
| 43B     | 1489213  | 43B-SSVI3500    | Crosswind Block Plate Screw (3 req) |
| 44      | 1191845  | 44-5000SG       | Crosswind Block Screw (2 req)       |
| 45      | 1529542  | 45-BTLIII8000   | Housing Cover                       |
| 46      | 1191903  | 46-5000SG       | Housing Cover Screw (4 req)         |
| 47      | 1529543  | 47-BTLIII8000   | Spool Assembly                      |
| 48      | 1211625  | 48-5000SG       | Click Tongue                        |
| 48A     | 1211626  | 48A-5000SG      | Click Tongue Washer                 |
| 48B     | 1489327  | 48B-SSVI7500    | Spool Click Screw                   |
| 49      | 1211627  | 49-5000SG       | Click Tongue Spring                 |
| 51      | 1308112  | 51-CFT5000      | Drag Retaining Ring                 |
| 52      | 1529544  | 52-BTLIII8000   | Drag Knob Assembly                  |
| 56      | 1313883  | 56-CFT8000      | Drag Washer (3 req)                 |
| 57      | 1211646  | 57-7000BTL      | Keyed Washer (3 req)                |
| 60      | 1489320  | 39A-SSVI7500    | Thrust Washer                       |
| 95B     | 1308115  | 95B-CFT5000     | Rotor Locking Plate                 |
| 98C     | 1489332  | 98C-SSVI7500    | Clutch/Sleeve Assembly              |
| 132     | 1529545  | 132-BTLIII8000  | Roller Washer                       |
| 132A    | 1489334  | 132A-SSVI7500   | Line Roller Washer (2 req)          |
| 226     | 1529546  | 226-BTLIII8000  | Rear Cover                          |
| 226A    | 1529386  | 226A-BTLIII3000 | Rear Cover Screw                    |
| 231     | 1529547  | 231-BTLIII8000  | Crosswind Gear                      |
| 231B    | 1489338  | 231B-SSVI7500   | Screw Crosswind Gear                |
| 233     | 1529496  | 233-BTLIII5000  | Bearing Cover Assembly              |

407-BTLIII8000 Rev. 0 12-1-2019

1518038