




PARTS LIST FOR MODEL CLASH6000

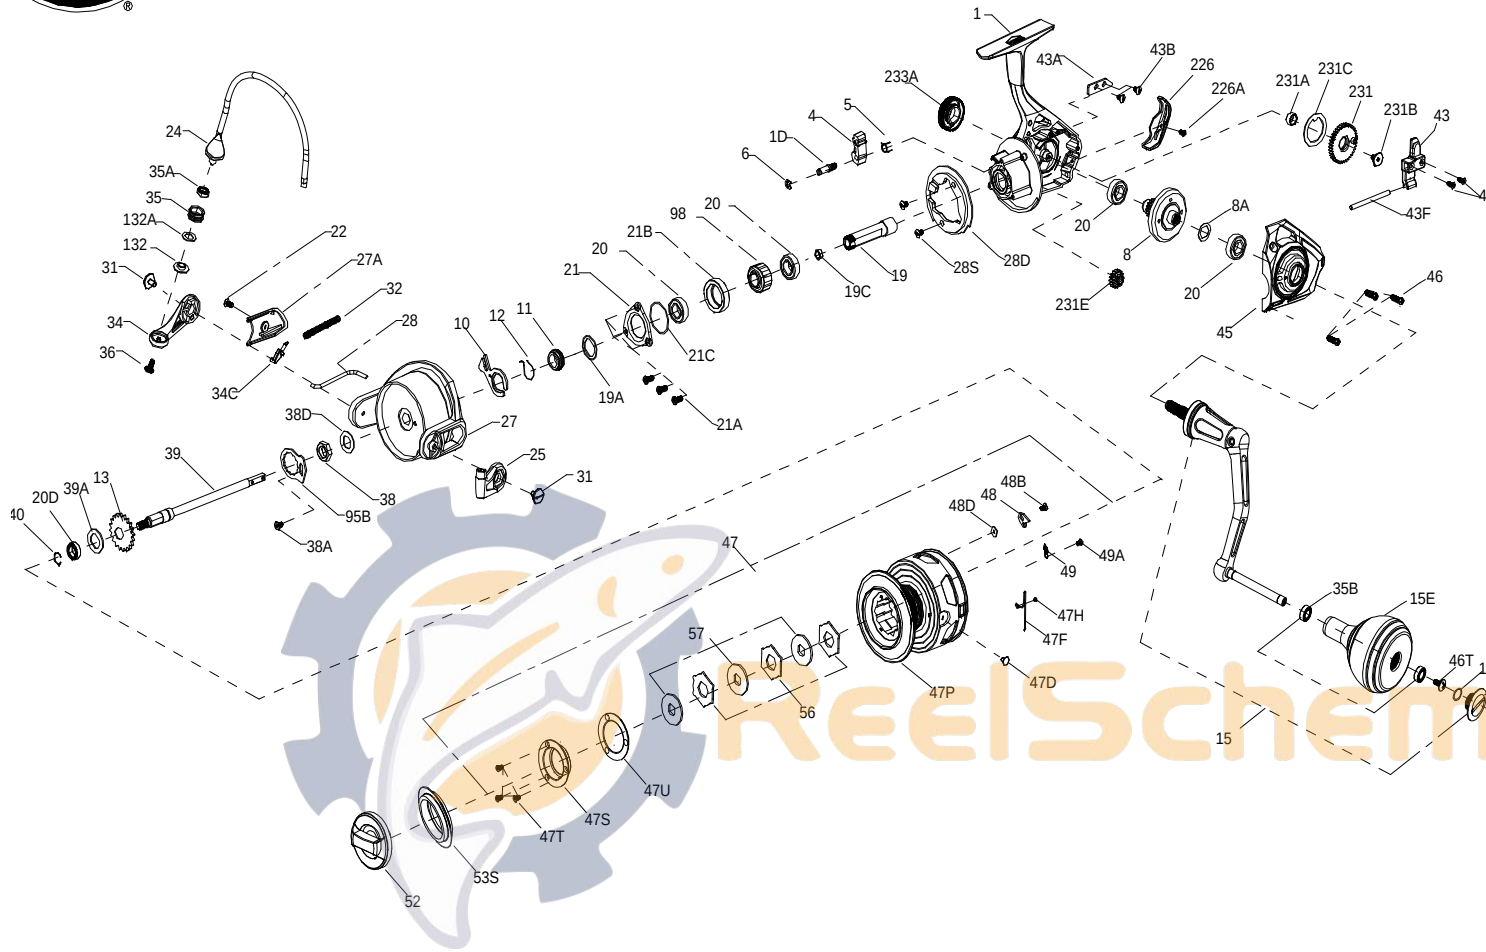

KEY NO.	PART NO.	DESCRIPTION
1	1389458	1-CLA6000 Body Assembly
1D	1277140	1D-SSV7500 A/R Pawl Post
4	1389459	4-CLA6000 A/R Pawl
5	1339474	5-CLA5000 Pawl Spring
6	1277144	6-SSV7500 Retainer Clip
8	1389460	8-CLA6000 Drive Gear
8A	1277037	8A-SSV5500 Drive Gear Shim Washer
10	1339476	10-CLA5000 A/R Pawl Holder
11	1339479	11-CLA5000 A/R Bushing
12	1339487	12-CLA5000 A/R Bushing Spring
13	1339489	13-CLA5000 Spool Click Gear
15	1339490	15-CLA5000 Handle Assembly
15E	1418244	15E-CLA6000 Handle Knob

KEY NO.	PART NO.	DESCRIPTION
15L	1417804	15L-CLA2000 Handle Knob Seal
19	1389461	19-CLA6000 Pinion Gear
19A	1393216	19A-CLA5000 Pinion Seal
19C	1339492	19C-CLA5000 Pinion Gear POM Bushing
20	1308090	20-CFT5000 Ball Bearing(4req.)
20D	1385530	20A-CLA3000 Sealed Ball Bearing
21	1277262	21-SSV9500 Pinion Bearing Retainer
21A	1277154	21A-SSV7500 Pinion Retainer Screw (3req.)
21B	1339493	21B-CLA5000 Pinion Ball Bearing Collar
21C	1339497	21C-CLA5000 Pinion Ball Bearing Collar Seal
22	1125962	231G-7000AF O/S Gear Pin Screw
24	1389462	24-CLA6000 Bail Assembly
24C	1417808	24C-CLA5000-Handle Knob Cap

KEY NO.	PART NO.	DESCRIPTION
25	1339500	25-CLA5000 Bail Holder
27	1389463	27-CLA6000 Rotor
27A	1389464	27A-CLA6000 Rotor Cover
28	1389465	28-CLA6000 Bail Trip Lever
28D	1389466	28D-CLA6000 Rotor Brake
28S	1339512	28S-CLA5000 Rotor Brake Screw(2req.)
31	1277055	31-SSV5500 Bail Arm Screw (2req.)
32	1389467	32-CLA6000 Bail Spring
34	1389468	34-CLA6000 Bail Arm
34C	1389469	34C-CLA6000 Pivot Arm
35	1277059	35-SSV5500 Line Roller
35A	1377606	35A-BTLLI8000LC Line Roller Ball Bearing
35B	1377606	35A-BTLLI8000LC Bearing(2req)
36	1277166	36-SSV7500 Line Roller Screw
36B	1417809	36B-CLA6000 Bail Arm Screw Washer
38	1339517	38-CLA5000 Rotor Nut
38A	1119121	20C-7000AF Screw
38D	1277064	38D-SSV5500 Rotor Washer
39	1389470	39-CLA6000 Main Shaft
39A	1339525	39A-CLA5000 Spool Adjust Washer
40	1339529	40-CLA5000 Main Shaft Bearing Lock Spring
43	1389563	43-CLA6000 O/S Slider
43A	1339536	43A-CLA5000 O/S Slider Guide
43B	1277070	43B-SSV5500 O/S Slider Guide Screw(2req.)
43F	1389567	43F-CLA6000 O/S Slider Guide Shaft
44	1277072	44-SSV5500 Main Shaft Screw(2req.)
45	1389570	45-CLA6000 Body Cover
46	1277074	46-SSV5500 Body Cover Screw (3req.)
46T	1341500	3-SSV7500LC Screw
47	1389584	47-CLA6000 Spool Assembly
47D	1277078	47D-SSV5500 Line Clip
47F	1277080	47F-SSV5500 Line Clip Retainer
47H	1277054	28S-SSV5500 Rotor Brake Screw
47P	1389591	47P-CLA6000 Spool
47S	1339551	47S-CLA5000 Drag Cover
47T	1339552	47T-CLA5000 Drag Cover Screw(3req.)
47U	1418960	47U-SLA3500 Drag Cover Seal
48	1385578	48-CLA3000 Spool Clicker
48B	1385581	48B-CLA3000 Spool Clicker Screw
48D	1385579	48D-CLA3000 Spool Clicker Spacer Ring
49	1259579	49-7000AF Spool Click Spring
49A	1341547	49A-SSV7500LC Spool Clicker Spring Screw
52	1339554	52-CLA5000 Drag Knob Assembly
53S	1339555	53S-CLA5000 Drag Knob Seal
56	1339557	56-CLA5000 Drag Friction Washer (3req.)
57	1339558	57-CLA5000 Keyed Drag Washer (3req.)
95B	1385647	95B-CLA2500 Rotor Nut Locking Plate
98	1277094	98-SSV5500 Clutch/Sleeve Assembly
132	1277096	132-SSV5500 Line Roller Collar
132A	1277097	132A-SSV5500 Line Roller Washer
226	1389597	226-CLA6000 Rear Cover
226A	1385591	226A-CLA3000 Rear Cover Screw
231	1389600	231-CLA6000 O/S Gear
231A	1339566	231A-CLA5000 O/S Gear Bushing
231B	1277100	231B-SSV5500 O/S Gear Screw
231C	1339567	231C-CLA5000 O/S Gear Washer
231E	1339568	231E-CLA5000 Slow O/S Gear
233A	1339570	233A-CLA5000 Handle Cap