


SHIMANO

CURADO MGL S A-RB

CUMGL70XGK

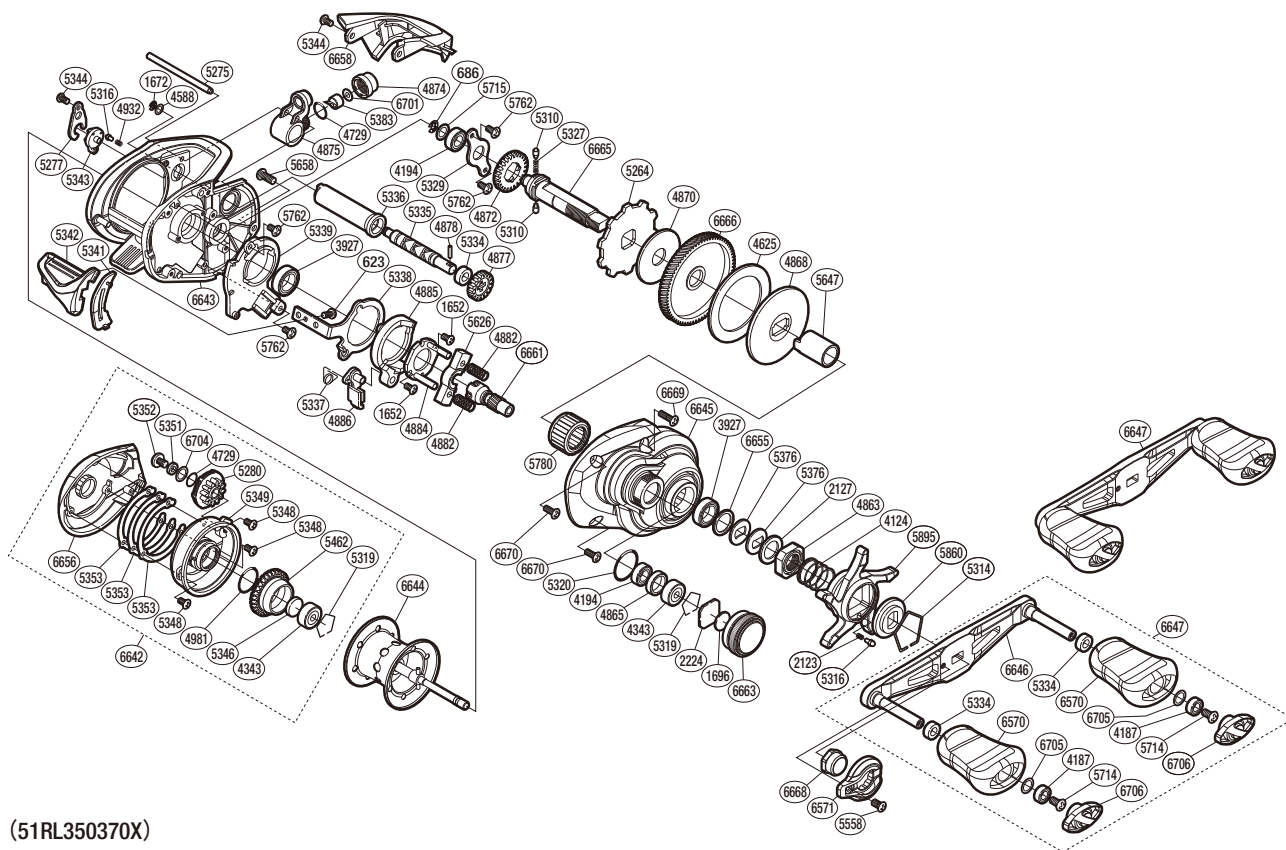

(51RL350370X)

Please note that the number of adjusting washers may not be the same as shown in the exploded views.
(Adjustment will vary with each individual product.)

Part No.	Description	Part No.	Description	Part No.	Description
BNT0623	Screw	BNT5275	Stabilizer Bar	BNT5658	Screw
BNT0686	E Lock	BNT5277	Cam Lever Retainer	BNT5714	Screw
BNT1652	Screw	BNT5280	Brake Dial	BNT5715	Washer
BNT1672	E Lock	BNT5310	Idle Gear Pin	BNT5762	Screw
BNT1696	Cast Control Spacer (B)	BNT5314	Click Plate Retainer	BNT5780	Roller Clutch Bearing
BNT2123	Click Spring	BNT5316	Click Pin	BNT5860	Star Drag Click Plate
BNT2127	Star Drag Spacer	BNT5319	Bearing Retainer	BNT5895	Star Drag
BNT2224	Cast Control Spacer (A)	BNT5320	O Ring	BNT6570	Handle Knob
BNT3927	Ball Bearing	BNT5327	Idle Gear Spring	BNT6571	Handle Nut Plate
BNT4124	Star Drag Spring	BNT5329	Drive Shaft Retainer	BNT6642	Left Side Plate Assembly
BNT4187	Ball Bearing	BNT5334	Bushing	BNT6643	Frame Assembly
BNT4194	Ball Bearing	BNT5335	Worm Shaft	BNT6644	Spool Assembly
BNT4343	Ball Bearing	BNT5336	Level Wind Guard	BNT6645	Right Side Plate Assembly
BNT4588	Washer	BNT5337	Clutch Pawl Spring	BNT6646	Handle Shank Assembly
BNT4625	Drag Washer C	BNT5338	Clutch Plate	BNT6647	Handle Assembly
BNT4729	O Ring	BNT5339	Clutch Guard	BNT6655	Washer
BNT4863	Star Drag Nut	BNT5341	Clutch Bar Guide (B)	BNT6656	Left Side Plate
BNT4865	Bearing Spacer	BNT5342	Clutch Lever	BNT6658	Level Wind Protector
BNT4868	Key Washer	BNT5343	B Side Plate Cam Lever	BNT6661	Pinion Gear
BNT4870	Drag Washer A	BNT5344	Screw	BNT6663	Cast Control Cap
BNT4872	Idle Gear A	BNT5346	Bearing Spacer	BNT6665	Drive Shaft
BNT4874	Pawl Cap	BNT5348	Screw	BNT6666	Drive Gear
BNT4875	Line Guide Assembly	BNT5349	Brake Case	BNT6668	Handle Nut
BNT4877	Idle Gear C	BNT5351	Brake Dial Spacer	BNT6669	Screw
BNT4878	Worm Shaft Pin	BNT5352	Screw	BNT6670	Screw
BNT4882	Yoke Spring	BNT5353	Washer	BNT6701	Washer
BNT4884	Clutch Cam Retainer	BNT5376	Washer	BNT6704	Washer
BNT4885	Clutch Cam	BNT5383	Line Guide Pawl	BNT6705	Washer
BNT4886	Clutch Pawl Assembly	BNT5462	Brake Ring Gear	BNT6706	Handle Knob Seal
BNT4932	Click Spring	BNT5558	Screw		
BNT4981	O Ring	BNT5626	Yoke		
BNT5264	Anti-Reverse Ratchet	BNT5647	Roller Clutch Inner Tube	BNT4692	B-100 Oil (Accessory)