


# SHIMANO

## TIAGRA

### TI-30WLRSA

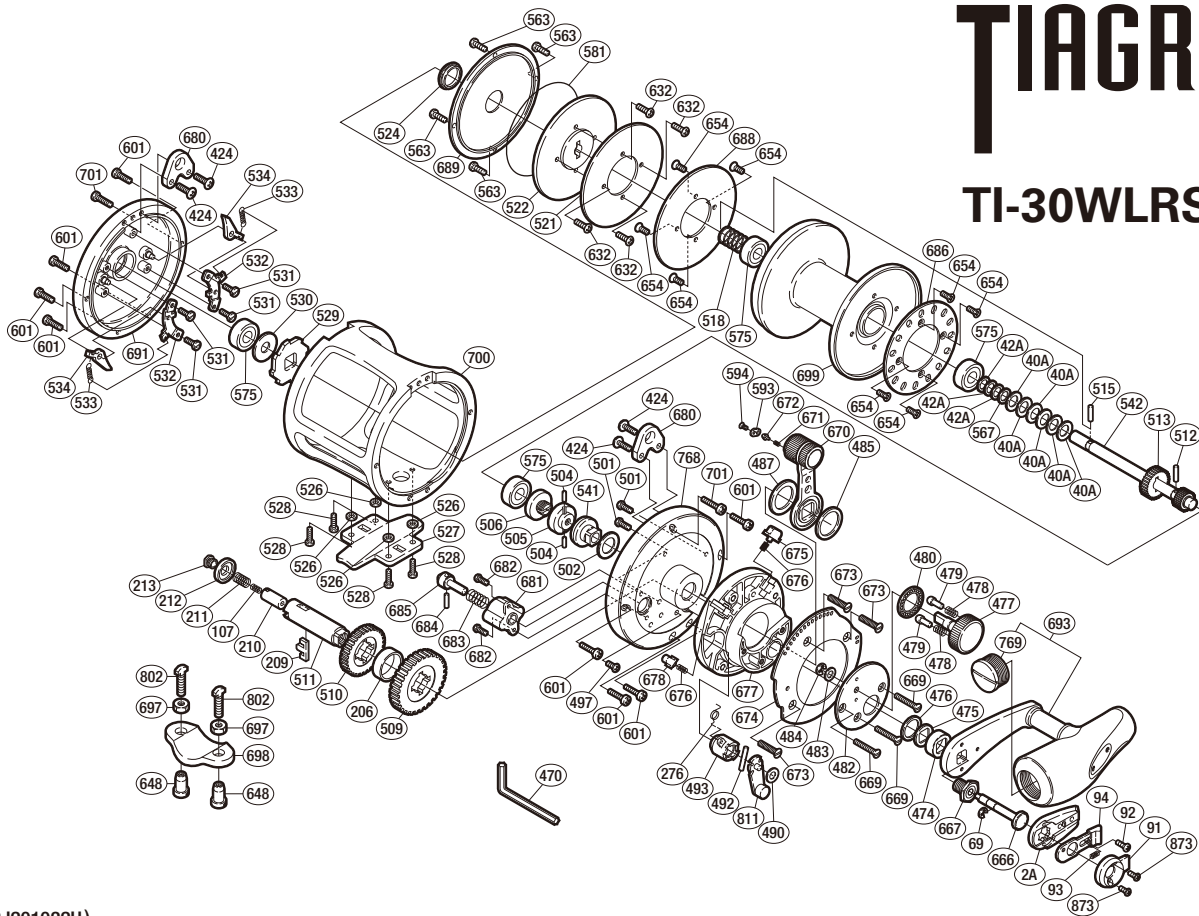

(51RJ201032U)

| #     | Part No. | Description               | #    | Part No. | Description           | #    | Part No. | Description                 |
|-------|----------|---------------------------|------|----------|-----------------------|------|----------|-----------------------------|
| 0002A | 10QUC    | Handle Bolt Plate         | 0504 | 10EWQ    | Pre-Program Key Pin   | 0669 | 10PHV    | Screw                       |
| 0040A | 1052C    | Pre-Load Spring           | 0505 | 1089E    | Pre-Program Key       | 0670 | 108B5    | Drag Control Lever          |
| 0042A | 104L7    | Bearing Thrust Washer     | 0506 | 1088X    | Pre-Program Screw     | 0671 | 104BG    | Lever Click Shoe            |
| 0069  | 105NK    | E Lock                    | 0509 | 10QK6    | Drive Gear A          | 0672 | 10C3T    | Lever Click                 |
| 0091  | 109XD    | Push Button Shield        | 0510 | 109WT    | Drive Gear B          | 0673 | 10PHT    | Screw                       |
| 0092  | 10LZ9    | Screw                     | 0511 | 10D5T    | Drive Shaft           | 0674 | 10C9V    | Lever Quadrant              |
| 0093  | 10PWH    | Slide Plate Spring        | 0512 | 104LD    | Cross Pin A           | 0675 | 10CCJ    | Strike Stop                 |
| 0094  | 109XC    | Slide Plate               | 0513 | 10N9J    | Pinion Gear B         | 0676 | 10BNN    | Pressure Spring             |
| 0107  | 109VM    | Drive Shaft Spring B      | 0515 | 10MCT    | Cross Pin B           | 0677 | 10F3R    | Right Side Plate B          |
| 0206  | 10D61    | Friction Washer C         | 0518 | 10CCV    | Pressure Plate Spring | 0678 | 10BNG    | Free Spool Detent           |
| 0209  | 10KXH    | Gear Select Cross Bar     | 0521 | 10G11    | Drag Washer           | 0680 | 10PYE    | Harness Lug                 |
| 0210  | 10KXL    | Cross Bar Stop            | 0522 | 10EVT    | Pressure Plate        | 0681 | 108CY    | Plunger Holder              |
| 0211  | 10KXQ    | Drive Shaft Spring        | 0524 | 10EW9    | Waterproof Ring       | 0682 | 103HQ    | Screw                       |
| 0212  | 10D5B    | Friction Washer A         | 0526 | 10PSW    | Stand Washer          | 0683 | 10GUU    | Click Spring                |
| 0213  | 10FCD    | Drive Shaft Screw         | 0527 | 10NY8    | Stand                 | 0684 | 10EZP    | Plunger Cross Pin A         |
| 0276  | 10F1S    | Cross Pin Support Spring  | 0528 | 10PV9    | Screw                 | 0685 | 108D8    | Alert Plunger               |
| 0424  | 10LZ5    | Screw                     | 0529 | 10DAH    | Anti-Reverse Ratchet  | 0686 | 1052Q    | Alert Ratchet               |
| 0474  | 10KZQ    | Drive Shaft Shield        | 0530 | 10KNT    | Bearing Spacer        | 0688 | 10G48    | Drag Plate                  |
| 0475  | 107QW    | Drive Shaft Thrust Washer | 0531 | 103E9    | Screw                 | 0689 | 104QV    | Cooling Shield              |
| 0476  | 105UA    | Bearing Spacer            | 0532 | 10KVD    | Set Plate             | 0691 | 107Z7    | Left Side Plate             |
| 0477  | 108H5    | Pre-Program Dial          | 0533 | 10CBU    | Dog Spring            | 0693 | 102UL    | Handle Assembly             |
| 0478  | 10K06    | Friction Shoe Spring      | 0534 | 10PKF    | Dog                   | 0699 | 10EME    | Spool                       |
| 0479  | 1035W    | Dial Click Shoe           | 0541 | 10CC4    | Lever Shaft Body      | 0700 | 1059J    | One-Piece Frame             |
| 0480  | 10J1W    | Dial Click                | 0542 | 10HYH    | Pinion Shaft          | 0701 | 10BC4    | Screw                       |
| 0482  | 10BHM    | Lever Hub Cover           | 0563 | 10LVE    | Screw                 | 0768 | 10BKB    | Right Side Plate A          |
| 0483  | 109RR    | Washer                    | 0567 | 10JDE    | Bearing Thrust Washer | 0769 | 105ZE    | Handle Knob Bushing         |
| 0484  | 105NG    | E Lock                    | 0575 | 10BMH    | Ball Bearing          | 0811 | 108FY    | Strike Alert Lever          |
| 0485  | 109RQ    | Lever Thrust Ring         | 0581 | 10EYZ    | O Ring                | 0873 | 10PHP    | Screw                       |
| 0487  | 109RP    | Lever Thrust Ring         | 0593 | 10C3Y    | Lever Click Cover     |      |          |                             |
| 0490  | 1059Y    | Spacer                    | 0594 | 10MGG    | Screw                 | 0648 | 10JC7    | Rod Clamp Nut A (Accessory) |
| 0492  | 10EZS    | Plunger Cross Pin B       | 0601 | 10PRP    | Screw                 | 0697 | 105N9    | Rod Clamp Nut B (Accessory) |
| 0493  | 10EZM    | Plunger Cross Pin Support | 0632 | 10MT4    | Screw                 | 0698 | 10J9U    | Rod Clamp (Accessory)       |
| 0497  | 103H4    | Screw                     | 0654 | 10ML5    | Screw                 | 0802 | 10JBT    | Rod Clamp Bolt (Accessory)  |
| 0501  | 103J1    | Screw                     | 0666 | 109X9    | Push Low Button Shaft |      |          |                             |
| 0502  | 10EZF    | Washer                    | 0667 | 106XN    | Handle Bolt           | 0470 | 10MJ4    | Wrench (Accessory)          |

Please note that the number of adjusting washers may not be the same as shown in the exploded views.  
(Adjustment will vary with each individual product.)

(230303)\_002