


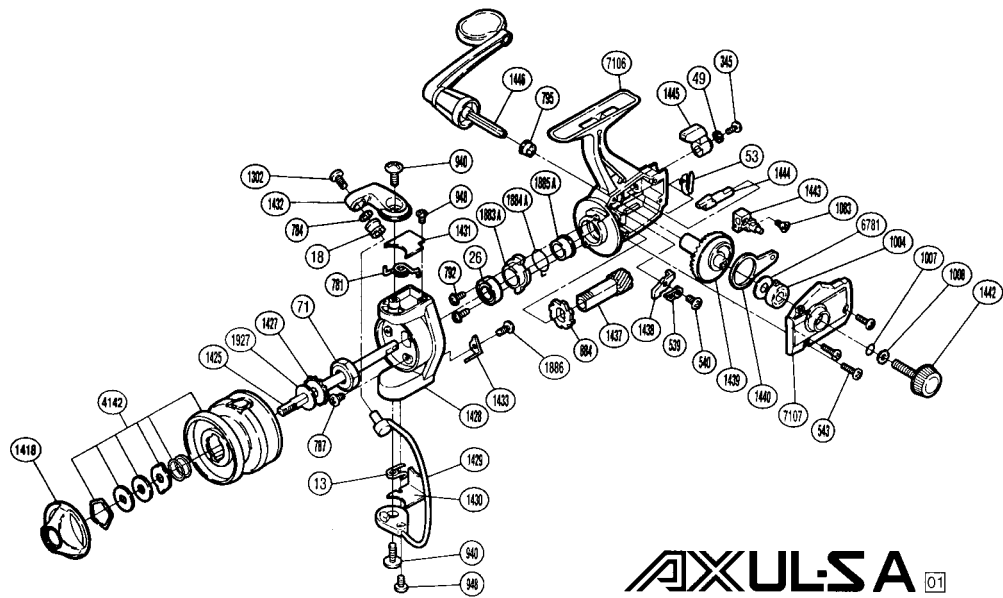

RD No.	PARTS NAMES	RD No.	PARTS NAMES	RD No.	PARTS NAMES
0013	Lever Spring	0948	Bail Trip Cover Screw	1439	Drive Gear
0018	Line Roller	1004	Bushing (A)	1440	Oscillating Arm
0026	Ball Bearing	1007	Lock Washer Retainer	1442	Handle Screw Cap
0049	Lock Washer	1008	Handle Lock Washer	1443	Oscillating Block
0053	Anti-Reverse Cam Spring	1083	Slider Retainer Screw	1444	Anti-Reverse Cam
0071	Rotor Nut	1302	Line Roller Screw	1445	Anti-Reverse Lever
0345	Anti-Reverse Lever Screw	1418	Drag Knob	1446	Handle Assembly
0539	Anti-Reverse Pawl Spring	1425	Main Shaft	1883A	Anti-Reverse Lock Out
0540	Anti-Reverse Pawl Screw	1427	Spool Support	1884A	Anti-Reverse Lock Out Spring
0543	Side Cover Screw	1428	Rotor	1885A	Pinion Spacer
0781	Bail Spring	1429	Bail Assembly	1886	Bail Trip Lever Screw
0784	Line Roller Washer	1430	Bail Trip Cover	1927	Spool Washer
0787	Nut Lock Screw	1431	Bail Spring Cover	4142	Spool Assembly
0792	Bearing Retainer Screw	1432	Bail Arm	6781	Drive Gear Washer
0795	Bushing (B)	1433	Bail Trip Lever	7106	Body
0884	Anti-Reverse Ratchet	1437	Pinion Gear	7107	Side Cover
0940	Bail Trip Cam Screw	1438	Anti-Reverse Pawl		