


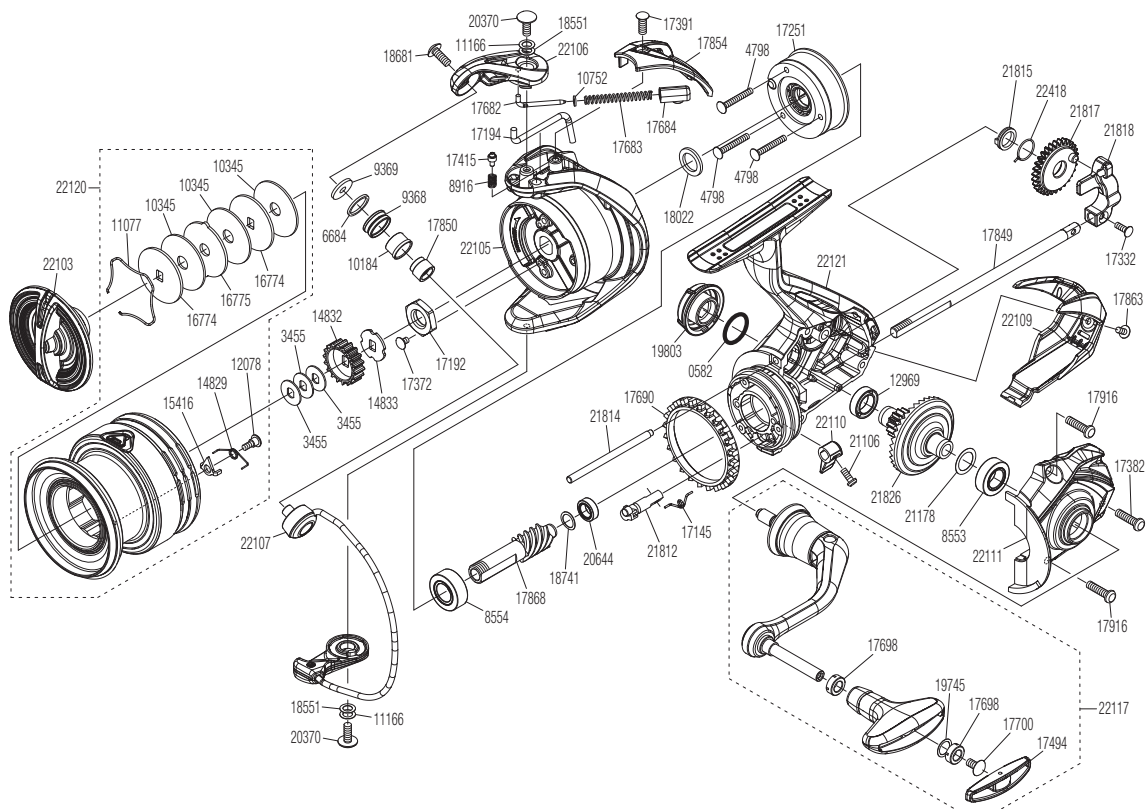

Please note that the number of adjusting washers may not always be the same as shown in the exploded views.
Please note that your actions take full responsibility when you take it apart.

(51SF579E36X)

#	Part No.	Description	#	Part No.	Description	#	Part No.	Description
0582	108WH	O Ring	17382	10L6J	Screw	21815	10TBH	Bushing
3455	10BXN	Spool Washer	17391	10LFK	Screw	21817	100QJ	Oscillating Gear
4798	103C6	Screw	17415	106ZC	Click Pin	21818	100KG	Oscillating Slider
6684	10KFD	Spacer	17494	10R3A	Handle Knob Seal	21826	100QB	Drive Gear
8553	107AT	Ball Bearing	17682	1061L	Bail Spring Guide A	22103	10T6H	Drag Knob Assembly
8554	107FE	Ball Bearing	17683	105R6	Bail Spring	22105	10T6S	Rotor
8916	10CH0	Click Spring	17684	107AB	Bail Spring Guide B	22106	100FJ	Bail Arm
9368	10JLF	Line Roller	17690	104FV	Friction Ring	22107	100T2	Bail Assembly
9369	10PFP	Washer	17698	10PXZ	Bushing	22109	100PN	Rear Protector
10184	10PFH	Bushing	17700	10LFA	Screw	22110	100HA	Anti Reverse Lever
10345	10N5A	Drag Washer	17849	10DMK	Main Shaft	22111	10T6N	Side Cover
10752	10TYE	Bail Spring Guide A Collar	17850	1020X	Collar	22117	100FQ	Handle Assembly
11077	10MZX	Retainer	17854	10DNX	Bail Spring Cover	22120	10T60	Spool Assembly
11166	10KFA	Washer	17863	10LCS	Screw	22121	10T81	Body Assembly
12078	10PH4	Screw	17868	10DMH	Pinion Gear	22418	10RPB	Bushing Spring
12969	107FA	Ball Bearing	17916	10L6K	Screw			
14829	10PH3	Drag Click Spring	18022	10JVH	Washer			
14832	103MU	Spool Support A	18551	10K96	Washer			
14833	10J04	Spool Support B	18681	10PMH	Screw			
15416	1038H	Drag Click	18741	10SYU	Washer			
16774	10BCE	Key Washer	19745	104FH	Washer			
16775	102ZD	Eared Washer	19803	10RSK	Handle Screw Cap			
17145	105B4	Anti Reverse Cam Spring	20370	103DA	Screw			
17192	1067Y	Rotor Nut	20644	10RKR	Ball Bearing			
17194	106P2	Bail Trip Lever	21106	103NA	Screw			
17251	10QPN	Roller Clutch Assembly	21178	10EEZ	Washer			
17332	10R1P	Screw	21812	10TB2	Anti Reverse Cam			
17372	10LCE	Screw	21814	10TBF	Oscillating Guide			