


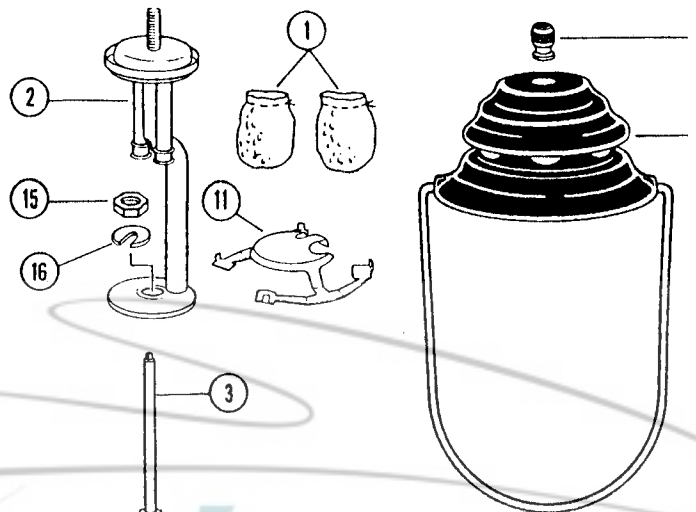

# Model/Modèl/Modelo 282, 285 & 295


## Parts List

No.	295-700T	285-700T	282-700T	Description
1	#21	#21	#21	Mantle
2	290B5341	288B5341	282-5341	Burner Assembly
3	295-5891	285-5891	285-5891	Generator
4	690A048	214A0461	214A0461	Globe
5	220-4411	220-4411	220-4411	Ball Nut
6	220C1401	220C1401	220C1401	Fuel Cap
7	220A6201	220A6201	220A6201	Pump Repair Kit
8	295-6571	285-6571	282-6571	Valve Assembly (Includes Item #10)
9	290A5101	285-5101	285-5101	Ventilator & Bail
10	288C1501	288C1501	288C1501	Knob/Screw Package
11	290A5401	288A5401	286-5401	Heat Shield & Frame Bottom
12	295-5151	285-5151	282-5111	Fount Assembly
13	639-1091	639-1091	639-1091	Pump Cup & Nut
14	295-5291	282-529R	282-529R	Collar
15	295-1641	295-1641	295-1641	Nut
16	288-1251	288-1251	288-1251	U-Clip



## Nomenclature

N°	295-700T	285-700T	282-700T	Désignation
1	#21	#21	#21	Manchon
2	290B5341	288B5341	282-5341	Ensemble du brûleur
3	295-5891	285-5891	285-5891	Générateur
4	690A048	214A0461	214A0461	Globe
5	220-4411	220-4411	220-4411	Écrou sphérique
6	220C1401	220C1401	220C1401	Bouchon du réservoir
7	220A6201	220A6201	220A6201	Ens. de réparation de la pompe
8	295-6571	285-6571	282-6571	Ens. de la soupape (comprend art. 10)
9	290A5101	285-5101	285-5101	Ventilateur et anse
10	288C1501	288C1501	288C1501	Paquet boulon et vis
11	290A5401	288A5401	286-5401	Pare-chaleur et fond du bâti
12	295-5151	285-5151	282-5111	Ensemble du réservoir
13	639-1091	639-1091	639-1091	Godet de la pompe et écrou
14	295-5291	282-529R	282-529R	Collier
15	295-1641	295-1641	295-1641	Écrou
16	288-1251	288-1251	288-1251	Pince en <<U>>

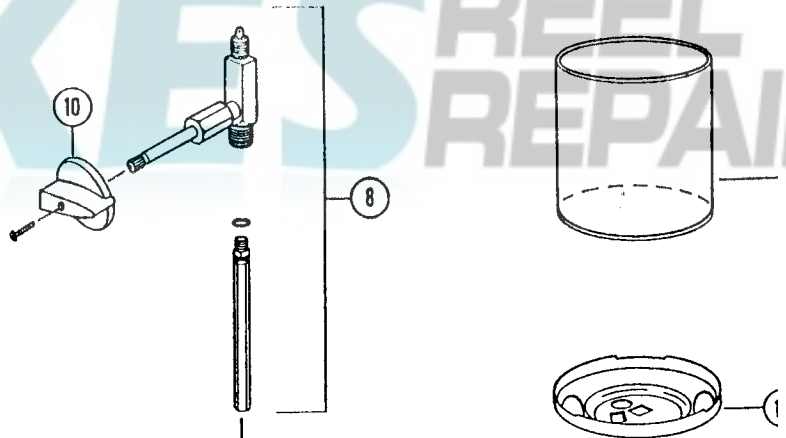

## Lista de piezas

No.	295-700T	285-700T	282-700T	Descripción
1	#21	#21	#21	Mantilla
2	290B5341	288B5341	282-5341	Conjunto de quemador
3	295-5891	285-5891	285-5891	Generador
4	690A048	214A0461	214A0461	Globo
5	220-4411	220-4411	220-4411	Tuerca
6	220C1401	220C1401	220C1401	Tapa de combustible
7	220A6201	220A6201	220A6201	Juego de reparación de la bomba
8	295-6571	285-6571	282-6571	Conjunto de válvula (Incluye artículo #10)
9	290A5101	285-5101	285-5101	Ventilador y manija de transporte
10	288C1501	288C1501	288C1501	Paquete de porilla y tornillos
11	290A5401	288A5401	286-5401	Protector contra el calor y base del armazón
12	295-5151	285-5151	282-5111	Conjunto de fuente
13	639-1091	639-1091	639-1091	Cubierta y tuerca de la bomba
14	295-5291	282-529R	282-529R	Collarín
15	295-1641	295-1641	295-1641	Tuerca
16	288-1251	288-1251	288-1251	Presilla en U

