



In the U.S.A., replacement parts may be ordered directly from MINN KOTA Parts Dept., JWA North America, 1531 E. Madison Avenue, Mankato, Minnesota 56001. In Canada, parts may be ordered from any of the Canadian Authorized Service Centers shown on the enclosed list. Be sure to provide the MODEL and SERIAL numbers of your motor when ordering parts. Please use the correct part numbers from the parts list. Payment for any parts ordered from the MINN KOTA parts department, may be by cash, personal check, Discover Card MasterCard, VISA, or UPS C.O.D. To order, call 1-800-227-6433 or FAX 1-800-527-4464.

Hors de l'Amérique du Nord, veuillez vous reporter à la liste ci-jointe pour le centre de service Minn Kota agréé le plus proche. N'oubliez pas de fournir les numéros de modèle et de série de votre moteur lorsque vous commandez des pièces. Utilisez toujours le numéro de pièce correct selon la liste des pièces.

Fora da América do Norte, queira referir-se à lista anexa para identificar o Centro de Serviço Autorizado da MINN KOTA. Não deixe de incluir os números do modelo e de série do seu motor ao pedir peças. Sempre use os números de peça corretos da lista de peças.

1	403-022	Front End Bell W/Potted Speed Coil	29	201-1375	Clamp Screw (2 req'd)
2	406-402	Brush Plate Assembly	30	201-1710	Clamp Washer (2 req'd)
3	406-081	Brush Spring (2 req'd)	31	201-3010	Retaining Ring (2 req'd)
4	406-072	Brush Assembly (2 req'd)	32	203-3602	T-Bar
5	406-341	Brush Plate Screw (2 req'd)	33	201-2700	T-Bar Spring
6	403-050	Thrust Disc	34	201-3000	E-Ring
7	403-010	Ball	35	201-0111	Tilt Knob
8	406-090	Brush Holder	36	203-1831	Hinge
9	403-207	Armature Assembly	37	201-1385	Tension Screw
10	405-300	E-Ring	38	203-2800	Tension Block
11	406-170	Thrust Washer-Steel	39	203-7300	Bushing-Hinge (2 req'd)
12	405-171	Thrust Washer-Nylon	40	203-3400	Screw 1-3/4"
13	406-480	Gasket	41	201-3110	Hex Nut
14	403-255	Center Section w/magnets	42	203-1520	Collar
14A	200-6607	Motor Decal- RED MK (2 req'd)	43	201-1365	Screw-Collar
15	406-460	O-Ring	44	206-2542	Control Box
16	406-032	Rear End Bell	46	206-0251	Control Box Cover
16A	406-600	Flange Bearing (Service Centers Only)	47	203-5605	Decal-Cover 35
17	406-461	Seal	47	206-5686	Decal-Cover 65
18	406-471	Seal (cup)	48	203-4020	Switch (4 speed) 35
19	401-462	O-Ring Thru Bolt (2 req'd)	48	206-4020	Switch (5 speed) 65
20	403-354	Thru Bolt (2 req'd)	49	202-0310	Connecting Wire
21	209-2600	Drive Pin	50	201-2100	Screw 5/8" (6 req'd)
22	206-1121	Propeller	51	201-0030	Bearing Handle Cap
23	205-1700	Lock Washer	52	201-0000	Handle Bearing - Inner
24	205-3100	Prop Nut	53	201-0011	Handle Bearing - Outer
25	203-9070	Motor Assembly Complete (30")	54	203-0995	Handle Assembly (4 speed) 35
26	203-2051	Tube (30")	54	203-0992	Handle Assembly (5 speed) 65
27	299-1800	Hinge & Bracket Assembly (includes #27A, 28, 32-39)	55	205-0600	Leadwire (Includes Battery Clips)
27A	277-1907	Bracket Assembly (includes #27B, 29-31)	56	201-0700	Battery Clips (2 req'd)
*27B	203-1910	Bracket (Order #27A)		403-246	Replacement Speed Coil 35
28	201-0511	Hinge Pin		403-245	Replacement Speed Coil 65

\* This item is part of an assembly. This item cannot be sold separately due to machining and /or assembly that is required.

\* Cet article fait partie d'un ensemble. Cet article ne peut être acheté seul à cause de l'usinage de l'assemblage nécessaire.

\* Este item faz parte de um conjunto. Este item não pode ser vendido separadamente devido à usinagem ou montagem exigida.

35, 65

35, 65

