



# Model/Modèle/Modelo 413H & 425F

## Parts List

No.	413H750T	413H499T	425F750T	425F499T	Description
1	220C1401	220C1401	220C1401	220C1401	Fuel Cap
2	220A6201	220A6201	220A6201	220A6201	Pump Repair Kit
3	426-6561	426-6561	412-6561	412-6561	Valve
4	426-5621	426-5621	412-5621	412-5621	Generator
5	413-3631	413D3461	413-3631	413D3461	Auxiliary Burner
6	R413-149T	R413-149T	R413-149T	R413-149T	Valve Knob
7	413-3621	425A3451	413-3621	425A3451	Master Burner
8	413-5381	413A5281	425-5381	425A5281	Manifold Assembly
9	414-3151	414-3151	424-3151	424-3151	Grate
10	413-5601	413-5601	425B1651	425B1651	Tank
11	639-1091	639-1091	639-1091	639-1091	Pump Cup & Clip
12	413B4971	413B4971	413B4971	413B4971	Wind Baffle Clips
13	413-2201	N/A	413-2201	N/A	Igniter Assembly
14	413-1481	N/A	413-1481	N/A	Igniter Knob
15	200-6381	200-6381	200-6381	200-6381	Check Valve & Stem Assy.

## Nomenclature

N°.	413H750T	413H499T	425F750T	425F499T	Désignation
1	220C1401	220C1401	220C1401	220C1401	Bouchon du réservoir
2	220A6201	220A6201	220A6201	220A6201	Ens. de réparation de la pompe
3	426-6561	426-6561	412-6561	412-6561	Soupape
4	426-5621	426-5621	412-5621	412-5621	Générateur
5	413-3631	413D3461	413-3631	413D3461	Brûleur auxiliaire
6	R413-149T	R413-149T	R413-149T	R413-149T	Bouton
7	413-3621	425A3451	413-3621	425A3451	Brûleur principal
8	413-5381	413A5281	425-5381	425A5281	Ens. du distributeur
9	414-3151	414-3151	424-3151	424-3151	Grille porte-plats
10	413-5601	413-5601	425B1651	425B1651	Réservoir
11	639-1091	639-1091	639-1091	639-1091	Godet et pince
12	413B4971	413B4971	413B4971	413B4971	Pinces de pare-vent
13	413-2201	N/A	413-2201	N/A	Ens. de l'allumeur
14	413-1481	N/A	413-1481	N/A	Bouton de l'allumeur
15	200-6381	200-6381	200-6381	200-6381	Ens. tige et soupape

## Lista de Partes

NO.	413H750T	413H499T	425F750T	425F499T	Descripción
1	220C1401	220C1401	220C1401	220C1401	Tapa de combustible
2	220A6201	220A6201	220A6201	220A6201	Equipo para arreglar la bomba
3	426-6561	426-6561	412-6561	412-6561	Válvula
4	426-5621	426-5621	412-5621	412-5621	Generador
5	413-3631	413D3461	413-3631	413D3461	Quemador auxiliar
6	R413-149T	R413-149T	R413-149T	R413-149T	Perilla
7	413-3621	425A3451	413-3621	425A3451	Quemador principal
8	413-5381	413A5281	425-5381	425A5281	Ensamblaje del colector
9	414-3151	414-3151	424-3151	424-3151	Rejilla
10	413-5601	413-5601	425B1651	425B1651	Tanque
11	639-1091	639-1091	639-1091	639-1091	Taza de bomba y tuerca
12	413B4971	413B4971	413B4971	413B4971	Presillas de los deflectores
13	413-2201	N/A	413-2201	N/A	Ensamblaje del encendedor
14	413-1481	N/A	413-1481	N/A	Perilla del encendedor
15	200-6381	200-6381	200-6381	200-6381	Válvula de retención

