



<u>KEY NO.</u>	<u>PART NO.</u>	<u>DESCRIPTION</u>
1	001 706	Housing w/Bushing
4	004 704	Dog
5	005 704	Dog Spring
6	006 060	Drag Washer Brake Lining (2 req.)
6A	006A704	Eccentric
6B	006B700Z	Eccentric Liner
6D	006D710	Eccentric Spring
8	008 704	Main Gear w/Ratchet
10	010 704	Ratchet
12	012 704	Main Gear Thrust Washer
14	014 710	Crosswind Roller
15	015 706	Handle Assembly (Complete)
17	017 710	Handle Washer
19	019 704	Pinion Gear
20	020 704	Pinion Bearing
21	021 109	Eccentric Lever
21A	021 706	Bearing Retainer
22	022 109	Eccentric Screw
26	026 706	Roller Shaft
27	027 706	Rotor Cup
31	031 019	Bearing Cover Screw (3 req.)
35	035 706	Line Roller
35A	035A 706	Roller Bearing
36	036 706	Bail Lock Nut
37	037 706	Rotor Cup Washer
38	038 704	Rotor Cup Nut
39	039 704	Spool Shaft Assembly
43	043 704	Crosswind Arm
44	044 704	Crosswind Screw
45	045 706	Housing Plate
46A	046A704	Retaining Screw (3 req.)
47	047 706	Spool Assembly (Complete)
48	048 450	Click Tongue
48A	048A750	Click Tongue Washer
49	049 710	Click Spring
50	022 750	Click Screw
51	051 704	Retaining Spring
52	052 750	Drag Knob
55	055 320	Gear Bearing
56T	056T704	Drag Washer (Teflon)
57A	057A750	Metal Washer (2 req.)
58	058 704	Metal Washer (Octagon) (2 req.)
60	060 710	Rear Drag Washer (Teflon)
103	103 706	Bearing Cap
132	132 706	Roller Washer