



KEY NO.	DESCRIPTION	PART NO.
1	SPACE WASHER	1195751
2	O-RING	1195755
3	BEARING SLEEVE	1195758
4	BUSHING	1279159
5	SEAL	1195761
6	SPOOL SHAFT WASHER	1195763
7	SPOOL SHAFT	1221451
8	SCREW	1195642
9	SCREW (2 REQ)	1221453
10	WASHER(2 REQ)	1252583
11	BAIL ARM	1279322
12	BALL BEARING	1195641
13	LINE ROLLER	1195620
14	POM BUSHING	1279234
15	BRASS BUSHING	1279238
16	O-RING	1195591
17	CLIP	1195592
18	BAIL HOLDER	1279326
19	BAIL WIRE	1221459
20	SCREW	1221460
21	NUT LOCKING PLATE	1195770
22	ROTOR NUT	1195643
23	SCREW (2 REQ)	1221462
24	BAIL ARM COVER	1279278
25	PIVOT LEVER	1195617
26	BAIL SPRING BUSHING	1195619
27	BAIL SPRING	1195613
28	BAIL TRIP BAR	1221466
29	BUSHING (2 REQ)	1221467
30	ROTOR	1279283
31	BAIL HOLDER COVER	1279286
32	ROTOR BRAKE LINKAGE	1221474
33	ROTOR BRAKE SPRING	1221475
34	ROTOR BRAKE PAD	1221476
35	SCREW (3 REQ)	1221477
36	BEARING HOLDER COVER	1221479
37	BALL BEARING (4 REQ)	1181780
38	BALL BEARING	1195573
39	CLUTCH SPRING	1221480
40	CLUTCH ASSEMBLY	1195773

KEY NO.	DESCRIPTION	PART NO.
41	PINION	1195567
42	HANDLE SCREW COVER	1279337
43	SCREW (6 REQ)	1221489
44	BEARING RETAINER (2 REQ)	1279288
45	SCREW	1195720
46	OSCILLATION MOUNT	1279291
47	IDLER GEAR	1195767
48	SCREW	1221496
49	GEAR BOX	1279294
50	SCREW (2 REQ)	1221499
51	SWITCH SPRING	1221500
52	SWITCH LEVER	1221501
53	IAR SWITCH	1279346
54	CLIP	1221504
55	STEM	1279299
56	GUIDE BAR	1221428
57	MAIN GEAR	1221510
58	SHIM	1195560
59	HANDLE ASSEMBLY	1279304
60	BALL BEARING	1195641
61	OSCILLATION GEAR	1195801
62	POM BUSHING	1279234
63	BRASS BUSHING	1279238
64	SCREW	1195659
65	SCREW	1195812
66	OSCILLATION SLIDER	1195651
67	DRAG KNOB	1279355
68	SPOOL	1279309
69	LINE CLIP SPRING	1195693
70	LINE CLIP	1279359
71	KEYED WASHER (2 REQ)	1221545
73	DRAG WASHER 2 (2 REQ)	1221548
74	SPOOL WASHER	1221550
75	O-RING	1221553
76	SPOOL CLICK RETAINER	1221554
77	SPOOL CLICK	1221555
78	SPOOL BOTTOM	1221557
79	SPOOL ASSEMBLY	1279314
80	SPARE SPOOL (Not Shown)	1279319