



KEY NO.	DESCRIPTION	PART NO.	KEY NO.	DESCRIPTION	PART NO.
		INSHORE 40			INSHORE 40
1	SPACE WASHER	1195751	41	PINION	1260219
2	O-RING	1195755	42	HANDLE SCREW COVER	1279337
3	BEARING SLEEVE	1195758	43	SCREW (6 REQ)	1221489
4	BUSHING	1279159	44	BEARING RETAINER (2 REQ)	1279339
5	SEAL	1195761	45	SCREW	1195720
6	SPOOL SHAFT WASHER	1195763	46	OSCILLATION MOUNT	1279342
7	SPOOL SHAFT	1260209	47	IDLER GEAR	1195767
8	SCREW	1195642	48	SCREW	1221496
9	SCREW (2 REQ)	1221453	49	GEAR BOX	1279345
10	WASHER (2 REQ)	1252583	50	SCREW (2 REQ)	1221499
11	BAIL ARM	1279322	51	SWITCH SPRING	1221500
12	BALL BEARING	1195641	52	SWITCH LEVER	1221501
13	LINE ROLLER	1195620	53	IAR SWITCH	1279346
14	POM BUSHING	1279234	54	CLIP	1221504
15	BRASS BUSHING	1279238	55	STEM	1279349
16	O-RING	1195591	56	GUIDE BAR (2 REQ)	1260233
17	CLIP	1195592	57	MAIN GEAR	1221510
18	BAIL HOLDER	1279326	58	SHIM	1195560
19	BAIL WIRE	1260211	59	HANDLE ASSEMBLY	1279352
20	SCREW	1221460	60	BALL BEARING	1195757
21	NUT LOCKING PLATE	1195770	61	OSCILLATION GEAR	1195805
22	ROTOR NUT	1195643	62	POM BUSHING	1279234
23	SCREW (2 REQ)	1221462	63	BRASS BUSHING	1279238
24	BAIL ARM COVER	1279330	64	SCREW	1195659
25	PIVOT LEVER	1195617	65	SCREW	1195812
26	BAIL SPRING BUSHING	1195619	66	OSCILLATION SLIDER	1260236
27	BAIL SPRING	1195613	67	DRAG KNOB	1279355
28	BAIL TRIP BAR	1260214	68	SPOOL	1279358
29	BUSHING (2 REQ)	1221467	69	LINE CLIP SPRING	1195693
30	ROTOR	1279333	70	LINE CLIP	1279359
31	BAIL HOLDER COVER	1279336	71	KEYED WASHER (3 REQ)	1195739
32	ROTOR BRAKE LINKAGE	1260221	73	DRAG WASHER 2 (4 REQ)	1195729
33	ROTOR BRAKE SPRING	1221475	74	SPOOL WASHER 1	1260241
34	ROTOR BRAKE PAD	1221476	75	SPOOL WASHER 2	1260245
35	SCREW (3 REQ)	1221477	76	O-RING	1260243
36	BEARING HOLDER COVER	1260222	77	SPOOL CLICK RETAINER	1221554
37	BALL BEARING (4 REQ)	1181780	78	SPOOL CLICK	1221555
38	BEARING HOLDER	1252605	79	SPOOL BOTTOM	1260244
39	CLUTCH SPRING	1221480	80	CLIP	1251981
40	CLUTCH ASSEMBLY	1195773	81	SPOOL ASSEMBLY	1279363
			82	SPARE SPOOL (Not Shown)	1279366