



KEY NO.	DESCRIPTION	PART NO.
1	SPACE WASHER	1195751
2	O-RING	1195755
3	BEARING SLEEVE	1195758
4	BUSHING	1279159
5	SEAL	1195761
6	SPOOL SHAFT WASHER	1195763
7	SPOOL SHAFT	1260209
8	SCREW	1195642
9	SCREW (2 REQ)	1221453
10	WASHER(2 REQ)	1252583
11	BAIL ARM	1279322
12	BALL BEARING	1195641
13	LINE ROLLER	1195620
14	POM BUSHING	1279234
15	BRASS BUSHING	1279238
16	O-RING	1195591
17	CLIP	1195592
18	BAIL HOLDER	1279326
19	BAIL WIRE	1260211
20	SCREW	1221460
21	NUT LOCKING PLATE	1195770
22	ROTOR NUT	1195643
23	SCREW (2 REQ)	1221462
24	BAIL ARM COVER	1279330
25	PIVOT LEVER	1195617
26	BAIL SPRING BUSHING	1195619
27	BAIL SPRING	1195613
28	BAIL TRIP BAR	1260214
29	BUSHING (2 REQ)	1221467
30	ROTOR	1279333
31	BAIL HOLDER COVER	1279336
32	ROTOR BRAKE LINKAGE	1260221
33	ROTOR BRAKE SPRING	1221475
34	ROTOR BRAKE PAD	1221476
35	SCREW (3 REQ)	1221477
36	BEARING HOLDER COVER	1260222
37	BALL BEARING (4 REQ)	1181780
38	BEARING HOLDER	1252605
39	CLUTCH SPRING	1221480
40	CLUTCH ASSEMBLY	1195773

KEY NO.	DESCRIPTION	PART NO.
41	PINION	1260219
42	HANDLE SCREW COVER	1279337
43	SCREW (6 REQ)	1221489
44	BEARING RETAINER (2 REQ)	1279339
45	SCREW	1195720
46	OSCILLATION MOUNT	1279342
47	IDLER GEAR	1195767
48	SCREW	1221496
49	GEAR BOX	1279345
50	SCREW (2 REQ)	1221499
51	SWITCH SPRING	1221500
52	SWITCH LEVER	1221501
53	IAR SWITCH	1279346
54	CLIP	1221504
55	STEM	1279349
56	GUIDE BAR (2 REQ)	1260233
57	MAIN GEAR	1221510
58	SHIM	1195560
59	HANDLE ASSEMBLY	1279352
60	BALL BEARING	1195757
61	OSCILLATION GEAR	1195805
62	POM BUSHING	1279234
63	BRASS BUSHING	1279238
64	SCREW	1195659
65	SCREW	1195812
66	OSCILLATION SLIDER	1260236
67	DRAG KNOB	1279355
68	SPOOL	1279358
69	LINE CLIP SPRING	1195693
70	LINE CLIP	1279359
71	KEYED WASHER (3 REQ)	1195739
73	DRAG WASHER 2 (4 REQ)	1195729
74	SPOOL WASHER1	1260241
75	SPOOL WASHER 2	1260245
76	O-RING	1260243
77	SPOOL CLICK RETAINER	1221554
78	SPOOL CLICK	1221555
79	SPOOL BOTTOM	1260244
80	CLIP	1251981
81	SPOOL ASSEMBLY	1279363
82	SPARE SPOOL (Not Shown)	1279366