



KEY NO.	DESCRIPTION	PART NO.
		S 10
1	SPACE WASHER	1195751
2	O-RING	1195755
3	BEARING SLEEVE	1195758
4	BUSHING	1279159
5	SEAL	1195761
6	SPOOL SHAFT WASHER	1195763
7	SPOOL SHAFT	1252579
8	SCREW	1195642
9	SCREW (2 REQ)	1252582
10	WASHER(2 REQ)	1252583
11	BAIL ARM	1279161
12	BALL BEARING	1252587
13	LINE ROLLER	1279162
14	POM BUSHING	1279163
15	BRASS BUSHING	1279165
16	O-RING	1195591
17	CLIP	1195592
18	BAIL HOLDER	1279168
19	BAIL WIRE	1279169
20	SCREW	1252594
21	ROTOR LOCKING PLATE	1195770
22	ROTOR NUT	1195643
23	SCREW (2 REQ)	1221462
24	BAIL ARM COVER	1279180
25	PIVOT LEVER	1195617
26	BAIL SPRING BUSHING	1195619
27	BAIL SPRING	1252598
28	BAIL TRIP BAR	1252599
29	BUSHING (2 REQ)	1221467
30	ROTOR	1279182
31	BAIL HOLDER COVER	1279187
32	SCREW (3 REQ)	1195572
33	BEARING HOLDER COVER	1252604
34	BALL BEARING (4 REQ)	1181780
35	BEARING HOLDER	1252605
36	CLUTCH ASSEMBLY	1195773
37	CLUTCH SPRING	1252606
38	PINION	1252607
39	SCREW (5 REQ)	1195720
40	ROTOR BRAKE	1252610

KEY NO.	DESCRIPTION	PART NO.
		S 10
41	HANDLE SCREW COVER	1279193
42	SCREW (6 REQ)	1279198
43	BEARING RETAINER(2 REQ)	1279200
44	OSCILLATION MOUNT	1279208
45	IDLER GEAR	1195767
46	SCREW	1221496
47	GEAR BOX	1279216
48	SCREW (2 REQ)	1279218
49	SWITCH SPRING	1221500
50	SWITCH LEVER	1221501
51	IAR SWITCH	1279223
52	CLIP	1221504
53	STEM	1279227
54	GUIDE BAR	1221428
55	MAIN GEAR	1252627
56	SHIM	1195560
57	HANDLE ASSEMBLY	1279232
58	SPACER	1195778
59	POM BUSHING (2 REQ)	1279234
60	BRASS BUSHING	1279239
61	OSCILLATION GEAR	1252634
62	SCREW	1195812
63	OSCILLATION SLIDER	1252635
64	DRAG KNOB	1279245
65	SPOOL	1279249
66	LINE CLIP SPRING	1252661
67	LINE CLIP	1279256
68	KEY WASHER (2 REQ)	1252646
69	SPOOL WASHER	1252647
70	DRAG WASHER 1	1279261
71	DRAG WASHER 2	1252648
72	O-RING	1252649
73	SPOOL CLICK RETAINER	1252650
74	SPOOL CLICK	1252651
75	SPOOL BOTTOM	1252652
76	CLIP	1252653
77	SPOOL ASSEMBLY	1279268
78	SPARE SPOOLASSEMBLY (Not Shown)	1279273