


DIAGRAM

EN 3R

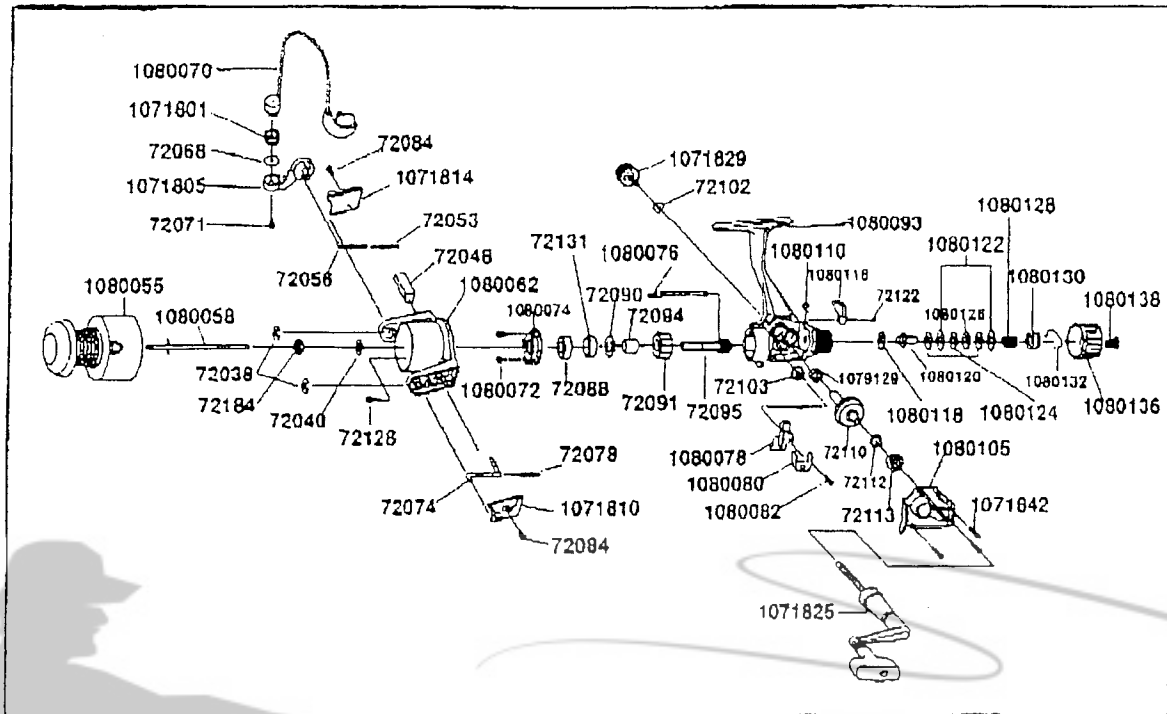

PART LIST

PART NO	PART NAME	PART NO	PART NAME	PART NO	PART NAME
1080055	Spool assy	1080070	Bail assy	1080110	Stopper lever spring
1080058	Main shaft	72071	Bail screw	72102	Handle sc. cap.wshr.
72038	E-Clip	1080072	Bearing plate screw	1071829	Handle sc. cap
72184	Rotor-nut	1080074	Bearing plate	1080116	Stopper lever
72040	Rotor D washer	72088	Ball bearing	72122	Stopper lever sc.
72128	Rotor nut lock screw	72095	Pinion gear	1080118	Drag "E"washer
1080062	Rotor	1080076	Tail shaft	1080120	Metal
72074	Kick lever	72103	O/S gear	1080122	Drag "A"washer
72078	Kick lever spring	1080078	O/S slider	1080124	Drag "B"washer
72084	Kick lever cover screw	1080080	O/S slider retainer	1080126	Drag "O"washer
1071810	Kick lever cover	1080082	O/S slider screw	1080128	Drag spring
72048	Rotor balance	1080093	Body	1080130	Drag nut
72056	Bail spring shaft	1079129	Body ball bearing	1080132	Back claw spring
72053	Bail spring	72110	Drive gear	1080136	Rear drag cap
1071814	Bail spring cover	72112	Adj washer	1080138	Rear drag cap sc.
72084	Bail sp. cvr. sc.	72113	Body cvr. ball bearing	72091	One way clutch
1071805	Arm lever	1080105	Body cover	72094	One way clutch bush
72068	Bail washer	1071842	Body cvr. sc.	72090	Bearing washer
1071801	Line roller Ball bearing	1071825	Handle assy	72131	B/Bearing bush