


DIAGRAM

EN 4R

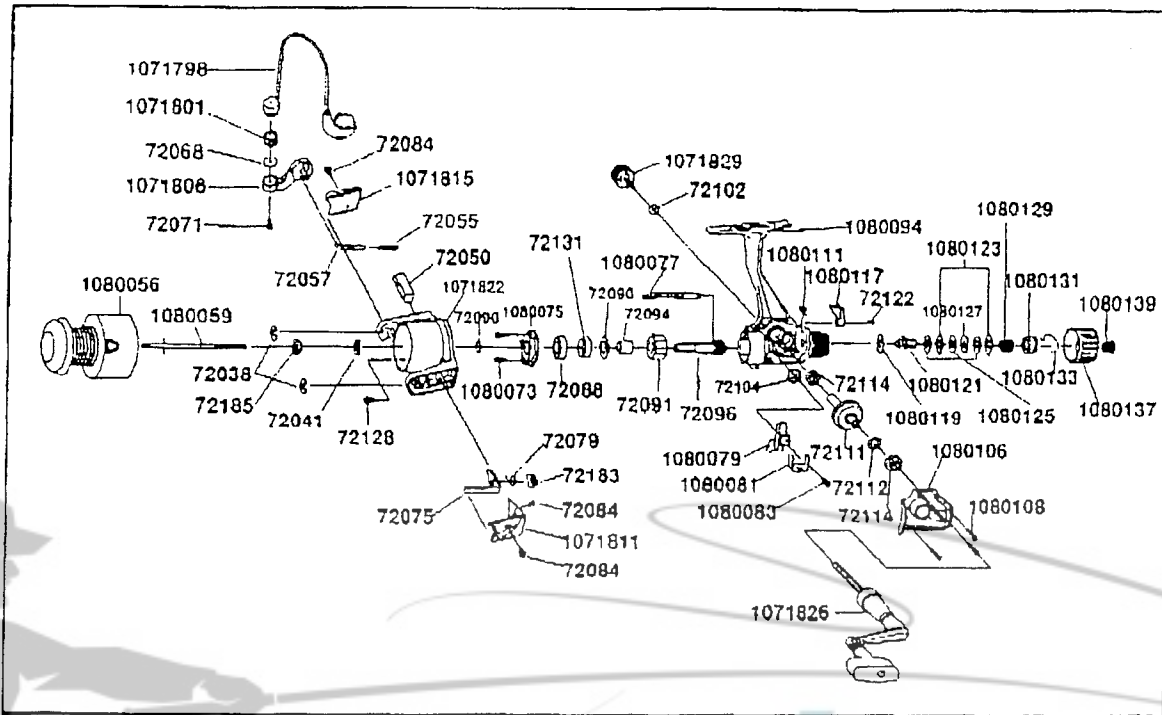

PART LIST

PART NO	PART NAME	PART NO	PART NAME	PART NO	PART NAME
1080056	SPool assy	1071801	Line roller Ball bearing	1080111	Stoper lever spring
1080059	Main shaft	1071798	Bail assy	72102	Handle sc. cap.wshr.
72038	E-Clip	72071	Bail screw	1071829	Handle sc. cap
72185	Roter-nut	1080073	Bearing plate screw	1080117	Stoper lever
72041	Roter D washer	1080075	Bearing plate	72122	Stoper lever sc.
72128	Roter nut lock screw	72088	Ball bearing	1080119	Drag "E"washer
1071822	Roter	72096	Pinion gear	1080121	Metal
72075	Kick lever	1080077	Tail shaft	1080123	Drag "A"washer
72079	Kick lever spring	72104	O/S gear	1080125	Drag "B"washer
72183	Kick lever plate	1080079	O/S slider	1080127	Drag "D"washer
72084	Kick lever screw	1080081	O/S slider retainer	1080129	Drag spring
72084	Kick lever cover screw	1080083	O/S slider screw	1080131	Drag nut
1071811	Kick lever cover	1080094	Body	1080133	Back claw spring
72050	Roter balance	72114	Body ball bearing	1080137	Rear drag cap
72057	Bail spring shaft	72111	Drive gear	1080139	Rear drag cap sc.
72055	Bail spring	72112	Adj washer	72091	One way clutch
1071815	Bail spring cover	72114	Body cvr. ball bearing	72094	One way clutch bush
72084	Bail sp. cvr. sc.	1080106	Body cover	72090	Bearing washer
1071806	Arm lever	1080108	Body cvr. sc.	72131	B/Bearing bush
72068	Bail washer	1071826	Handle assy		