



PARTS LIST OF ORRA2 INS 60

ITEM#	PARTS DESCRIPTION	INS60	ITEM#	PARTS DESCRIPTION	INS60
1	Drag Knob Assembly	1348008	37	Trip Linkage	1252713
2	Spool Assembly	1348009	38	Trip Bushing	1126272
3	Spool	1348010	39	Trip Spring	1348016
4	Line Clip	1252739	40	Bail Arm Cover	1348017
5	Line Clip Washer	1259476	41	Screw	1092845
6	Line Clip Spring	1257275	42	Screw(3req)	1126351
7	Keyed Washer(3req)	1126367	43	Pinion Cover	1348018
8	Eared Washer	1126366	44	Bearing(8X14X4)(4req)	1126394
9	Carbon Washer(4req)	1126368	45	Bearing Holder	1257344
10	Spool Washer	1126369	46	Clutch Assembly	1257345
11	Clicker Holder	1257276	47	Pinion	1348019
12	Spool Clicker	1257277	48	Screw(2req)	1277054
13	Spool Bottom	1257278	49	Rotor Brake	1354339
14	Retaining Clip	1252696	50	Handle Assembly	1348020
15	Spool Shim Thick T=0.5(2req)	1178953	51	Screw(6req)	1252723
16	Main Shaft Sleeve	1257330	52	Body Trim(2req)	1348021
17	Bearing(7X14X4)	1126442	53	C-Clip(2req)	1257351
18	Main Shaft Washer	1257331	54	Shim	1257352
19	Main Shaft	1348011	55	Main Gear	1348022
20	Rotor Set Screw	1126258	56	Screw	1257356
21	Rotor Nut	1257336	57	Bushing	1222202
22	Bushing	1259433	58	Oscillation Gear	1126406
23	Rotor Set Plate	1257337	59	Retainer Pole	1257357
24	Bail Arm Screw(2req)	1126429	60	Washer	1257358
25	Bail Arm	1348012	61	Screw	1257359
26	Bearing(5X8X2.5)(2req)	1112125	62	Oscillation Slider	1257360
27	Washer	1110165	63	Screw	1126275
28	Line Roller	1092773	64	Oscillation Guide	1257363
29	Bail Assembly	1348013	65	Oscillation Guide	1257362
30	Screw(2req)	1188295	66	Body Cover	1348023
31	Bushing(2req)	1188283	67	Body	1348024
32	Bail Holder	1348014	68	Reduction Gear	1224016
33	O-Ring	1252708	69	Oscillation Cover	1348025
34	E-Clip	1252707	70	Dust Cap	1347052
35	Rotor	1348015	71	Screw	1257354
36	Trip Bar	1252712			

**MIKE'S REEL REPAIR**